

STAND FAN

INSTRUCTION MANUAL

Model: RFS-3016R

220V 50Hz 50W

It is important that you read these instructions before using your product and we strongly recommend that you keep them in a safe place for future reference.

FOR HOUSEHOLD USE ONLY

GENERAL SAFETY RULES

1. Use as per the rating voltage.
2. Do not repair or remake the appliance by yourself, it should be repaired by the repairmen.
3. Do not operate the appliance with wet hands, in order to avoid damage.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. When the appliance is not in use, switch it off and unplug it.
6. Do not insert things to air outlets and inlets, in order to avoid damage.
7. Do not use the appliance near explosive and combustible gas.
8. Use the appliance only on a flat surface.
9. Do not use outdoors.
10. Do not turnover the appliance. Unplug the power supply If it is toppled over and there have some water in the body. Dry the body before use.
11. Clean the appearance with a lightly damp cloth. It can clean with neutral detergents. Do not rinse with water.
12. Do not make air outlets and inlets near the wall or curtain.
13. Do not knock or shake the body when use, otherwise it may cause stop.
14. The appliance must not located immediately below a socket outlet. The rating current of socket should exceed 10A.
15. Do not use the appliance in the immediate surrounding of a bath, a shower or a swimming pool.
16. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
17. Children should be supervised to ensure that they do not play with the appliance.

PARTS DESCRIPTION

1. Front grill
2. Fan blade
3. Back grill
4. Upper column (removable)
5. Lower column (removable)
6. Base
7. LED display
8. Control panel

ASSEMBLY

Assembly of base

For Stand fan (Maxium height)

1. Remove all parts from packing,
Set the base on the floor.
2. Insert the lower column into the base
secure them by provided plastic nut.
3. Insert the upper column into the lower column
secure them by turning the upper column clockwise.
4. Insert the fan body into the upper column
secure them by turning the fan body clockwise.

Assembly of blade and Grill

1. Remove the lock nut for blade and the lock nut for back grill

2. Assemble the back grill

Align the back grill and the lock nut for back grill on the motor house, then fasten the lock nut firmly to fix the back grill

3. Assemble the fan blade

Align the hole of blade and the lock nut for blade onto the motor shaft, then fasten the lock nut firmly to fix the blade.

4. Put the limited sheet of front grill into the hole of back grill (positioned on the top of back grill), then hold and press them together, and lock it by screw (positioned on the bottom of back grill)



Height adjustment

The fan supports 2 kind of height (one plastic column=lower height; two plastic column=Maxium height)

Operating instruction

Plug into 220-240V~ 50Hz power socket, the appliance will be in standby mode and the display will indicate the current room temperature.

The appliance can be operated by pressing button on the control panel or by the supplied remote control.

Power

Press the ON/OFF button, the fan will start working; Press it again, the fan will be turned off.

Fan speed

When the fan is working, press the SPEED button to select desired fan speed Low-Medium-High in turn. LED display will indicate the corresponding fan speed.

Timer

This appliance is equipped with a 12 hour timer.

Press TIMER button, it can be set from 1 to 12 hours, the LED display will indicate the corresponding set time, the fan will stop automatically after the set time has expired.

Oscillation

Press OSC button, the appliance will oscillate automatically for wide spread air distribution; press the OSC button again, the appliance will stop oscillation.

Wind Mode (only by remote control)

Press the MODE button on the remote control, you can select 3 wind modes; normal, natural & sleep mode.

Extinguish the display (only by remote control)

Press the LIGHT button on the remote control, it will extinguish the display; Press the button one more time, the display will be on again.

Remote control

You can operate the fan by remote control .

It includes one coin battery, before first use, pull the plastic insulation film out from the backside of remote control

NOTE: the remote control must be pointed towards the receiver on the fan

Please take out the battery for long time no use.

CLEANING AND MAINTENANCE

1. Always unplug the unit before cleaning.

To keep the fan clean, the outer shell may be cleaned with a soft, damp cloth.

After cleaning, dry the unit with a soft cloth.

CAUTION: DO NOT let liquid enter the fan

2. DO NOT use alcohol, gasoline, abrasive powders, furniture polish, or rough brush to clean the fan. This may cause damage or deterioration to the surface of the fan.

3. DO NOT immerse the fan into water.

4. DO NOT use spray cleaner

5. Store the fan in a cool, dry location when not in use. To prevent dust and dirt, use the original package to repack the fan.

DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT



To protect our environment and to recycle the raw materials used as completely as possible, the consumer is asked to return unserviceable equipment to the public collection system for electrical and electronic.

The symbol of the crossed out wheeled bin indicates that this product must be returned to a collection point for electronic waste to feed it by