

**MINIMEX**  
COFFEE MAKER

คู่มือการใช้งาน  
เครื่องชงกาแฟ  
**Minimex**  
รุ่น MDC3



**Instruction Manual**  
**Minimex Coffee Maker**

Model : MDC3  
220V., ~50Hz., 900W.

ไทย / English

## คำแนะนำก่อนใช้งาน

1. ควรอ่านคู่มือเล่นนึ่งอย่างละเอียดก่อนใช้งาน
2. ควรตรวจสอบให้แน่ใจว่า ระบบไฟในบ้าน ได้แก่ ค่าแรงดันไฟ(โวลต์) ตรงกับตัวเครื่องก่อนใช้งาน
3. ระวังอย่าให้สายไฟ หรือเครื่องจุ่มลงในน้ำ เพราะอาจเป็นอันตราย เกิดไฟฟ้าช็อตได้
4. ควรระมัดระวังเมื่อใช้งานเครื่องชงในระยะ หรือพื้นที่ที่มีเด็ก
5. ถอดปลั๊กไฟออกจากเต้าเสียบไฟบ้านทุกครั้งที่ไม่ได้ใช้งาน หรือเมื่อทำความสะอาด ควรปล่อยให้เครื่องเย็นลงก่อนเริ่มทำความสะอาด
6. หากพบว่า ปลั๊กหรือสายไฟมีรอยฉีกขาด หรือแตกหักเสียหาย ควรหยุดใช้งานทันที ติดต่อศูนย์บริการฯ
7. ห้ามใช้อุปกรณ์เครื่องรุ่นอื่น กับเครื่องชงรุ่นนี้ เพราะอาจเป็นสาเหตุให้เกิดอันตรายได้ร้ายแรงได้
8. เครื่องออกแบบให้ใช้งานในที่ร่ม ห้ามใช้ในที่โล่งแจ้ง
9. อย่าปล่อยให้สายไฟรั้งติดกับขอบโต๊ะ หรือสัมผัสกับแหล่งความร้อน
10. ห้ามวางเครื่องบนพื้นที่มีความร้อน หรือใกล้แหล่งความร้อน เพื่อป้องกันความเสียหาย
11. ห้ามใช้เครื่องเพื่อจุดประสงค์อื่น นอกจากการชงกาแฟที่ร้าน
12. ห้ามทำความสะอาดโดยแฉกและตัวเครื่องด้วยแผ่นขัดหรือฝอยขัดหม้อ
13. ควรปิดสวิทช์ Off เพื่อปิดเครื่อง ก่อนการถอดปลั๊กออกจากเต้าเสียบบ้าน
14. ขณะใช้งานเครื่องจะมีไอน้ำกระจายออก ควรใช้ด้วยความระมัดระวัง
15. ขณะเครื่องกำลังทำงานส่วนประกอบต่าง ๆ จะมีความร้อนมาก ควรหยิบจับด้วยความระมัดระวัง
16. ห้ามวางโถกาแฟบนพื้นร้อนจัด หรือเย็นหลังการใช้งาน
17. ห้ามเปิดเครื่องและทำงานโดยไม่มีเติมน้ำดื่ม
18. หากพบว่าโถมีรอยแตกร้าว หรือมือจับหลวม ควรหยุดใช้งานทันที
19. ระวังน้ำร้อนลวก อย่าเลื่อนหรือเปิดฝาทันทีหลังการทำงาน
20. ห้ามใช้ความพยายามในการแกะเครื่องออก เมื่อมีปัญหาควรติดต่อศูนย์บริการฯ
21. โถแก้วถูกออกแบบมาให้ใช้กับเครื่องรุ่นนี้เท่านั้น ห้ามนำไปต้มบนเตาไฟ หรือใช้กับเครื่องรุ่นอื่น
22. ห้ามเด็กอายุต่ำกว่า 8 ขวบใช้งาน รวมถึงผู้พิการ และผู้ขาดความรู้การใช้งานเครื่อง
23. ห้ามเด็กเล่นเครื่อง หรือใช้งาน เพราะอาจเกิดอันตรายได้
24. เครื่องชง MDC3 ถูกออกแบบมาให้ใช้งานภายในบ้าน ในอาคารที่ร่ม
25. ควรเก็บคู่มือเล่มนี้ไว้ เพื่อใช้ศึกษาข้อมูลในอนาคต

## ส่วนประกอบ



- |             |                      |
|-------------|----------------------|
| ① กรอง      | ⑥ แผงควบคุม          |
| ② กรวย      | ⑦ ฐานเครื่อง(อุ่นโถ) |
| ③ ฝาปิดโถ   | ⑧ ฐานกรอง            |
| ④ ด้ามจับโถ | ⑨ ด้ามจับเติ่งน้ำ    |
| ⑤ โถกาแฟ    | ⑩ เติ่งน้ำ           |

## ส่วนประกอบแผงควบคุม



- ① ปุ่ม เปิด/ปิด
- ② PROG ปุ่มตั้งโปรแกรม
- ③ จอไฟ LCD

## ก่อนการใช้งาน

ควรตรวจสอบให้แน่ใจว่า อุปกรณ์ที่บรรจุในกล่องครบถ้วนตามที่ระบุในคู่มือ เทน้ำลงในถังกักจนถึงระดับสูงสุด เอาโอวางบนฐานให้สนิท แล้วเปิดเครื่องให้น้ำร้อนผ่านอุปกรณ์กรวย กรอง และหยดลงในโถแล้วปิดเครื่อง นำโอแก้วเทน้ำทิ้ง ทำเช่นนี้ 2-3 รอบ แล้วถอดอุปกรณ์ต่าง ๆ เช่น โถแก้ว กรวย และกรอง ออกล้างแล้วเช็ดให้แห้ง ประกอบเข้าที่พร้อมใช้งาน

## การชงกาแฟ

1. เปิดฝาครอบแท็งก์แล้วเติมน้ำดื่มสะอาดลงในแท็งก์น้ำจนถึงระดับสูงสุด(MAX)
2. ใส่และประกอบอุปกรณ์เข้ากับเครื่อง ทั้งโถแก้ว กรวย และกรอง
3. ใส่กาแฟในกรอง สันส่วนโดยประมาณ ใช้กาแฟ 45 กรัม หรือตามความชอบ
4. วางโถแก้วลงบนฐานอุ่นโถ
5. เสียบปลั๊กไฟเข้ากับเต้าเสียบไฟบ้าน เครื่องปรากฏเวลา 12.00 ที่จอ LCD
6. กดปุ่ม HOUR เพื่อตั้งเวลาชั่วโมงปัจจุบัน
7. กดปุ่ม MIN เพื่อตั้งเวลาคอนาที่ปัจจุบัน
8. กดปุ่ม ON/OFF เพื่อเริ่มการทำงาน

**หมายเหตุ :** ในขณะที่เครื่องทำงาน คุณสามารถยกโถแก้วออกเพื่อเสิร์ฟกาแฟ  
เครื่องจะหยุดทำงาน(หยุดน้ำ)เป็นเวลา 30 วินาที

9. เมื่อการชงกาแฟเสร็จสิ้น (ประมาณ 1 นาที กาแฟไม่หยุดแล้ว) ท่านสามารถยกโถแก้วออกเสิร์ฟได้

**หมายเหตุ :** ปริมาณน้ำกาแฟจะน้อยกว่าน้ำที่เติมลงในแท็งก์น้ำ เนื่องจากน้ำ  
จำนวนหนึ่งดูดซึมอยู่ในผงกาแฟ

10. เมื่อเสร็จการชงกาแฟ เครื่องมีฐานอุ่น จึงสามารถเก็บความร้อนของกาแฟไว้ได้เป็นเวลา 40 นาที หลังจาก  
นั้นหากไม่มีการใช้งานต่อ เครื่องจะปิดอัตโนมัติ
11. ปิดสวิตซ์และถอดปลั๊กทุกครั้งที่ยกกาแฟเสร็จ

**หมายเหตุ :** กาแฟมีความร้อน โปรดระวังเวลาเทและเสิร์ฟกาแฟ

## การตั้งเวลาทำงาน

ท่านสามารถตั้งเวลาเครื่องชงกาแฟได้ โดยทำตามวิธีดังต่อไปนี้ (โปรดเตรียมขั้นตอนการชงกาแฟข้อ 1-5 ก่อน)

1. ตั้งเวลาปัจจุบัน (ตามข้อ 6-7 ในการชงกาแฟ)

**หมายเหตุ :** เวลาของเครื่องเป็นระบบ 24 ชม.

2. กด “PROG” จนไฟสีเขียวกระพริบ เครื่องจะแสดงเวลา 12.00
3. กด “HOUR” (ชั่วโมง) และ “MIN” (นาที) เพื่อตั้งเวลาทำงานอัตโนมัติที่ต้องการ
4. เมื่อตั้งเวลาที่ต้องการ กดปุ่ม PROG อีกครั้งจนไฟสีเขียวหยุดกระพริบ หน้าจอ LCD จะเปลี่ยนเป็นเวลาปัจจุบัน เครื่องพร้อมใช้งาน

**หมายเหตุ :** สามารถยกเลิกการตั้งเวลาทำงานล่วงหน้าได้ด้วยการกด “PROG” อีกครั้ง

5. เมื่อเสร็จการชงกาแฟ เครื่องมีฐานอุ่น จึงสามารถเก็บความร้อนของกาแฟไว้ได้เป็นเวลา 40 นาที หลังจากนั้นหากไม่มีการใช้งานต่อ เครื่องจะปิดอัตโนมัติ

**หมายเหตุ :** ในขณะที่เครื่องทำงาน ไม่สามารถตั้งเวลาได้

## การทำความสะอาดและบำรุงรักษา

ก่อนการบำรุงรักษา หรือทำความสะอาดเครื่อง ต้องปิดสวิตซ์และถอดปลั๊กออกจากเต้าเสียบไฟฟ้าทุกครั้ง!

1. ถอดกรวย กรอง และไล่ออกล้างด้วยน้ำยาล้างจาน
2. ใช้ผ้าสะอาดชุบน้ำบิดหมาดเช็ดตัวเครื่องให้สะอาด
3. บริเวณปลายน้ำหยดของกรองและกรวย อาจมีคราบตะกอนเกิดขึ้น ควรใช้ผ้าเช็ดออกทุกครั้ง
4. ห้ามใช้ของมีคมหรือ ฝอยขัดทำความสะอาดเครื่อง
5. เช็ดอุปกรณ์ทุกชิ้นให้แห้งแล้วใส่กลับเข้าที่ เพื่อให้พร้อมใช้งานในครั้งต่อไป

## การขจัดคราบตะกรัน

หลังจากการใช้งานได้สักระยะอาจมีคราบตะกรันบริเวณกรวย กรอง โถแก้วและแทงก์น้ำ ซึ่งแสดงถึงคุณภาพน้ำที่ท่านใช้ ท่านควรเลือกใช้น้ำดื่มที่สะอาดบริสุทธิ์และมีความกระด้างต่ำ การขจัดคราบตะกรัน ทำได้ดังนี้

1. นำผงล้างคราบตะกรันผสมน้ำสะอาด (สัดส่วนตามคำแนะนำของผู้ผลิต) เทลงในแทงก์น้ำ จนถึงระดับ MAX
2. ตรวจสอบให้แน่ใจว่าไม่มีผงกาแฟ
3. กดสวิตช์ ON/OFF เพื่อเริ่มการทำงาน
4. ปลอ่ยเครื่องทำงานจนกว่าได้น้ำออกมา 2 ถ้วย
5. ปิดสวิตช์ ON/OFF เพื่อให้ให้น้ำยาแช่อยู่ในเครื่องเป็นเวลา 15 นาที
6. เปิดเครื่องแล้วทำตามขั้นตอน 4-6 ประมาณ 3 ครั้ง
7. เทน้ำในแทงก์น้ำออก แล้วเติมน้ำสะอาดลงในแทงก์ ทำตามขั้นตอน 4-6 อีก 3 ครั้ง จนน้ำหมดแทงก์ เพื่อไม่ให้เสียสารตกค้าง

## การรับประกัน

เครื่องเตรียมอาหาร Minimax Coffee Maker รุ่น MDC3 ระยะเวลาประกัน 1 ปี

### เงื่อนไขการรับประกัน

การรับประกันครอบคลุมถึงคุณภาพของสินค้าและมีเงื่อนไขการประกอบโดยสินค้าต้องใช้ใน ครั้วเรือนเท่านั้น ผู้ใช้ ต้องใช้งานและบำรุงรักษาอย่างถูกต้องตามคำแนะนำในหนังสือคู่มือ

### ข้อยกเว้นการรับประกัน

บริษัทฯ ขอสงวนสิทธิ์ในความรับผิดชอบต่อความเสียหายใดๆ ที่เป็นผลสืบเนื่องจากการใช้สินค้า และสงวนสิทธิ์การรับประกันหากลูกค้า :

- นำสินค้าไปใช้ผิดจากวัตถุประสงค์ของการออกแบบ เช่น การนำเอาสินค้าที่ออกแบบมาเพื่อการใช้ในครั้วเรือน แต่นำไปใช้เพื่อประกอบอาชีพหรือในเชิงพาณิชย์
- ใช้งานผิดวิธีหรือไม่ได้ใช้งานตามวิธีที่อธิบายในหนังสือคู่มือ
- มิได้บำรุงรักษาตามคำแนะนำในหนังสือคู่มือ

### การใช้สิทธิ์การรับประกันสินค้า

การรับประกันสินค้ามีผลตามวันที่ ที่ระบุในใบรับประกันสินค้า กรุณาแสดงใบรับประกันสินค้า หรือใบกำกับภาษี ใบเสร็จรับเงิน เพื่อเป็นหลักฐานในการซื้อต่อเจ้าหน้าที่ศูนย์บริการฯ ในการใช้สิทธิ์การรับประกันสินค้า

### การพิจารณาความบกพร่องของสินค้าเพื่อการรับประกัน

บริษัทฯ จะทำการตรวจสอบสินค้าอย่างละเอียด และตัดสินใจว่าความบกพร่องของสินค้านั้นอยู่ในเงื่อนไขการรับประกันหรือไม่ซึ่งเป็นสิทธิ์ของบริษัทฯ เท่านั้น ในกรณีที่อยู่ในเงื่อนไขการรับประกัน บริษัทฯ จะเป็นผู้รับผิดชอบค่าแรงในการซ่อม ค่าอะไหล่ และค่าจัดส่งสินค้าถึงบ้านลูกค้า โดยลูกค้าไม่ต้องชำระค่าบริการใดๆทั้งสิ้น หากบริษัทฯ พิจารณาเห็นว่าต้องเปลี่ยนสินค้าใหม่ให้แก่ลูกค้าแต่สินค้ารุ่นเดียวกันไม่มีจำหน่ายแล้ว บริษัทฯ จะเป็นผู้ตัดสินใจว่าสินค้านั้นใดเหมาะสมที่จะเปลี่ยนแทน

### การคืนสินค้า

ในกรณีที่ลูกค้าซื้อสินค้าไปแล้วแต่ไม่พอใจ บริษัทฯ ยินดีรับคืนสินค้าภายใน 15 วัน โดยมีเงื่อนไขว่าสินค้าต้องมีบรรจุภัณฑ์อย่างสมบูรณ์และสินค้ามิได้ถูกใช้งานมาก่อน โดยลูกค้าต้องนำหลักฐานการซื้อเพื่อคืนสินค้า ณ ร้านค้าที่ซื้อเท่านั้น

### ศูนย์บริการ

หากท่านต้องการบริการรายละเอียดเพิ่มเติมหรือสั่งซื้ออุปกรณ์พิเศษท่านสามารถติดต่อศูนย์บริการได้


Service Center : Tel. 02-493-6565

Fax : 0-2464-1600

E-mail : SERVICE\_minimax@penk.co.th



## ช่วยกันรักษาสิ่งแวดล้อม

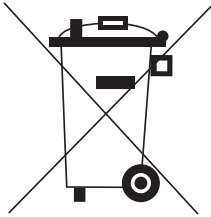

เราขอชี้ชวนให้ท่านร่วมรักษาสิ่งแวดล้อม  
ด้วยการทิ้งเศษอุปกรณ์ที่เลิกใช้แล้ว ณ สถานที่ที่เหมาะสม

**MINIMEX**  
COFFEE MAKER

Instruction Manual  
COFFEE MAKER

**Minimex**  
Model : MDC3



**Instruction Manual**  
**Minimex Coffee Maker**

Model : MDC3  
220V., ~50Hz., 900W.

English

## IMPORTANT SAFEGUARDS :

When using electrical appliance. Basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plug, or in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
7. The use of accessory not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surface.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use appliance for other than intended use.
12. Do not clean carafe with cleansers, steel wool pads, or other abrasive material.
13. To disconnect, turn any control to "Off", remove plug from wall outlet. Always hold the plug. But never pull the cord.
14. Scalding may occur if the cover is removed during the brewing cycles. Be careful not to get burned by the steam.
15. Some parts of appliance are hot when operated, so do not touch with hand. Use handles or knobs only.
16. Do not set a hot carafe on a hot or cold surface.
17. Do not let the coffee maker operate without water.
18. Do not use a cracked carafe or a carafe having a loose or weakened handle.
19. Please do not open the top cover and make sure the glass carafe is placed on the thermal insulation plate correctly during the brewing.
20. To reduce the risk of fire or electrical shock, do not remove the cover. No user serviceable parts inside. Repair should be done by authorized service personnel only.
21. The carafe is designed for use with this appliance. It must never be used on a range top.

22. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
23. Children should be supervised to ensure that they do not play with the appliance.
24. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

25. Save these instructions.

## KNOW YOUR COFFEE MAKER



① Filter

② Funnel

③ Carafe lid

④ Carafe handle

⑤ Carafe

⑥ Control panel

⑦ Warmer plate

⑧ Funnel Support

⑨ Tank handle

⑩ Tank

## CONTROL PANEL



- ① The ON/OFF indicator
- ② The PROG indicator
- ③ LCD Display

## BEFORE FIRST USE

Check that all accessories are complete and the unit is not damaged. Fill water into water tank to the MAX level and brew water for several times without coffee powder, then discard the water. Clean and dry all detachable parts thoroughly according to the section **“CLEANING AND MAINTENANCE”** .

## USING YOUR COFFEE MAKER

1. Open the top cover and fill the water tank with drinking water. The water level should not exceed MAX level as indicated on the water level gauge.
2. Place the funnel into the funnel support, make sure it is assembled correctly, otherwise the top cover cannot be closed. Place a filter in the funnel.
3. Add coffee powder into the filter. Usually a cup of coffee needs a level spoon of coffee powder (You can add coffee to the MAX level, about 45 grams of coffee), but you may adjust according to personal taste. Close the top cover completely.
4. Insert the glass carafe with lid closed onto the thermal insulation plate horizontally.
5. Plug the power cord into the outlet, the LCD display indicates "12:00" and it blinks.
6. Press to the **"HOUR"** setting, one hour can be increased. And the "HOUR" can be increased fast if hold and press the button for more than 2 seconds.
7. Press to the **"MIN"** setting, one minute can be increased. And the "MIN" can be increased fast if hold and press the button for more than 2 seconds.
8. Press to the **"ON/OFF"** setting, the ON/OFF indicator illuminates in red, and the coffee maker starts to brew normal coffee.

**NOTE :** You can take out carafe, pour and serve at any time. The appliance will stop dripping automatically. But the time cannot exceed 30 seconds.

9. Remove out carafe to serve when finish brewing (about one minute later after the coffee stops dripping out.)

**NOTE :** The coffee you get will less than the water you have added, as some water is absorbed by coffee ground and adhere to the plastic.

10. When the process is finished, if you do not want to serve immediately, keep the coffee maker be energized, the coffee can be kept warm on the thermal insulation plate. And the appliance will shut off automatically after 40 minutes from the ON/OFF setting being activated if it has not been manually disconnected at the completion of brewing. For an optimum coffee taste, serve it just after brewing.
11. Always turn the coffee maker off and disconnect the power supply when not use.

**NOTE :** Pay attention to pour the coffee out, otherwise you may be hurt as the temperature of coffee just finished is high.

## DELAY FUNCTION

If you do not want the coffee maker to start operation immediately, for example now it is 8:00, you hope that the coffee maker will automatically start working at 13:00, first follow steps 1 to 5 of **“USING YOUR COFFEE MAKER”**, and then you can set the automatic start function as follows:

1. Follow the steps 6 to 7 of **“USING YOUR COFFEE MAKER”** set the current time that is 8:00.

**NOTE :** The time cycle is 24 hours.

2. Press to the **“PROG”** setting, the PROG indicator blinks in green, and the LCD display indicates “12:00” .
3. Follow the steps 6 to 7 of **“USING YOUR COFFEE MAKER”** set the automatic start time that is 13:00.
4. After setting the automatic start time, press to the **“PROG”** setting, the PROG indicator illuminates in green solidly. After a while, the LCD display indicates the current time.

**NOTE :** You may cancel the automatic start function by press to the **“PROG”** setting again. If you want to change the automatic start time, only following the above steps 2-3 again.

5. When the time is due, the ON/OFF indicator will illuminate in red and the appliance starts brewing. When the process is finished, if you do not want to serve immediately, keep the coffee maker be energized, the coffee can be keep warm on the warming plate. And the appliance will shut off automatically after 40 minutes from the ON/OFF setting being activated if it has not been manually disconnected at the completion of brewing. For an optimum coffee taste, serve it just after brewing.

**NOTE :** During delay brewing process, the settings of “HOUR” and “MIN” are invalid.



## CLEANING AND MAINTAINANCE

**CAUTION :** Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug is first removed from wall outlet.

1. Clean all detachable parts after each use in hot sudsy water.
2. Wipe the exterior surface of unit with a soft, damp cloth to remove stains.
3. Water droplets may buildup in the above area of the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use.
4. Use a damp cloth to gently wipe the thermal insulation plate. Never use abrasive cleaner to clean it.
5. Replace all parts and keep for next use.

## REMOVING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, periodically you should clean away the mineral deposits left by the water according to the water quality in your area and the use frequency, we recommend removing mineral deposits as follows:

1. Fill the water tank with water and descaler to the max level as indicated on the water level gauge (the scale of water and descaler is 4:1, the detail refers to the instruction of descaler. Please use **“household descaler”**, you may also use the citric acid instead of the descaler (the one hundred parts of water and three parts of citric acid).
2. Insert the glass carafe onto the warming plate.
3. Make ensure filter (without coffee powder) and funnel are assembled in place.
4. Turn on the appliance and allow it to **“brew”** de-scaling solution by follow the operation above.
5. After **“brew”** one-cup solution, switch off the appliance.
6. Leave the solution stay for 15 minutes and repeat step 3-5.
7. Turn on the appliance and run off the solution until the water tank is completely empty.
8. Rinse by operating the appliance with water at least 3 times.

## HINTS FOR GREAT-TASTING COFFEE

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the **“CLEANING AND MAINTENANCE”** section. Always use fresh, cold water in the coffee maker.
2. Store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
4. Do not reuse coffee powder since this will greatly reduce the coffee' flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee powder.
6. Oiliness may occur more frequently if heavily roasted coffees are used.

## Warranty

We hereby warranty our Minimex Coffee Maker model MDC3  
in a period of 1 (one) year.

### Warranty Conditions

The warranty cover product defective and workmanship . Users must properly use  
and maintain following the instructions manual..

### Warranty exceptions

We disclaims all responsibility for incidental or consequential damage caused by use of this appliance  
This warranty will be void if customers.

- lead to a misunderstanding of the purpose of the design, such as using product in a commercial use.
- Use the wrong way or not used as described in the instruction manual.
- no maintenance as recommended in the instruction manual.

### Customer right for product warranty

The warranty is effective on the date specified in the warranty card , invoice or receipt as proof  
of purchase.

### Determination of defective product

The company will inspect the false or defective of the product and decide that the defective of the  
product is in warranty or not. The decision is solely the rights of the company. If the product proved to  
be defected and covered by warranty, company will be responsible for parts and labor to repair and  
deliver the product to customers' house. Customers do not have to pay any fee.If the company  
considers that it must change its products to customers, but the same model of product is not available,  
the company will determine an appropriate version of the product to be replaced.

### Returns of Product

If customer purchases to be dissatisfy. Customer could return the product within 15 days after  
purchasing date only if the product is completely perfect packaging and has not been used before.  
Customers must present proof of purchase to return the product at the store of purchase only.

### Service Center

If customer need service or information, customer can contact our Minimex Service Center  
Service Center : Tel. 0-2817-8999, 02-493-6565  
Fax : 0-2464-1600  
E-mail : SERVICE\_minimex@penk.co.th

## ENVIROMENT FRIENDLY DISPOSAL

Please dispose of old machines in an environmentally neutral way.

Old machines contain valuable materials which should be salvaged for recycling.

Please therefore dispose of old machines via your regional collection system





## DISTRIBUTOR

จัดจำหน่ายโดย

**บริษัท เพ็น เค อินเตอร์เทรดดิ้ง จำกัด**

อาคาร พี.บี. ทาวเวอร์ ชั้นที่ 16 เลขที่ 1000/63-64

ถนนสุขุมวิท 71 แขวงคลองตันเหนือ เขตวัฒนา กรุงเทพฯ 10110

เบอร์โทร 02-493-6565 แฟกซ์ 02-391-1141

ศูนย์บริการ minimex 02-817-8999