

MINIMEX
COFFEE GRINDER



คู่มือการใช้งาน
เครื่องบดเมล็ดกาแฟ
Minimex
รุ่น MCG5

Instruction Manual
Minimex Coffee Grinder

Model : MCG5
220V., ~50Hz., 150W.


ไทย / English

คำแนะนำเพื่อความปลอดภัย:

1. ควรอ่านข้อควรระวังต่อไปนี้อย่างละเอียดก่อนใช้งาน
2. ก่อนใช้งานควรตรวจสอบให้แน่ใจว่า ระบบไฟในตัวเครื่องตรงกับระบบไฟในบ้านของท่าน
3. หากท่านพบว่า เกิดความเสียหายกับตัวเครื่องหรือสายไฟ ซึ่งอาจเกิดจากเครื่องหล่นจากที่สูงหรือเหตุอื่นๆ ควรหยุดใช้งานทันทีแล้วส่งเครื่องเข้าตรวจสอบ ณ ศูนย์บริการฯ
4. ถ้าพบรอยฉีกขาดที่สายไฟควรหยุดใช้และส่งเข้าศูนย์บริการฯ เพื่อทำการเปลี่ยนสายใหม่ทันที
5. ควรปิดสวิทช์และถอดปลั๊กออกจากเต้าเสียบไฟบ้านทุกครั้งที่มีได้ใช้งาน ขณะถอดหรือใส่อุปกรณ์ และก่อนทำความสะอาด
6. โปรดใช้ความระมัดระวังขณะทำความสะอาดอุปกรณ์ ไม่ควรเมล็ดกาแฟเหลืออยู่ในโถ หรือตัวเครื่อง
7. อย่าปล่อยให้สายไฟรัดตรงกับขอบโต๊ะหรือวางใกล้แหล่งความร้อน
8. ห้ามจุ่มตัวเครื่องลงในน้ำหรือน้ำยาใดๆ หรือใส่ในเครื่องล้างจาน อุปกรณ์ชิ้นเดียวที่สามารถจุ่มลงน้ำคือ โถใส่เมล็ดกาแฟที่ถอดออกจากตัวเครื่องแล้ว
9. ดูตัวอย่างใกล้ชิดหากใช้งานใกล้เด็ก หรือผู้ด้อยความสามารถทางกายภาพ
10. หลีกเลี่ยงอย่าใส่น้ำลงในช่องบดกาแฟ
11. ห้ามเปิดฝาโถจนกว่าเครื่องจะหยุดสนิท
12. ห้ามใช้งานในสภาพเปิดฝาเครื่อง
13. ตรวจสอบอย่างสม่ำเสมอ เพื่อมิให้วัสดุอื่นเข้าไปในโถใส่เมล็ดกาแฟ
14. ห้ามใช้อุปกรณ์อื่นร่วมกับเครื่อง เพราะอาจเป็นสาเหตุให้เกิดความเสียหายและอันตรายแก่ผู้ใช้ได้
15. หากเกิดเสียงดัง กลั่น จากเครื่องในขณะที่ใช้งาน ให้ปิดเครื่องทันที หยุดใช้และส่งเข้าศูนย์บริการฯ
16. ควรทำความสะอาดเครื่อง เช่น ฟุ้ง หรือเศษผง ก่อนใช้งานทุกครั้ง
17. หากเครื่องมีปัญหา ติดต่อศูนย์บริการฯ ไม่ควรซ่อมแซมเอง
18. ห้ามย้ายโถกาแฟ ฝาโถ และอุปกรณ์อื่นๆจนกว่าเครื่องจะหยุดสนิท
19. ห้ามเสียบปลั๊กในขณะที่มือเปียก หรือใช้ผ้าเปียกถูตัวเครื่อง
20. ห้ามม้วนงอสายไฟ
21. ห้ามเขย่าเครื่อง หรือกระแทกเครื่องแรง
22. ตรวจสอบช่องบดกาแฟก่อนใช้งานทุกครั้ง เพื่อป้องกันเศษฟุ้ง หรือสิ่งแปลกปลอมภายใน
23. เครื่องบดกาแฟนี้ไม่ควรอนุญาตให้เด็ก ผู้ด้อยความสามารถทางกายภาพ ผู้มีจิตใจไม่สมบูรณ์ และผู้ขาดประสบการณ์การใช้งานอุปกรณ์ไฟฟ้าเหล่านี้เป็นผู้ใช้ ท่านอาจอนุญาตให้บุคคลดังกล่าวใช้อุปกรณ์ได้ภายใต้การดูแลและแนะนำอย่างใกล้ชิด
24. ไม่อนุญาตให้เด็กใช้เป็นเครื่องเล่น
25. การใช้งานไม่เป็น เป็นเหตุให้เกิดอันตรายได้

26. ห้ามใช้เครื่องบดกาแฟ เพื่อจุดประสงค์อื่นซึ่งนอกเหนือจากวัตถุประสงค์ในการออกแบบ ในกรณีเช่นนี้ การรับประกันจะสิ้นสุดลงทันที
27. เครื่องบดกาแฟนี้ออกแบบให้ใช้ในครัวเรือนที่เป็นที่ร่มเท่านั้น ห้ามนำไปใช้ในที่โล่งแจ้ง หรือนำไปใช้ในเชิงพาณิชย์ กรณีเช่นนี้จะทำให้การรับประกันสิ้นสุดลงทันที

ส่วนประกอบ

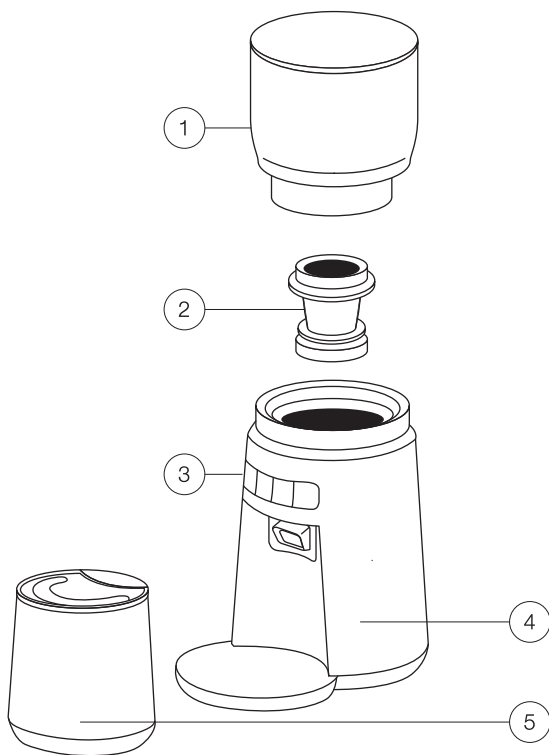

1 โถใส่เมล็ดกาแฟ

2 เฟืองบดกาแฟ

3 ปุ่ม

4 ตัวเครื่อง

5 โถใส่ผงกาแฟ

ก่อนการใช้งาน

1. นำเครื่องออกจากกล่อง แล้วเก็บวัสดุให้เรียบร้อย
2. ใช้ผ้าชุบน้ำบิดหมาดเช็ดให้สะอาด นำโถใส่เมล็ดกาแฟ และโถใส่ผงกาแฟออกล้างด้วยน้ำยาล้างจาน แล้วเช็ดให้แห้ง ติดตั้งโถใส่เมล็ดกาแฟ

ห้าม! ห้ามจุ่มตัวเครื่องลงในน้ำ และ ห้ามเทน้ำลงในโถใส่เมล็ดกาแฟ เพื่อล้างโถ

วิธีการใช้งาน



1. ติดตั้งโถกาแฟกับเครื่อง หมุนตามเข็มนาฬิกาจนลงล็อก
2. เสียบปลั๊กเข้ากับเต้าเสียบบ้าน
3. ใส่กาแฟลงในโถกาแฟ ปริมาณสูงสุด 200 กรัม
4. หมุนปุ่มปรับระดับความละเอียดตามต้องการ



Espresso	>>> ระดับ Fine บดละเอียด
Drip Coffee	>>> ระดับ Medium บดหยาบละเอียดระดับกลาง
French Press	>>> ระดับ Coarse บดหยาบ

5. ใส่โถกาแฟบด เข้ากับเครื่อง



6. ท่านสามารถเลือกปริมาณกาแฟบดที่ต้องการได้ กดปุ่มโดยเครื่องจะทำงานโดยใช้เวลาเป็นตัวกำหนด



Manual = ไม่จำกัดเวลา

6 cups = 30 วินาที

8 cups = 40 วินาที

10 cups = 50 วินาที

7. หากท่านใช้ปุ่ม Manual ไม่จำกัดเวลา กดปุ่มค้างเพื่อทำงาน และปล่อยเพื่อหยุดการทำงาน ไม่ควรเกิน 1 นาที

8. ไม่ควรใช้งานเครื่องต่อเนื่องเกิน 3 นาที ควรพักเครื่องเป็นเวลา 30 นาที เพื่อการใช้งานต่อ

เทคนิคการบดกาแฟ

1. กาแฟบดหยาบ ใช้กับเครื่องชงกาแฟชนิดกรอง เช่น French Press กาแฟบดปานกลาง ใช้กับกาแฟดริป (Drip) กาแฟบดละเอียด ใช้กับเครื่องชงกาแฟเอสเปรสโซ (Espresso)
2. เพื่อให้ได้รสชาติกาแฟที่ดีที่สุดใหม่ ควรใส่เมล็ดกาแฟลงในโถให้เพียงพอสำหรับการบดในแต่ละครั้งเท่านั้น ไม่ควรใส่เมล็ดกาแฟทิ้งไว้ในโถหรือทิ้งกาแฟที่บดแล้วในโถกาแฟบดเป็นเวลานาน เพราะจะทำให้เสียรสชาติที่ดีที่สุดของกาแฟ เมื่อเปิดถุงกาแฟแล้วควรพับถุงให้อากาศไม่สามารถผ่านเข้าออกได้ แล้วปิดด้วยเครื่องหนีบถุงกาแฟ วิธีนี้จะช่วยให้เมล็ดกาแฟมีรสชาติสดใหม่ได้นานกว่าปกติ
3. โถใส่เมล็ดกาแฟ โถใส่ผงกาแฟ ช่องบดกาแฟ จานบด ควรทำความสะอาดอย่างสม่ำเสมอ
4. เครื่องบดกาแฟนี้ใช้บดกาแฟที่แห้งกรอบเท่านั้น ไม่ควรใช้บดสิ่งอื่นที่ไม่ใช่เมล็ดกาแฟ เพราะอาจทำให้มีกลิ่นตกค้างและทำให้กาแฟมีรสชาติผิดไปได้

การรับประกัน

เครื่องบดเมล็ดกาแฟ รุ่น MCG5 ระยะเวลาประกัน 1 ปี

เงื่อนไขการรับประกัน

การรับประกันครอบคลุมถึงคุณภาพของสินค้าและมีเงื่อนไขการประกอบโดยสินค้าต้องใช้ใน ครั้วเรือนเท่านั้น ผู้ใช้ ต้องใช้งานและบำรุงรักษาอย่างถูกต้องตามคำแนะนำในหนังสือคู่มือ

ข้อยกเว้นการรับประกัน

บริษัทฯ ขอสงวนสิทธิ์ในความรับผิดชอบต่อความเสียหายใดๆ ที่เป็นผลสืบเนื่องจากการใช้สินค้า และสงวนสิทธิ์การรับประกันหากลูกค้า :

- นำสินค้าไปใช้ผิดจากวัตถุประสงค์ของการออกแบบ เช่น การนำเอาสินค้าที่ออกแบบมาเพื่อการใช้ในครั้วเรือน แต่นำไปใช้เพื่อประกอบอาชีพหรือในเชิงพาณิชย์
- ใช้งานผิดวิธีหรือไม่ได้ใช้งานตามวิธีที่อธิบายในหนังสือคู่มือ
- ไม่ได้บำรุงรักษาตามคำแนะนำในหนังสือคู่มือ

การใช้สิทธิ์การรับประกันสินค้า

การรับประกันสินค้ามีผลตามวันที่ ที่ระบุในใบรับประกันสินค้า กรุณาแสดงใบรับประกันสินค้า หรือใบกำกับภาษี ใบเสร็จรับเงิน เพื่อเป็นหลักฐานในการซื้อต่อเจ้าหน้าที่ศูนย์บริการฯ ในการใช้สิทธิ์การรับประกันสินค้า

การพิจารณาความบกพร่องของสินค้าเพื่อการรับประกัน

บริษัทฯ จะทำการตรวจสอบสินค้าอย่างละเอียด และตัดสินใจว่าความบกพร่องของสินค้านั้นอยู่ในเงื่อนไขการรับประกันหรือไม่ซึ่งเป็นสิทธิ์ของบริษัทฯ เท่านั้น ในกรณีที่อยู่ในเงื่อนไขการรับประกัน บริษัทฯ จะเป็นผู้รับผิดชอบค่าแรงในการซ่อม ค่าอะไหล่ และค่าจัดส่งสินค้าถึงบ้านลูกค้า โดยลูกค้าไม่ต้องชำระค่าบริการใดๆทั้งสิ้น หากบริษัทฯ พิจารณาเห็นว่าต้องเปลี่ยนสินค้าใหม่ให้แก่ลูกค้าแต่สินค้านั้นเดิมๆไม่มีจำหน่ายแล้ว บริษัทฯ จะเป็นผู้ตัดสินใจว่าสินค้านั้นใดเหมาะสมที่จะเปลี่ยนแทน

การคืนสินค้า

ในกรณีที่ลูกค้าซื้อสินค้าไปแล้วแต่ไม่พอใจ บริษัทฯ ยินดีรับคืนสินค้าภายใน 15 วัน โดยมีเงื่อนไขว่าสินค้าต้องมีบรรจุภัณฑ์อย่างสมบูรณ์และสินค้ามิได้ถูกใช้งานมาก่อน โดยลูกค้าต้องนำหลักฐานการซื้อเพื่อคืนสินค้า ณ ร้านค้าที่ซื้อเท่านั้น


ศูนย์บริการ

หากท่านต้องการบริการรายละเอียดเพิ่มเติมหรือสั่งซื้ออุปกรณ์พิเศษท่านสามารถติดต่อศูนย์บริการได้

Service Center : Tel. 02-493-6565

E-mail : SERVICE_minimex@penk.co.th

ช่วยกันรักษาสิ่งแวดล้อม

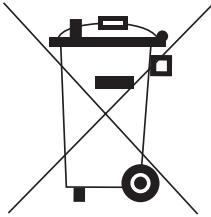

เราขอชี้ชวนให้ท่านร่วมรักษาสิ่งแวดล้อม
ด้วยการทิ้งเศษอุปกรณ์ที่เลิกใช้แล้ว ณ สถานที่ที่เหมาะสม

MINIMEX

COFFEE GRINDER



Instruction Manual COFFEE GRINDER

Minimex
Model : MCG5

Instruction Manual Minimex Coffee Grinder

Model : MCG5
220V., ~50Hz., 150W.

English


IMPORTANT SAFEGUARDS :

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions.
2. Before use check that the voltage of wall outlet correspond to the one shown on the rating plate.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
4. If the supply cord is damaged it must be replaced by the manufacturer or a authorized service agent or a qualified technician in order to avoid a hazard.
5. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
6. Care shall be taken when handling the cutting blades, emptying the bowl and during cleaning.
7. Do not let cord hang over edge of table or hot surface.
8. Do not immerse the motorized base in liquid, or place in dishwasher. Damage to the unit will occur if submerged in liquid or filling the liquid into the container. Only the top cover may be immersed.
9. Close supervision is necessary when your appliance is being used near children or infirm persons.
10. Ensure fingers are kept well away from moving parts.
11. Do not remove cover until blade has completely stopped.
12. Do not attempt operation without the cover being in place.
13. Do not run the appliance without load.
14. The use of accessory not recommended by the manufacturer may cause injuries to persons.
15. Immediately turn off the appliance and send it to the authorized service agent for repair if abnormal sound, abnormal taste, excessive heat and smoke are found during use.
16. Remove the dust and other foreign objects from the appliance before use.
17. It is forbidden to disassemble, repair and rebuild the body.
18. After each use, ensure that the motor stops completely before disassemble.
19. Do not plug and unplug the appliance with wet hands or wet towels.
20. Do not drag or bind the power cord.
21. Do not shake or drop the appliance strongly.
22. Check grinding chamber for presence of foreign objects before using.
23. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

- 24. Children should be supervised to ensure that they do not play with the appliance.
- 25. Misuse may cause potential injury.
- 26. Do not operate the appliance for other than its intended use.
- 27. Do not use outdoors.

KNOW YOUR COFFEE GRINDER

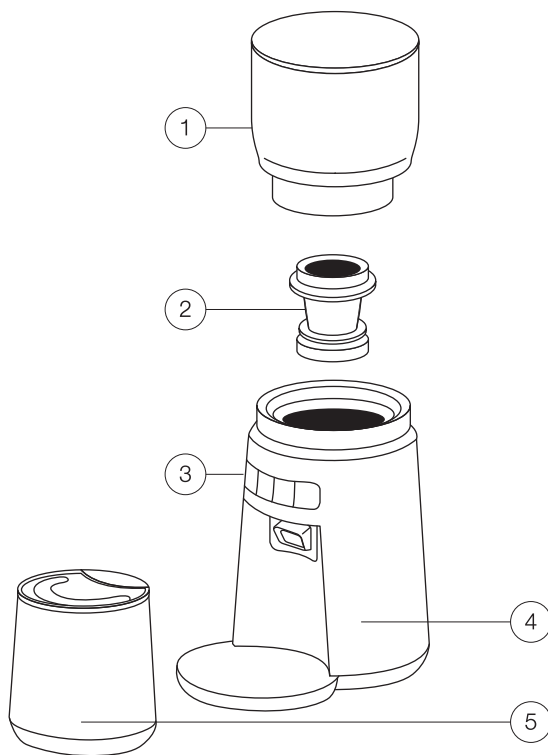

① Coffee bean box : MAX 200 g.

② Blade disk bracket

③ Switch button

④ Motor

⑤ Powder cup : MAX 120 g.

BEFORE FIRST USE

1. Carefully unpack your coffee grinder and remove all packing materials.
2. To remove any dust that may have accumulated during packaging.

CAUTION : Never immerse the body in water for cleaning and do not fill the grinding unit with water for cleaning.

OPERATION

BUTTON GRINDER

1. Transfer 200g coffee beans into the coffee box
2. Put the coffee bean box into the card slot and fasten it clockwise
3. Turn on electricity 220-240V 50/60HZ
4. Send the cutterhead bracket into the slot
5. Put the powder cup into the base
6. The thickness of grinding beans can be adjusted according to the pressing time and the time should not exceed 1 minute
7. Release the switch button to stop grinding beans
8. The device can't work continuously for 10 minutes within 10 minutes if the working time is more than 3 minutes it must rest for 30 minutes before it can work

GRINDING TIPS

1. The coarse ground coffee is generally used for percolators and coffee urns. Medium ground coffee is used for drip coffee makers and steam-type espresso machines. A fine ground coffee is used for espresso machines with an electric pump.
2. For the freshest, most flavorful coffee, grind only enough for the pot you are making. Coffee beans keep up to 2 months in the freezer in an airtight container and can be ground while still frozen. Coffee grounds left in your grinder can become stale and affect the flavor of freshly ground coffee. Be sure to clean grinding chamber, blades after each use.
3. This grinder can only grind dry, brittle foods. It will not grind anything moist, extremely hard, or gummy such as whole ginger, chocolate, sesame seeds or oily spices such as cinnamon, cloves or nutmeg. Do not grind peanuts or grains such as wheat, rice, barley, or dried corn. Attempting to grind any of these foods may damage the unit. Never use it to chop ice cubes.

4. Freshly ground peppercorns have a strong aroma and taste that may affect the flavor of coffee beans ground afterward. You may want to purchase a separate grinder if you plan to grind peppercorns.
5. The switch of this machine is a button switch. When grinding coffee beans abnormally, the powder cup is still grinding after it is full of powder. If the grinding time lasts for more than 4 minutes, the temperature controller will jump suddenly and power-off protection will occur. At this time, the prototype does not work. In this case, all the beans in the bean box need to be removed, and the powder blocked in the powder outlet channel needs to be dredged with a brush, and then the machine can be used normally after 2 hours

Warranty

We hereby warranty our Minimex Coffee Grinder model MCG5
in a period of 1 (one) year.

Warranty Conditions

The warranty cover product defective and workmanship . Users must properly use
and maintain following the instructions manual..

Warranty exceptions

We disclaims all responsibility for incidental or consequential damage caused by use of this appliance
This warranty will be void if customers.

- lead to a misunderstanding of the purpose of the design, such as using product in a commercial use.
- Use the wrong way or not used as described in the instruction manual.
- no maintenance as recommended in the instruction manual.

Customer right for product warranty

The warranty is effective on the date specified in the warranty card , invoice or receipt as proof
of purchase.

Determination of defective product

The company will inspect the false or defective of the product and decide that the defective of the
product is in warranty or not. The decision is solely the rights of the company. If the product proved to
be defected and covered by warranty, company will be responsible for parts and labor to repair and
deliver the product to customers' house. Customers do not have to pay any fee.If the company
considers that it must change its products to customers, but the same model of product is not available,
the company will determine an appropriate version of the product to be replaced.

Returns of Product

If customer purchases to be dissatisfy. Customer could return the product within 15 days after
purchasing date only if the product is completely perfect packaging and has not been used before.
Customers must present proof of purchase to return the product at the store of purchase only.

Service Center

If customer need service or information, customer can contact our Minimex Service Center
Service Center : Tel. 02-493-6565
E-mail : SERVICE_minimex@penk.co.th

ENVIROMENT FRIENDLY DISPOSAL

Please dispose of old machines in an environmentally neutral way.

Old machines contain valuable materials which should be salvaged for recycling.

Please therefore dispose of old machines via your regional collection system





DISTRIBUTOR

จัดจำหน่ายโดย

บริษัท เพ็น เค อินเตอร์เทรดดิ้ง จำกัด

อาคาร พี.บี. ทาวเวอร์ ชั้นที่ 16 เลขที่ 1000/63-64

ถนนสุขุมวิท 71 แขวงคลองตันเหนือ เขตวัฒนา กรุงเทพฯ 10110

เบอร์โทร 02-493-6565 แฟกซ์ 02-391-1141

ศูนย์บริการ minimex 02-817-8999