

**MINIMEX**  
DIGITAL KETTLE

คู่มือการใช้งาน  
กาต้มน้ำดิจิทัล

**Minimex**  
รุ่น MWKD1.5L



**Instruction Manual**  
**MINIMEX DIGITAL KETTLE**

Model : MWKD1.5L  
220V., ~50Hz., 1,850-2,200 W.

ไทย / English

## ข้อมูลเพื่อความปลอดภัย

1. โปรดอ่านคู่มือเล่มนี้อย่างละเอียดก่อนการใช้งาน
2. ก่อนใช้งาน ควรตรวจสอบไฟของตัวเครื่องด้านล่างฐานเสียบไฟว่าตรงกับระบบไฟฟ้าบ้านหรือไม่ หากพบว่าระบบไฟไม่ตรงกัน ไม่ควรใช้งาน ควรติดต่อผู้ขายหรือศูนย์บริการฯ
3. ตรวจสอบอยู่เสมอเพื่อไม่ให้สายไฟรั้งตรง
4. ห้ามใช้งานหรือวางใกล้วัตถุไวไฟ เตาไฟฟ้า และเตาอบ
5. ห้ามใช้งาน ถ้าไม่มีน้ำอยู่ในกาต้ม
6. ควรระวังไม่ให้เด็กเอื้อมหยิบกาต้มน้ำ หรือดึงสายไฟ
7. ห้ามจุ่มตัวเครื่อง ฐานกา และสายไฟ ลงในน้ำหรือของเหลวอื่นๆ และไม่ควรปล่อยให้เปียกและเพราะอาจเกิดอันตรายจากไฟดูดได้
8. ขณะที่กาต้มน้ำกำลังทำงานอยู่ จะมีความร้อนบริเวณผิวกา ควรใช้ความระมัดระวัง
9. เทน้ำร้อนอย่างระมัดระวัง และระวังการกระฉอกของน้ำร้อน
10. หากท่านต้องการต้มน้ำต่อ ควรรอเครื่องให้เย็นลงจึงเติมน้ำต่อ
11. กาต้มน้ำนี้ไม่ได้ออกแบบมาเพื่อ给孩子 (อายุต่ำกว่า 8 ปี) หากท่านจำเป็นต้องใช้ บุคคลเหล่านี้เป็นผู้ใช้งาน ต้องมีผู้ใหญ่ที่มีความเข้าใจในการใช้งานดูแลควบคุมอย่างใกล้ชิด ทั้งนี้เพื่อไม่ให้เกิดอันตราย
12. กาต้มน้ำนี้ไม่ได้ออกแบบมาสำหรับผู้ด้อยสมรรถภาพเป็นผู้ใช้งาน หากท่านจำเป็นต้องใช้บุคคลเหล่านี้เป็นผู้ใช้งาน ต้องมีผู้ใหญ่ที่มีความเข้าใจในการใช้งานดูแลควบคุมอย่างใกล้ชิด ทั้งนี้เพื่อไม่ให้เกิดอันตราย
13. อย่าปล่อยให้กาต้มน้ำทิ้งไว้ให้เด็กเล่น เพราะอาจเกิดอันตรายได้
14. ห้ามจับตัวกาต้มน้ำขณะเครื่องร้อน ให้จับมือจับ หรือปุ่มเปิดฝาเท่านั้น
15. ใช้ฐานและสายไฟที่เข้ากับชุดกับกาต้มน้ำนี้เท่านั้น หากต้องการซ่อมแซม หรือเปลี่ยนใหม่ ควรติดต่อศูนย์บริการฯ
16. ไม่ควรเคลื่อนย้ายกาต้มน้ำร้อน หากมีน้ำร้อนในกา
17. กาต้มน้ำร้อนไม่ใช่ของเล่นสำหรับเด็ก
18. กาต้มน้ำร้อนออกแบบมาเพื่อใช้ในครัวเรือนเท่านั้น ห้ามใช้ในที่กลางแจ้ง
19. การใช้อุปกรณ์อื่นๆกับเครื่อง นอกเหนือคำแนะนำของศูนย์บริการฯ อาจทำให้เกิดความเสียหาย และอันตรายถึงชีวิต
20. ก่อนทำความสะอาด ควรถอดปลั๊กไฟออกจากเต้าเสียบไฟบ้าน แล้วคอยจนกว่ากาต้มน้ำเย็นลง
21. ก่อนยกกาออกจากฐาน ตรวจสอบหน้าจอให้อยู่โหมด “Off” และถอดปลั๊กออก
22. หากพบว่าสายไฟหลวมหรือฉีกขาด ควรหยุดใช้งานทันที และส่งเข้าเปลี่ยนสายไฟที่ศูนย์บริการฯ
23. กาต้มน้ำไฟฟ้า ใช้สำหรับการต้มน้ำเท่านั้น
24. ควรวางกาต้มน้ำไว้บนโต๊ะ หรือพื้นที่ราบเรียบ
25. ไม่ควรเติมน้ำเกินระดับความสูงที่กำหนดไว้ เพราะจะทำให้น้ำเดือดล้น หรือเครื่องไม่ทำงาน


26. กาต้มน้ำมีระบบตัดไฟอัตโนมัติเมื่อน้ำเดือด หากปิดฝากาไม่สนิท ระบบการตัดไฟจะไม่ทำงาน
27. กาต้มน้ำถูกออกแบบมาให้ใช้ในบ้าน ไม่เหมาะสำหรับการใช้งานเชิงพาณิชย์
28. ห้ามเด็กอายุต่ำกว่า 8 ปี ใช้กาต้มน้ำ เด็กอายุ 8 ปีขึ้นไปต้องมีผู้ใหญ่ที่มีความเข้าใจในการใช้งานดูแลควบคุมอย่างใกล้ชิด
29. ห้ามใช้งานผิดประเภท
30. หลังการใช้งาน กาต้มน้ำมีความร้อน โปรดระวังการสัมผัส
31. เก็บคู่มือฉบับนี้ไว้

## ส่วนประกอบ



- |               |              |
|---------------|--------------|
| ① ปากกาต้มน้ำ | ⑤ มือจับ     |
| ② ฝากา        | ⑥ฐานกาต้มน้ำ |
| ③ ปุ่มเปิดฝา  | ⑦ สายไฟ      |
| ④ ตัวกาต้มน้ำ |              |

## โปรแกรมและปุ่มหน้าจอ

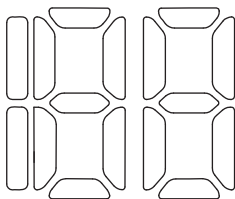

40 °C



60 °C



90 °C



100 °C



## ก่อนการใช้งาน

การใช้งานครั้งแรกใส่น้ำปริมาณ 1.5 ลิตรลงในกา ต้มน้ำและเททิ้ง 2-3 ครั้งเพื่อให้สิ่งสกปรกซึ่งอาจตกค้างอยู่ถูกชำระออกไป เช็ดตัวเครื่องด้วยผ้าชุบน้ำบิดหมาด

## ระบบป้องกันน้ำแห้ง

กาต้มน้ำไฟฟ้ามีระบบป้องกันน้ำแห้ง สวิตช์จะปิดการต้มอัตโนมัติ กรณีไม่มีน้ำในกา หากต้องการเติมน้ำควรรอให้เครื่องเย็น แล้วจึงเติมน้ำ

## การใช้งาน

1. วางกาดม้น้ำบนพื้นผิวราบ
2. ตรวจสอบสายไฟไม่ให้รัดตึง หรือขดงอ
3. ยกกาดม้น้ำ
4. กดปุ่มเปิดฝาเพื่อเติมน้ำตามระดับที่กำหนด (ปริมาณสูงสุด 1.5 ลิตร) ไม่ควรเติมน้ำเกินปริมาณที่กำหนด และไม่ควรเติมน้ำน้อยจนเกินไป
5. วางตัวกานบนฐานกา

**หมายเหตุ :** ห้ามเติมปริมาณน้ำมากกว่ากำหนด

6. เสียบปลั๊กเข้ากับเต้าเสียบไฟบ้าน กดสวิตช์โยกเพื่อเปิด สัญญาณไฟสว่าง เครื่องเริ่มต้มน้ำ เมื่อน้ำเดือด
7. ระบบการต้มน้ำอัตโนมัติ หน้าจอแสดงไฟและโปรแกรมการทำงาน สามารถเลือกอุณหภูมิ  $40^{\circ}\text{C}$ ,  $60^{\circ}\text{C}$ ,  $90^{\circ}\text{C}$  และ  $100^{\circ}\text{C}$  โดยกดปุ่ม “+” และ “-”
  - หากไม่เลือกโปรแกรม ภายใน 10 นาที เครื่องจะกลับเข้าสู่โหมดปกติ
  - เลือกปุ่ม “+” และ “-” เพื่อเลือกอุณหภูมิที่ต้องการ เมื่อเลือกแล้ว กดปุ่ม “ON” เพื่อเริ่มการทำงาน
  - หน้าจอแสดงอุณหภูมิจริงภายในกาดม้น้ำ
  - โปรแกรมหลักของกาดม้น้ำนี้คือต้มน้ำที่  $100^{\circ}\text{C}$  หลังจากกด “ON” (กรณีไม่เลือกอุณหภูมิ)
  - หากต้องการหยุดการต้มก่อนกำหนด กด “OFF”
  - อุณหภูมิอาจคลาดเคลื่อนประมาณ  $\pm 100^{\circ}\text{C}$
  - ขณะที่เครื่องทำงาน หน้าจอแสดงอุณหภูมิจริงทั้งขณะที่เดือด และขณะการลดของอุณหภูมิ

**หมายเหตุ :** หากเปิดฝากา หรือปิดไม่สนิท เครื่องจะไม่หยุดทำงานเมื่อน้ำเดือด

8. กาดม้น้ำหยุดทำงานอัตโนมัติ ควรรอ 30 วินาที ก่อนเปิดฝากาเครื่อง
9. สามารถกด “OFF” เมื่อต้องการหยุดการทำงาน
10. ยกเครื่อง และค่อยๆ เทน้ำร้อนตามปริมาณที่ต้องการ ไม่ควรเปิดฝากา เพราะอาจมีไอน้ำหรือน้ำร้อนพุ่งออกจากกาเป็นอันตรายได้
11. หากต้องการต้มน้ำซ้ำ กดปุ่มสวิตช์เปิด อีกครั้ง
12. เครื่องอาจอยู่ในโหมด “Standby” กดปุ่มใดก็ได้ที่หน้าจอ เพื่อเริ่มการใช้งานอีกครั้ง

**หมายเหตุ :** ถอดปลั๊กทุกครั้งหลังการใช้งาน

## การทำความสะอาด

ถอดปลั๊กและรอให้เครื่องเย็น

1. ห้าม! ให้สายไฟ และฐานกาต้มน้ำ
2. เช็ดตัวเครื่องด้วยผ้าชุบน้ำบิดหมาด

**หมายเหตุ :** ห้ามใช้น้ำยาเคมีทุกชนิดในการทำทำความสะอาดกาต้มน้ำไฟฟ้า

3. ถอดแผ่นกรองที่ปากกาต้มน้ำออกเพื่อทำความสะอาด และใส่กลับเข้าที่เดิม
4. เก็บม้วนสายไฟที่ฐานกาต้มน้ำ เมื่อไม่ใช้งาน

## การล้างคราบตะกรัน

หากใช้กาต้มน้ำไฟฟ้าไประยะหนึ่ง อาจเกิดคราบตะกรันภายใน ทำให้ประสิทธิภาพการต้มน้ำลดลง ควรล้างตะกรันดังต่อไปนี้

1. ใส่ส่วนผสมน้ำส้มสายชูปริมาณ 3 ถ้วย ทั้งส่วนผสมเป็นเวลา 1 ชม. หรือใช้น้ำยาล้างตะกรัน สัดส่วน 30 มล./ น้ำ 1 ลิตร
2. เทส่วนผสมทั้ง ใส่ในกาต้มน้ำ ต้มและเททิ้ง ใช้ผ้าชุบน้ำบิดหมาดเช็ดคราบ

## การรับประกัน

กาต้มน้ำดิจิตอล Minimex รุ่น MWKD1.5L มีระยะเวลาประกัน 1 ปี

### เงื่อนไขการรับประกัน

การรับประกันครอบคลุมถึงคุณภาพของสินค้าและมีมือการประกอบ ผู้ใช้ต้องใช้งานและบำรุงรักษาอย่างถูกต้องตามคำแนะนำในหนังสือคู่มือ

### ข้อยกเว้นการรับประกัน

บริษัทฯ ขอสงวนสิทธิ์ในความรับผิดชอบต่อความเสียหายใดๆ ที่เป็นผลสืบเนื่องจากการใช้สินค้า และสงวนสิทธิ์การรับประกันหากลูกค้า :

- นำสินค้าไปใช้ผิดจากวัตถุประสงค์ของการออกแบบ
- ใช้งานผิดวิธีหรือไม่ได้ใช้งานตามวิธีที่อธิบายในหนังสือคู่มือ
- ไม่ได้บำรุงรักษาตามคำแนะนำในหนังสือคู่มือ

### การใช้สิทธิ์การรับประกันสินค้า

การรับประกันสินค้ามีผลตามวันที่ที่ระบุในใบรับประกันสินค้า กรุณาแสดงใบรับประกันสินค้าหรือใบกำกับภาษีใบเสร็จรับเงิน เพื่อเป็นหลักฐานในการติดต่อเจ้าหน้าที่ศูนย์บริการฯ ในการใช้สิทธิ์การรับประกันสินค้า การพิจารณาความบกพร่องของสินค้าเพื่อการรับประกัน บริษัทฯ จะทำการตรวจสอบสินค้าอย่างละเอียด และตัดสินใจว่า ความบกพร่องของสินค้านั้นอยู่ในเงื่อนไขการรับประกันหรือไม่ ซึ่งเป็นสิทธิ์ของบริษัทฯ เท่านั้น ในกรณีที่อยู่ในเงื่อนไขการรับประกัน บริษัทฯ จะเป็นผู้รับผิดชอบค่าแรงในการซ่อม ค่าอะไหล่ และค่าจัดส่งสินค้าถึงบ้านลูกค้า โดยลูกค้าไม่ต้องชำระค่าบริการใดๆ ทั้งสิ้น

### การพิจารณาความบกพร่องของสินค้าเพื่อการรับประกัน

บริษัทฯ จะทำการตรวจสอบสินค้าอย่างละเอียด และตัดสินใจว่า ความบกพร่องของสินค้านั้นอยู่ในเงื่อนไขการรับประกันหรือไม่ ซึ่งเป็นสิทธิ์ของบริษัทฯ เท่านั้น ในกรณีที่อยู่ในเงื่อนไขการรับประกัน บริษัทฯ จะเป็นผู้รับผิดชอบค่าแรงในการซ่อม ค่าอะไหล่ และค่าจัดส่งสินค้าถึงบ้านลูกค้า โดยลูกค้าไม่ต้องชำระค่าบริการใดๆ ทั้งสิ้น หากบริษัทฯ พิจารณาเห็นว่า ต้องเปลี่ยนสินค้าใหม่ให้แกลูกค้าแต่สินค้านั้นเดิมๆ ไม่มีจำหน่ายแล้ว บริษัทฯ จะเป็นผู้ตัดสินใจว่า สินค้ารุ่นใดเหมาะสมที่จะเปลี่ยนแทน

### การคืนสินค้า

ในกรณีที่ลูกค้าซื้อสินค้าไปแล้วแต่ไม่พอใจ บริษัทฯ ยินดีรับคืนสินค้าภายใน 15 วัน โดยมีเงื่อนไขว่า สินค้าต้องมีบรรจุภัณฑ์อย่างสมบูรณ์และสินค้าไม่ได้ถูกใช้งานมาก่อน โดยลูกค้าต้องนำหลักฐานการซื้อเพื่อคืนสินค้า ณ ร้านค้าที่ซื้อเท่านั้น

### ศูนย์บริการ

หากท่านต้องการบริการรายละเอียดเพิ่มเติมหรือส่งข้ออุปกรณพิเศษท่านสามารถติดต่อศูนย์บริการฯ ได้

Service Center : Tel. 02-493-6565, LineOA : @minimex\_service

E-mail : SERVICE\_minimex@penk.co.th

## ช่วยกันรักษาสิ่งแวดล้อม



เราขอชี้ชวนให้ท่านร่วมรักษาสภาพแวดล้อม  
ด้วยการทิ้งเศษอุปกรณ์ที่เลิกใช้แล้ว ณ สถานที่ที่เหมาะสม



# **MINIMEX**

DIGITAL KETTLE

Instruction Manual  
**DIGITAL KETTLE**

**Minimex**

Model : MWKD1.5L



**Instruction Manual**  
**MINIMEX DIGITAL KETTLE**

Model : MWKD1.5L  
220V., ~50Hz., 1,850-2,200 W.

English

## IMPORTANT SAFEGUARDS :

1. Read all instructions before using.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and stop using the kettle.
3. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
4. Do not place on or near a hot gas or electric burner or in a heated oven.
5. Do not operate the appliance without anything in it to avoid damaging the heat elements.
6. Ensure that the kettle is used on a firm and flat surface out of reach of children, this will prevent the kettle from overturning and avoid damage or injury.
7. To protect against a fire, electric shock, or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
8. While water is boiling, or just after the water has been boiled, avoid contacting with steam from the spout.
9. Always take care to pour boiling water slowly and be carefully without tipping the kettle too fast.
10. Be careful of refilling when the kettle is hot.
11. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
12. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
13. Children should be supervised to ensure that they do not play with the appliance.
14. Do not touch the hot surface. Use the handle or the button.
15. The attached base cannot be used for other than intended use
16. Extreme caution must be used when moving an appliance containing hot water.
17. The appliance is not a toy. Do not let the children play with it.
18. The kettle is for household use only. Do not use outdoors.
19. The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock, or personal injury.
20. Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool down before putting on or taking off parts, and before cleaning the appliance.
21. To disconnect, turn any control to "off" position, then remove plug from wall outlet.


22. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
23. Do not use the appliance for other than intended use.
24. The kettle can only use with the stand provided.
25. If the kettle is overfilled, boiling water may spill out.
26. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.
27. This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices, and other working environments;
  - Farm houses;
  - By clients in hotels, motels, and other residential type environments;
  - Bed and breakfast type environments.
28. Warning: avoid spillage on the connector.
29. Warning: be careful of potential injury from misuse.
30. The heating element surface is subject to residual heat after use.
31. The appliance must not be immersed.
32. Save these instructions.

## KNOW DIGITAL KETTLE



- |              |                |
|--------------|----------------|
| ① Spout      | ⑤ Handle cover |
| ② Lid        | ⑥ Base         |
| ③ Lid button | ⑦ Power cord   |
| ④ Body       |                |

## CONTROL PANEL

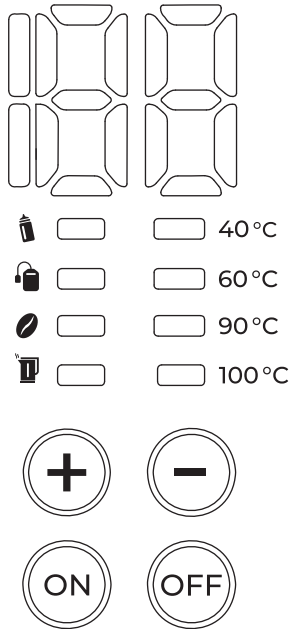

## BEFORE USING YOUR KETTLE

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling the Max capacity of water once and then discarding the water twice. Wipe the surface with a damp cloth.

**NOTE :** The max capacity of kettle is **1.5L**.

## BOIL-DRY PROTECTION

Should you accidentally let the kettle operate without water, the function of boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool prior to filling with cold water before re-boiling.

## DIGITAL KETTLE OPERATION

1. Position the kettle base on a dry and flat surface and away from any potential heat source.
2. Unwind the length of cord required to reach the mains electrical outlet. Ensure the cord does not hang over the work surface edge.
3. Remove the kettle from the base.
4. Open the lid. Fill the kettle with cool water, between the **MIN** and **MAX** markings located inside the kettle.
5. Close the lid and place the kettle back onto its base. Make sure that the lid is securely closed before boiling.

**NOTE :** Always remove the kettle from its base before filling. Do not fill the kettle above the **MAX** mark or below the MIN mark on the water gauge.

6. Plug the kettle into the mains electrical outlet.
7. Press the power switch and its indicator will light up, and then the kettle starts to boil the water. Once you have made your touch-control selection, the kettle will sound with notification tone, indicating that the selected function is about to start. The display shows the real-time temperature, the 40°C, 60°C and 90°C setting lights will be on, the default selection is 100°C, and the 100°C light flashes, then enter into temperature selection stage. Press the "+" and "-" keys to select the temperature. During the temperature selection process, the selected temperature light keep flashing and the other light stay on.

### NOTE :

- 1.) When the kettle enter into temperature selection stage, If there is no operation within 10 minute, the buzzer will sounds 3 times, All lights are off, and the product enters the standby state.
- 2.) Using the "+" "-"key, you can choose the temperature what you want, but after choose the temperature, you need press the "ON" key to start the kettle, otherwise, the kettle will not start working. "+" key can add the temperature only, "-" key can subtract the temperature only.
- 3) The display should always display the real-time temperature after power on.
- 4) The default selection is 100°C after power on.
- 5) After entering the working state, you can only exit the program by pressing the "OFF" key.
- 6) There will be  $\pm 5^{\circ}\text{C}$  tolerance different from the setting temperature.

- 7) During operation, the digital display will illuminate with real time temperature and count up as the water temperature increases. The digital display will also countdown in real time as the water temperature decreases.

**NOTE :** Ensure that switch is free of obstructions and the lid is firmly closed, the kettle will not turn off if the switch is constrained or if the lid is opening.

8. The kettle will switch off automatically and the indicator will turn off once the water has boiled. If necessary, it will take you 30 seconds to wait before pressing the power switch again to re-boil the water.
9. You may shut off the power by directly lifting the kettle from the power base at any moment or press the "OFF" key to stop boiling process.
10. Lift the kettle from the power base and then pour the water.

**NOTE :** Operate carefully when pouring the water from your kettle as boiling water may result in scald, besides, don't open the lid while the water in the kettle is hot.

11. The kettle will not re-boil until the switch is pressed again. The kettle may be stored on the power base when not in use.
12. When the water has boiled the kettle will enter standby mode and its display will turn off. To wake the appliance, press any button.

**NOTE :** Always disconnect the power supply when not use.

## BOIL-DRY PROTECTION

Should you accidentally let the kettle operate without water, the function of boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool prior to filling with cold water before re-boiling.

## CLEANING AND MAINTENANCE

Always disconnect the appliance from the power outlet and cool it down completely before cleaning.

1. Never immerse the kettle, power cord or power base in water, or allow moisture to contact with these parts.
2. Wipe the appearance of body with a damp cloth or cleaner, never use a poisonous cleaner.

**CAUTION :** Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent the gloss loss.

3. When not use or storage, the power cord may be wound under the power base.

## REMOVAL OF MINERAL DEPOSITS

Your kettle should be periodically descaled as the mineral deposits in tap water may form scale on the bottom of kettle so as to cause the operation less efficiency. You can use the commercially available descaler and follow the instructions on the package of descaler. Alternatively, you may follow below instructions using the white vinegar.

1. Fill the kettle with 3 cups of white vinegar, then adding water to the amount so as to cover the bottom of kettle completely. Leave the solution in the kettle overnight.
2. Then discard the mixture in the kettle, then filling the kettle with clean water to the maximum position, boiling and then discard the water. Repeat several times until the odor of vinegar has been flushes away. Any stains remaining inside the spout can be removed by rubbing.



# WARRANTY

We hereby warranty our Minimex Digital Kettle model MWKD1.5L in a period of 1 (one) year.

## Warranty Conditions

The warranty cover product defective and workmanship . Users must properly use and maintain following the instructions manual.

## Warranty exceptions

We disclaims all responsibility for incidental or consequential damage caused by use of this appliance This warranty will be void if customers.

- lead to a misunderstanding of the purpose of the design, such as using product in a commercial use.
- Use the wrong way or not used as described in the instruction manual.
- no maintenance as recommended in the instruction manual.

## Customer right for product warranty

The warranty is effective on the date specified in the warranty card , invoice or receipt as proof of purchase.

## Determination of defective product

The company will inspect the false or defective of the product and decide that the defective of the product is in warranty or not. The decision is solely the rights of the company. If the product proved to be defected and covered by warranty, company will be responsible for parts and labor to repair and deliver the product to customers' house. Customers do not have to pay any fee.If the company considers that it must change its products to customers, but the same model of product is not available, the company will determine an appropriate version of the product to be replaced.

## Returns of Product

If customer purchases to be dissatisfy. Customer could return the product within 15 days after purchasing date only if the product is completely perfect packaging and has not been used before.  
Customers must present proof of purchase to return the product at the store of purchase only.

## Service Center

If customer need service or information, customer can contact our Minimex Service Center  
Service Center : Tel. 02-493-6565, LineOA : @minimex\_service  
E-mail : SERVICE\_minimex@penk.co.th

## ENVIROMENT FRIENDLY DISPOSAL

Please dispose of old machines in an environmentally neutral way.

Old machines contain valuable materials which should be salvaged for recycling.

Please therefore dispose of old machines via your regional collection system



# minimEX

DIGITAL KETTLE

DISTRIBUTOR

จัดจำหน่ายโดย

**บริษัท เพ็น เค อินเตอร์เทรดดิ้ง จำกัด**

อาคาร พี.บี. ทาวเวอร์ ชั้นที่ 16 เลขที่ 1000/63-64

ถนนสุขุมวิท 71 แขวงคลองตันเหนือ เขตวัฒนา กรุงเทพฯ 10110

หมายเลขโทรศัพท์ 02-493-6565 แฟกซ์ 02-391-1141

ศูนย์บริการ minimex 02-493-6565