



Refrigerant: R600a
Insulation blowing gas: Cyclopentane



"Plasmacluster" and "Device of a cluster of grapes" are trademarks of Sharp Corporation.



SJ-XP470TP
SJ-XP500TP

Refrigerator - Freezer Operation manual

Contents

• Safety information	EN-1
• Installation	EN-2
• Description	EN-3
• Control panel	EN-5
• Temperature setting	EN-5
• Storing food	EN-7
• Care and cleaning	EN-8
• Before you call for service	EN-9
• Specification	EN-10

ENGLISH

ตู้เย็นพร้อมช่องแช่แข็ง คู่มือการใช้งาน

สารบัญ

• ข้อมูลเพื่อความปลอดภัย	TH-1
• การติดตั้ง	TH-2
• รายละเอียดชิ้นส่วนของตู้เย็น	TH-3
• แผงควบคุมการทำงาน	TH-5
• การตั้งค่าอุณหภูมิ	TH-5
• การเก็บอาหารในตู้เย็น	TH-7
• การดูแลรักษาและทำความสะอาด	TH-8
• คำแนะนำก่อนเรียกช่างบริการ	TH-9
• ข้อมูลจำเพาะ	TH-10

ภาษาไทย

production control code 

Thank you very much for buying this SHARP product. Please read this manual before using your SHARP refrigerator to get maximum benefit from it.

- This refrigerator is intended for refrigerating, freezing foods, and making ice cubes.
- This refrigerator is for household is intended to use at ambient temperatures from 16°C to 43°C, as specified by the climate class marked on the rating plate. Refer to the table for more information about the climate class. Operating outside this range may affect internal temperatures.
- If the refrigerator is used at colder temperatures, it will not be damaged at temperatures down to +5°C, and should not be subjected to temperatures of -10°C or below for extended periods of time.
- This refrigerator is not designed for portable use. Do not move it while in operation.

Household use only	
Climate class	Acceptable range of ambient temperature
SN	+10°C to 32°C
N	+16°C to 32°C
ST	+16°C to 38°C
T	+16°C to 43°C

Safety information

	WARNING	This means that there are high risks of death or serious injury.
	CAUTION	This means that there are high risks of material damage or personal injury.
	CAUTION	Fire marks means this refrigerator has risk of fire accident.



WARNING

Refrigerant

This refrigerator contains flammable refrigerant (R600a: isobutane) and insulation blowing gas (cyclopentane). Observe the following rules to prevent ignition and explosion.

- Do not allow any pointed objects to have contact with the refrigeration system. The refrigeration system behind and inside the refrigerator contains refrigerant.
- Do not use mechanical devices or other means to accelerate the defrosting process. (This refrigerator has adopted automatic defrosting system.)
- Do not use electrical appliances inside the refrigerator.
- Do not block the space around the refrigerator.
- Do not use flammable sprays, such as spray paint near the refrigerator.
- In the case of failure of the refrigeration system, do not touch the wall socket and use open flames. Open the window and let out the air from the room. Then ask a service agent approved by SHARP for service.

Power cord, Plug, Socket

Read carefully the following rules to prevent electric shock or fire.

- Make sure to protect the power cord from being damaged during installation or moving. If the power plug or cord is loose, do not insert the power plug.
- Do not place multiple portable socket-outlets or portable power supplies at the rear of the refrigerator.
- Connect the power plug into the wall socket firmly and directly. Do not use an extension cord or adapter plug.
- Connect the power plug to the socket with the required rated voltage.
- Connect the earth pin to the earth terminal properly.
- Do not touch the power plug with wet hands.
- Disconnect from the main electricity supply by removing the main plug from the socket. Do not remove by pulling the power cord.
- Dust deposited on the power plug may cause fire. Wipe it off carefully.

- Pull out the plug if the refrigerator is not used for a long time.
- If the flexible supply cord is damaged, it must be replaced by service agent approved by SHARP because special cord is required.

Installation

- Do not install the refrigerator in a damp or wet location. It may cause the damage to the insulation or electrical leak. Dew may also appear on the outer cabinet and it causes rust.
- The refrigerator should be installed flatly and firmly on the floor.

In use

- Do not store volatile and flammable materials such as ether, petrol, propane gas, aerosol cans, adhesive agents and pure alcohol etc. These materials are easy to explode.
- Do not store temperature-sensitive products such as pharmaceutical products in the refrigerator. There are high risks of changes in product quality.
- Do not attempt to change or modify this refrigerator. This may result in fire, electric shock or injury.
- Do not place bottled drinks and cans in the freezer compartment. Especially "Express Freezing" is in operation, there is a high risk that glass bottles may burst.
- Do not place any object on the top of refrigerator. If the object falls down from the top, it may cause injury.
- This appliance can be used by children aged from 8 years or above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way or understanding the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision. Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

Care and Cleaning

- Unplug the refrigerator first to prevent electric shock.
- Do not splash water directly on the outer cabinet or the interior, as this may lead to rusting and deterioration of the electrical insulation.

Trouble


- If you smell something burnt, pull out the power plug immediately. Then ask a service agent approved by SHARP for service.
- In case of gas leak, ventilate the area by opening window. Do not touch the refrigerator or the power socket.



CAUTION

Transportation

- When you install or move your refrigerator, use a protective mat to prevent damage to the floor.
- Carry the refrigerator securely. If you lift up the refrigerator improperly, it may cause injury.

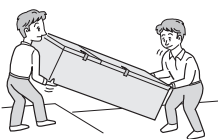

- Make sure to contact the authorized service center before you install or move the refrigerator.

- Do not use the doors to carry the refrigerator.



Disposal

- Ensure that the refrigerator presents no danger to children while being stored until disposal. (e.g. remove the magnetic door seals to prevent child entrapment.)
- Take the refrigerator to a professional recycling plant. Some materials such as flammable refrigerants, insulation blowing gas, vacuum insulation panels (VIPs), light sources and electrical components should be properly recycled.

In use


- Do not touch the compressor unit or its peripheral parts, as they become extremely hot during operation and the metal edges may cause injury.
- Do not touch food or metal containers in the freezer with wet hands, as this may cause frostbite.
- Do not use other than drinking water to make ice cubes.
- Do not place bottled drinks and cans in the freezer compartment.
- Do not open or close the door when other people have their hands near it, as there is a risk of them getting their fingers caught.
- Do not place oversized objects in the door pockets. If an object falls out, it could cause injury.
- Handle the glass shelves carefully during installation or removal. Dropping them could cause breakage or result in injury.

Installation

Free standing type


- 1 Keep adequate ventilation space around the refrigerator.

The picture shows the minimum required space for installing the refrigerator. The measurement condition of energy consumption is conducted under a different space dimension.

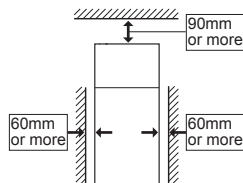

Rear clearance


The space between the rear of the refrigerator and the wall should be 50mm or more, and less than 75mm. If the space is wider than 75mm, there is a risk of injury from touching the hot compressor and its peripheral parts during the operation.



Note

- By maintaining more space, the refrigerator may consume less power.
- If the refrigerator is installed in a space smaller than specified, it may result in a rise in internal temperature, increased noise, and possible malfunction.
- Do not push the refrigerator against the wall. The wall around the refrigerator may get dirty or discolored due to air flow from heat radiation.


Overall space required in use

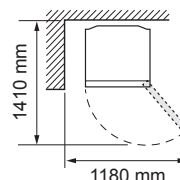

- 2 Use the adjustable foot to place the refrigerator flatly and firmly on the floor.

Note


- Place the refrigerator so that you can access the plug.
- Keep your refrigerator out of direct sunlight and do not place it next to heat-generating appliances.
- Do not use packing materials as a stand. Place the refrigerator on a solid floor, not directly on an earthen floor. If you place the refrigerator on an earthen floor, use a wooden board or another suitable base underneath it.

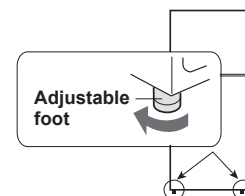

Before using your refrigerator

- Clean the inside parts with a cloth soaked in warm water. If you use soapy water, wipe it off thoroughly with clean water.
- Remove packing materials (cushion, blue tapes etc.).

Description

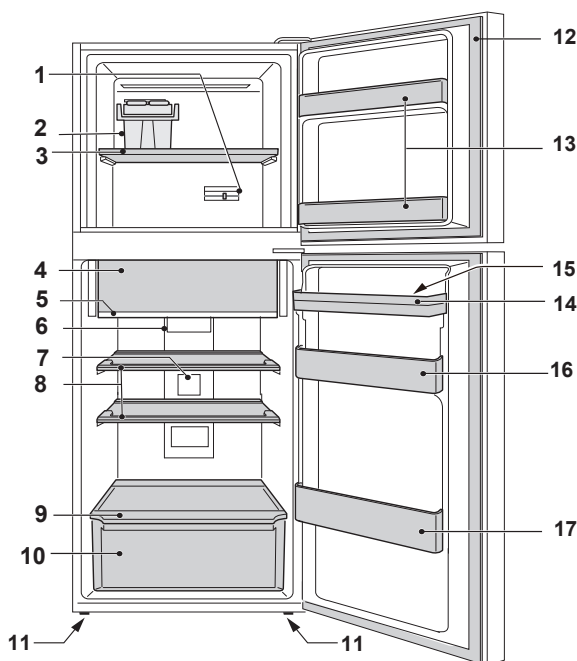

✱✱✱✱ 4 Star Freezer


SJ-XP500TP

1. Temperature control lever
2. Movable ice maker
3. Freezer shelf
4. Fresh door
5. Fresh drawer
6. Light
7. Control panel
8. Refrigerator shelf (2 pcs)
9. Vegetable shelf
10. Vegetable case
11. Adjustable foot
12. Magnetic door seal
13. Freezer door pocket

14. Egg pocket
SJ-XP470TP : 2pcs
15. Egg tray
16. Refrigerator door pocket
(only for SJ-XP500TP)
17. Bottle pocket

Deodorizing unit

Deodorizing catalyst is installed on the routes of cold air.
There is no need to operate and clean.

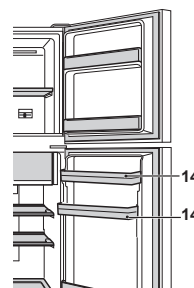

Note


- Be sure to securely push drawers and pullout cases back after use.

Plasmacluster

This Plasmacluster automatically starts operating when the refrigerator is powered on.
The ionizer inside your refrigerator releases clusters of ions, which are collective masses of positive and negative ions, into the refrigerator compartment.
These ion clusters inactive airborne mold fungus.

Note

There may be a slight odor in the refrigerator, which is the smell of ozone generated by the ionizer.
The amount of ozone is minimal and quickly dissipates in the refrigerator.

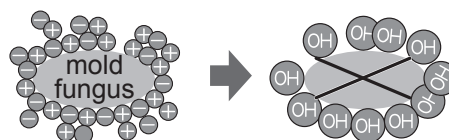


Movable ice maker




Warning : Use drinking water only.

You can put the ice maker anywhere in the freezer compartment.
It is recommended to use the ice maker as shown in the picture in "Description".

- 1) Pour the water into the ice cube tray.
Do not overfill the tray with water, otherwise, the ice cubes will join together when frozen.

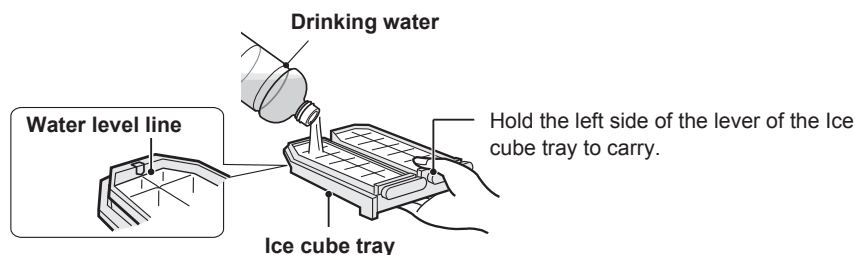

- 2) When ice cubes are made, turn the lever clockwise to put the ice into the ice cube box.

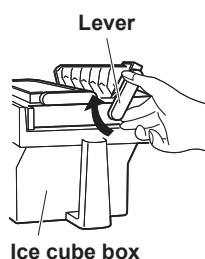

Note


To avoid damage:

- Do not make ice cubes directly in the ice cube box. Be sure not to spill water from the ice tray by keeping it level.
- Freezing substances other than water may cause damage, including material degradation or discoloration.

How to install the spring of the ice cube tray


If the spring of the ice cube tray comes off, follow the instructions below.

- 1 Insert L-shaped part of the spring into the hole.

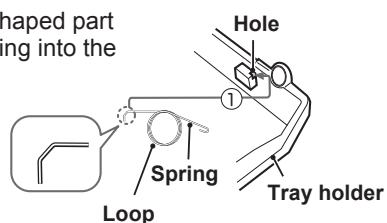

- 2 Hook U-shaped part to the ice cube tray.


- 3 Thread the loop through the protrusion and fit the tray holder.

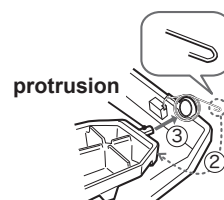

- 4 Fit the lever to the tray holder.

Caution


Be careful not to get injured by the edge of the spring.

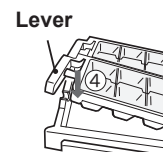

Control panel / Temperature setting

The inside temperature fluctuates due to the installation conditions and the frequency of door openings. You can adjust the temperature according to the cooling performance.

Control panel

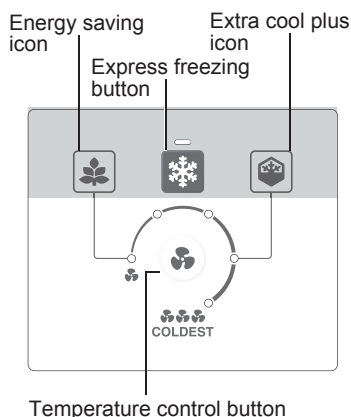


Extra cool plus

This setting is to cool beverages or foods to ice-cold.

CAUTION

Do not place glass bottles and cans. There is a high risk that they may burst.

Fresh room

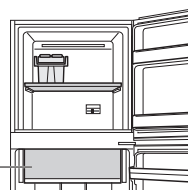

Note

- Food with high-moisture may freeze.
- Avoid opening the refrigerator door as much as possible during this setting.

Energy saving

This setting is to switch the refrigerator to energy-saving operation. While this setting is operating, the inside temperature of the refrigerator and freezer compartment becomes higher than default setting as follows.

	Freezer compartment	Refrigerator compartment
Under "Energy saving" mode	Approx. 3°C plus	Approx. 4°C plus

Cancel this mode if you feel the beverages are not cold enough or if ice making takes too long.

Note


- The efficiency of power saving depends on the usage environment (controlling temperature, ambient temperature, frequency of opening or closing the door, amount of food).

Temperature setting

<Refrigerator compartment>


Press the temperature control button. By pressing the button, the indicator changes as shown below.

(① → ② → ③ → ④ → ⑤ → ① → ② → ③ → ④ → ⑤)

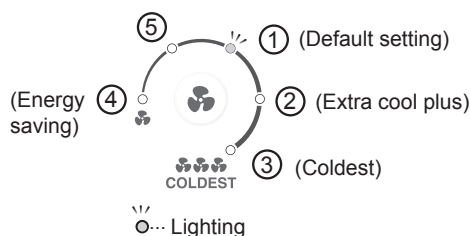

<Freezer compartment>

Slide the lever to the right to increase the cooling.

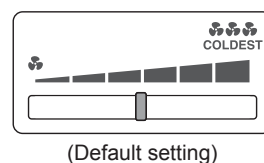

Note

- This lever controls the air passage to the refrigerator compartment.
- "COLDEST" setting minimizes air passage to the refrigerator and enhances cooling in the freezer.


Recommended temperature settings

	Lever	Indicator
Normal		
In winter (Colder than 10°C)	- Set to the right. - Do not set to left side.	(Default setting) COLDEST Lighting

Advanced setting of the temperature

Press and hold the temperature control button for 3 seconds to enter the advanced setting.

Be sure to follow the same procedure to cancel this setting.

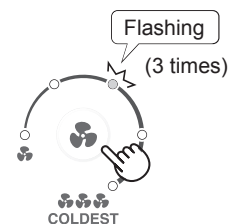

By pressing the button, the indicator changes as shown below.

(7→8→9→10→11→12→13→1→2→3→4→5→6→7)

○... OFF ●... Lighting ●... Flashing (Slow) ●... Flashing (Fast)

1 Energy saving	2	3	4	5	6	7 Default setting	8	9	10 Extra cool plus *	11	12	13 Coldest

* Only for Refrigerator compartment


Express freezing

This mode speeds up the time to freeze food or make ice cubes.

CAUTION


Do not place glass bottles and cans. There is a high risk that they may burst.

Freezer compartment

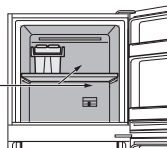

How to ON / OFF

Press the mode button.

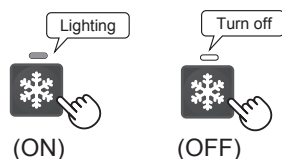

Note

- This mode ends automatically.
- The normal operation time is 2 hours. However, it may take longer to complete if the operation overlaps with defrosting. This mode will start after defrosting is completed.
- Avoid opening the freezer door as much as possible during this mode.
- In the event of power outage, this mode is automatically cancelled.

Storing food

- Ensure that the food is of the freshest quality possible to maximize the shelf life of perishable items. The following is a general guide to promote longer food storage.
- Food has a limited storage life. Be sure not to exceed the use-by date indicated by the manufacturer.

Fruit / Vegetables

Fruit and vegetables should be loosely enclosed in plastic materials, such as wrap or bags (without sealing), and placed in the vegetable case to minimize moisture loss.

Dairy Products & Eggs

- Most dairy products have their best-before date on the outer packaging, which indicates the recommended temperature and shelf life of the food.
- Eggs should be stored in the Egg tray.

Meats / Fish / Poultry

- Place the item on a plate or dish and cover it with a piece of paper or plastic wrap.
- For larger cuts of meat, fish, or poultry, place them at the back of the shelves.
- Ensure all cooked food is wrapped securely or placed in an airtight container.

For best freezing

- The quality of the foods should be fresh.
- Freeze small quantities of food at a time to freeze them quickly.
- Food should be properly sealed or covered tightly.
- Place foods evenly in the freezer.
- Label bags or containers to keep an inventory of freezing food.

If you wish to store large items within your refrigerator :

- You may remove Movable ice maker and Freezer shelf in the freezer compartment.
- Cooling performance is not influenced even if you use the refrigerator in the above situation.

*Notes for fresh food


- Fresh food (securely wrapped) should be stored in limited time to prevent spoilage and badly affecting other stored foods.

Advice for preventing dew or frost inside the refrigerator

- Keep the door closed securely. If food falls between the cabinet and the door, move it back to the shelf or the pocket.
- Food with high-moisture should be stored in airtight container or sealed tightly.


Advice for storing food

- Place the food evenly on the shelves for efficient circulation of the cool air.
- If the door is left open for a long time, the inside temperature may rise significantly.
- Hot foods should be cooled before storage. Storing hot food increases the inside temperature and the risk of food spoilage.
- Do not block the outlet and inlet of the cool air circulating circuit with foods or containers. Otherwise, the food will not be cooled evenly throughout the refrigerator.
- Do not place food directly in front of the cold air outlet. This may cause the food to freeze.

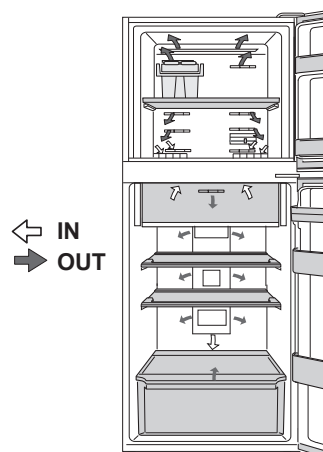

Tips for saving energy

- Install the refrigerator in a well-ventilated area and keep the space to ventilate.
- The amount of energy consumption of this model is measured as shown in the picture below.

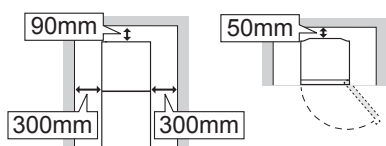

- Keep your refrigerator out of direct sunlight, and do not place it next to heat generating appliance.
- Avoid opening the door as much as possible.
- Hot foods should be cooled before storing.
- Place the food evenly on the shelves to allow the cool air to circulate efficiently.

Care and cleaning

Important


Follow the tips below to prevent cracks on the inner surfaces and plastic components

- Wipe off any food oil adhering to the plastic parts.
- Some household chemicals may cause damage. Use only diluted washing-up liquid (soapy water).
- Wipe off any undiluted detergent or soapy water thoroughly to prevent cracking of the plastic parts.

Cleaning

For hygienic reasons, make sure to do following things regularly.

- Use a cloth soaked in warm, soapy water to clean the inside, and then use clean water to thoroughly wipe off any soap residue.
 - For removable accessories, wash surfaces with soapy water, then rinse with clean water and dry thoroughly.
 - Wipe the exterior with a soft cloth each time it gets dirty.
 - Use a toothbrush and warm dishwashing water to clean the magnetic door.
 - Do not put on the shelf on the protrusions.
-
- Be sure to put the shelf on the rail.
The hooks of the shelf should be facing forward and downward. If the shelf is not positioned correctly, it may fall.

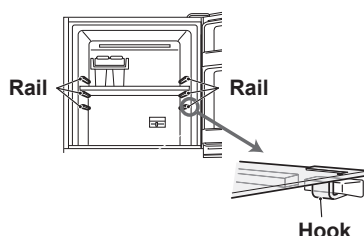

Note

- After cleaning, be sure to put the shelves and the cases back in their original positions.
- Do not use heavy-duty cleansers or solvents (such as lacquer, paint, polishing powder, benzene, or boiling water), as they may cause damage.
- Once you unplug the power cord, wait at least 5 minutes before reconnecting it.
- The glass shelves are heavy to carry, so hold them firmly when removing them from the cabinet.
- Do not drop objects inside the refrigerator or hit the inner walls, as this may cause cracks in the inner surface.

Defrosting

Defrosting is automatically controlled by a unique energy-saving system.

When the compartment light is blown

Contact the service agent approved by SHARP to replace the light.

The light should only be replaced by a qualified repair person.


Switching off your refrigerator

If the refrigerator needs to be switched off for an extended period, the following steps should be taken to reduce the growth of mold:

1. Remove all food.
2. Remove the power plug from the socket.
3. Clean and dry the interior thoroughly.
4. Keep all the doors open slightly for a few days to dry.

Before you call for service

Before calling for service, check the following points.

Problem	Solution
The outside of the cabinet is hot to the touch.	It is normal. The hot pipe in the cabinet is in order to prevent dew generation.
When there is noise coming from the refrigerator	It is normal for the refrigerator to make the following sounds. • The compressor makes loud noise when it starts operating. -- The sound becomes quieter after a while. • The compressor makes loud noise once a day. -- An operating sound is heard immediately after the automatic defrost cycle. • Sound of flowing fluid (gurgling sound, fizzing sound) -- Sound of refrigerant flowing in pipes (sound may become louder from time to time). • Cracking or crunching sound, squeaking sound -- This sound is caused by the expansion and contraction of the inner walls and internal parts during the cooling operation.
Frost or dew appears inside or outside the refrigerator.	This may occur in one of the following cases. Use a wet cloth for wiping frost and a dry cloth for wiping dew. • The ambient humidity is high. • The door is frequently opened and closed. • Food with high moisture is stored. (Wrapping is required.)
The food in the refrigerator compartment freeze.	• Is the refrigerator operated for a long time with the temp. control knob set COLDEST? -- Change the temperature control to the other setting. • If ambient temperature is low, foods may freeze even if the the temp. control knob is set at leftmost position.
Odors in the compartment.	• Be sure to wrap the food with a strong smell properly. • The deodorizing unit can't eliminate all odors.
The refrigerator door is hard to open.	The refrigerator door may become hard to open right after closing the freezer door because the air temperature and the pressure inside the refrigerator compartment drop. Please wait for approximately 10-15 seconds to open the refrigerator door. 

If you still require service

Refer to your nearest service agent approved by SHARP.

Specification

SHARP Refrigerator and Freezer Automatic Defrosting 4 Star Freezer

MODEL		SJ-XP470TP	SJ-XP500TP
Rate Voltage (V~)		220	
Rate Frequency (Hz)		50	
Number of Phase		1	
Power Input (W)		172	
Flammable Insulation Blowing Gas		CYCLO PENTANE (NON CFC 100%)	
Refrigerant		R-600a	
Mass of the Refrigerant (g)		50	
Actual total volume (L/cu.ft.)		430 / 15.2	471 / 16.6
Dimension (mm)	Width	700	700
	Depth	726	726
	Height	1680	1795

NOTE

Specification and equipment are subject to change without any obligation on the part of the manufacture with today's progressive manufacturing.

ENGLISH

บริษัทฯ ขอขอบคุณอย่างสูงที่เลือกใช้ผลิตภัณฑ์ชาร์ป โปรดอ่านคู่มือนี้ก่อนใช้งานตู้เย็นชาร์ปของคุณ เพื่อประโยชน์สูงสุด

- ตู้เย็นนี้มีไว้เพื่อใช้ในการแช่เย็น แช่แข็งอาหาร และทำน้ำแข็ง
- ตู้เย็นนี้เหมาะสำหรับใช้ในครัวเรือน โดยควรใช้งานในสภาพแวดล้อมที่มีอุณหภูมิ 16-43 องศาเซลเซียส ตามที่ระบุไว้ในประเภทสภาพอากาศบนป้ายข้อมูล โปรดดูตารางสำหรับข้อมูลเพิ่มเติมเกี่ยวกับประเภทสภาพอากาศ การใช้งานนอกช่วงนี้อาจส่งผลต่ออุณหภูมิภายใน
- หากใช้งานตู้เย็นในอุณหภูมิที่เย็นกว่า ตู้เย็นจะไม่เสียหายเมื่ออุณหภูมิต่ำถึง +5°C แต่ไม่ควรใช้งานในอุณหภูมิ -10°C หรือต่ำกว่านั้นเป็นเวลานาน
- ตู้เย็นนี้ไม่ได้ออกแบบมาให้ใช้งานแบบเคลื่อนที่ ห้ามเคลื่อนย้ายขณะเครื่องกำลังทำงาน

ใช้ภายในที่พักอาศัยเท่านั้น

ระดับสภาพอากาศ	ช่วงของอุณหภูมิโดยรอบที่ใช้งานได้
SN	+10°C ถึง 32°C
N	+16°C ถึง 32°C
ST	+16°C ถึง 38°C
T	+16°C ถึง 43°C

ข้อมูลเพื่อความปลอดภัย

	คำเตือน	สัญลักษณ์นี้หมายถึงมีความเสี่ยงสูงที่จะเกิดการเสียชีวิตหรือบาดเจ็บสาหัส
	ข้อควรระวัง	สัญลักษณ์นี้หมายถึงมีความเสี่ยงสูงที่จะเกิดความเสียหายต่อทรัพย์สินหรือเกิดการบาดเจ็บส่วนบุคคล
	ข้อควรระวัง	สัญลักษณ์รูปเปลวไฟหมายถึงตู้เย็นเครื่องนี้มีความเสี่ยงที่จะเกิดอุบัติเหตุไฟไหม้

คำเตือน

ตู้เย็น

ตู้เย็นนี้บรรจุสารทำความเย็นชนิดไวไฟ (R600a: ไอโซบิวเทน) และแก๊สเป่าฉนวนความเย็น (ไฮโดรฟลูออโรคาร์บอน) ควรปฏิบัติตามข้อบังคับต่อไปนี้เพื่อป้องกันไม่ให้เกิดการติดไฟหรือเกิดการระเบิด

- ตั้งนํ้ายาให้วัตถุแหลมคมสัมผัสกับระบบทำความเย็น เนื่องจากระบบทำความเย็นที่อยู่ด้านหลังและที่อยู่ด้านในตู้เย็นมีสารทำความเย็นอยู่
- อย่าใช้อุปกรณ์กลไกหรือวิธีการอื่นใดที่เป็นการเร่งกระบวนการละลายน้ำแข็ง (ตู้เย็นนี้ใช้ระบบการละลายน้ำแข็งอัตโนมัติ)
- อย่าใช้อุปกรณ์อิเล็กทรอนิกส์ใดๆ ภายในตู้เย็น
- อย่าให้มีสิ่งใดปิดกั้นพื้นที่ว่างโดยรอบตู้เย็น
- อย่าใช้สเปรย์ที่มีสารไวไฟใกล้กับตู้เย็น เช่น สีสเปรย์
- หากระบบทำความเย็นไม่ทำงาน อย่าสัมผัสตัวรับติดผนังหรือใช้เปลวไฟ เปิดหน้าต่างแล้วระบายอากาศภายในห้องออกไป แล้วจึงปรึกษาศูนย์บริการชาร์ปเพื่อตรวจสอบและซ่อมแซม

สายไฟ ปลั๊กไฟ และเต้ารับ

ควรอ่านข้อบังคับต่อไปนี้ให้ละเอียดเพื่อป้องกันไม่ให้เกิดไฟฟ้าดูดหรือเกิดไฟไหม้

- ในระหว่างทำการติดตั้งหรือเคลื่อนย้ายตู้เย็น ควรตรวจสอบให้แน่ใจว่าสายไฟไม่เสียหาย หากปลั๊กไฟหรือสายไฟหลวม ห้ามเสียบปลั๊กไฟเด็ดขาด
- อย่าวางเต้ารับแบบพกพาที่มีหลายช่องหรือแหล่งจ่ายไฟแบบพกพาไว้ที่ด้านหลังของตู้เย็น
- เสียบปลั๊กไฟเข้ากับเต้ารับติดผนังโดยตรงและเสียบปลั๊กไฟให้แน่น อย่าใช้สายไฟพ่วงต่อหรือปลั๊กแปลงไฟ
- เสียบปลั๊กไฟเข้ากับเต้ารับที่มีแรงดันไฟฟ้าตามพิกัดที่กำหนด
- เชื่อมต่อสายดินเข้ากับขั้วสายดินให้ถูกต้อง
- อย่าจับปลั๊กไฟขณะเมื่อเปียก
- ตัดการเชื่อมต่อจากแหล่งจ่ายไฟหลักโดยถอดปลั๊กไฟหลักออกจากเต้ารับ
อย่าถอดโดยดึงสายไฟ
- ฝุ่นละอองที่เกาะสะสมอยู่บนปลั๊กไฟอาจทำให้เกิดไฟไหม้ได้ โปรดเช็ดทำความสะอาดอย่างระมัดระวัง

- ถอดปลั๊กไฟออกจากจะไม่ใช้ตู้เย็นเป็นเวลานาน
- หากสายจ่ายไฟชำรุด ต้องให้ศูนย์บริการชาร์ปเป็นผู้ทำการเปลี่ยนสายไฟ เนื่องจากต้องใช้สายไฟพิเศษเฉพาะ

การติดตั้ง

- อย่าติดตั้งตู้เย็นในบริเวณที่มีความชื้นและเปียกน้ำ เนื่องจากอาจทำให้ฉนวนเสื่อมคุณภาพหรือทำให้เกิดไฟฟ้าดูดได้ นอกจากนี้อาจมีหยดน้ำขนาดเล็กเกาะอยู่ด้านนอกตู้เย็นและทำให้ตู้เย็นเป็นสนิมได้
- ควรติดตั้งตู้เย็นให้มั่นคงและได้ระดับกับพื้น

เมื่อใช้งาน

- อย่าเก็บสารระเหยหรือวัตถุไวไฟ เช่น เบนซิน แก๊สหุงต้ม กระป๋องสเปรย์ กาว แอลกอฮอล์บริสุทธิ์ เป็นต้น ไว้ในตู้เย็น เพราะสารดังกล่าวจะเปิดได้ง่าย
 - อย่านำผลิตภัณฑ์ที่ไวต่ออุณหภูมิมาแช่ในตู้เย็น เช่น ผลิตภัณฑ์ยา เนื่องจากคุณภาพของผลิตภัณฑ์อาจด่างอาจเปลี่ยนแปลงได้
 - อย่าปรับเปลี่ยนหรือตัดแปลงตู้เย็นนี้ เนื่องจากอาจทำให้เกิดไฟไหม้ ไฟฟ้าดูด หรือเกิดการบาดเจ็บได้
 - อย่าวางเครื่องดื่มที่บรรจุขวดหรือกระป๋องในช่องแช่แข็ง โดยเฉพาะในระหว่างการทำงานในโหมด "โหมดแช่แข็งแบบเร่งด่วน" ซึ่งมีความเสี่ยงสูงที่ขวดแก้วดังกล่าวอาจจะระเบิดได้
 - อย่าวางวัตถุใดๆ ไว้บนตู้เย็น หากวัตถุดังกล่าวพลัดตกลงมาจากตู้เย็น อาจทำให้บาดเจ็บได้
 - เด็กมีอายุตั้งแต่ 8 ปี ขึ้นไป และผู้ที่มีสมรรถภาพทางกาย ประสาทสัมผัส และจิตใจบกพร่อง หรือผู้ที่ต้องประสบการณและความรู้สามารถใช้เครื่องใช้ไฟฟ้านี้ได้ หากได้รับการควบคุมดูแล หรือได้รับความรู้ในการใช้งานเครื่องใช้ไฟฟ้าอย่างปลอดภัยและทราบถึงอันตรายที่อาจเกิดขึ้นได้
- ไม่ควรให้เด็กเล่นเครื่องใช้ไฟฟ้านี้ ไม่ควรให้เด็กบำรุงรักษาหรือทำความสะอาดตู้เย็น หากไม่ได้รับการควบคุมดูแลอย่างใกล้ชิด เด็กอายุระหว่าง 3 ถึง 8 ปี อนุญาตให้เอาของใส่หรือเอาของออกจากตู้เย็นนี้ได้

การดูแลรักษาและทำความสะอาด

- ถอดปลั๊กตู้เย็นออกก่อนทุกครั้งเพื่อป้องกันไม่ให้ถูกไฟฟ้าดูด
- ห้ามฉีดน้ำโดยตรงใส่ตู้เย็นภายนอกหรือภายใน เนื่องจากอาจทำให้เกิดสนิมหรือทำให้ฉนวนไฟฟ้าเสื่อมคุณภาพได้

ปัญหาที่อาจเกิดขึ้น


- หากได้อุ่นใหม่ ให้ตั้งปลั๊กไฟออกทันที แล้วจึงปรึกษาศูนย์บริการซัพพอร์ตเพื่อตรวจสอบและซ่อมแซม
- หากแก๊สรั่ว ให้เปิดหน้าต่างเพื่อถ่ายเทอากาศในพื้นที่ดังกล่าว อย่าสัมผัสตู้เย็นหรือเต้ารับ



ข้อควรระวัง

การขนย้าย

- เมื่อทำการติดตั้งหรือย้ายตู้เย็น ควรใช้แผ่นรองเพื่อป้องกันไม่ให้พื้นได้รับความเสียหาย
- จับตู้เย็นให้แน่น หากยกตู้เย็นไม่ถูกต้อง อาจทำให้บาดเจ็บได้

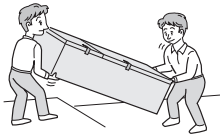

- โปรดติดต่อบริการซัพพอร์ตก่อนติดตั้งหรือเคลื่อนย้ายตู้เย็น

- ห้ามใช้ประตูในการยกตู้เย็น



การตั้ง

- ตรวจสอบให้แน่ใจว่าตู้เย็นไม่อยู่ในลักษณะที่เป็นอันตรายต่อเด็กเมื่อจัดเก็บไว้เพื่อทิ้ง (เช่น ถอดปลั๊กเครื่องชอบประตูชนิดแม่เหล็กออกเพื่อป้องกันไม่ให้เด็กติดอยู่ด้านใน)
- นำตู้เย็นไปโรงงานรีไซเคิลที่ได้มาตรฐาน วัสดุบางประเภท เช่น สารทำความเย็นที่ไวไฟ แก๊สเป่าฉนวนความเย็น แผงฉนวนสุญญากาศ (VIPs) แหล่งกำเนิดแสง และส่วนประกอบไฟฟ้า ควรได้รับการรีไซเคิลอย่างถูกต้อง

เมื่อใช้งาน

- อย่าสัมผัสชุดคอมเพรสเซอร์หรือชิ้นส่วนรอบข้างของคอมเพรสเซอร์ เนื่องจากชิ้นส่วนดังกล่าวมีความร้อนสูง และอาจโดนขอบโลหะบาดได้
- อย่าใช้มือที่เปียกสัมผัสอาหารหรือภาชนะโลหะในช่องแช่แข็ง เนื่องจากอาจทำให้เกิดการบาดเจ็บจากความร้อนจัดได้
- อย่าใช้น้ำประเภทอื่นนอกจากน้ำดื่มในการทำน้ำแข็ง
- อย่าวางเครื่องดื่มที่บรรจุขวดหรือกระป๋องในช่องแช่แข็ง
- ห้ามเปิดหรือปิดประตูเมื่อมีผู้อื่นวางมือใกล้ประตู เนื่องจากนิ้วมืออาจเสี่ยงที่จะโดนหนีบได้
- ห้ามวางวัตถุที่มีขนาดใหญ่เกินไปในช่องประตู หากวัตถุตกลงมาอาจทำให้ได้รับบาดเจ็บได้
- โปรดระมัดระวังในการจัดการชิ้นวางกระจุก ขณะติดตั้งหรือถอดออก หากทำชิ้นวางตกอาจทำให้กระจกแตก หรือทำให้เกิดการบาดเจ็บได้

การติดตั้ง

ชนิดติดตั้งบนพื้น


- 1** ควรวางตู้เย็นในระยະที่พอเหมาะให้สามารถถ่ายเทอากาศรอบตู้เย็นได้สะดวก ภาพแสดงพื้นที่ว่างที่ต้องเว้นไว้ขั้นต่ำสำหรับติดตั้งตู้เย็น เงื่อนไขการวัดการเปลี่ยนแปลงพลังงานจะกระทำภายใต้ขนาดพื้นที่ที่แตกต่างกัน

พื้นที่ว่างด้านหลัง

พื้นที่ว่างระหว่างด้านหลังของตู้เย็นและผนังควรมีระยะห่างตั้งแต่ 50 มม. ขึ้นไป แต่ไม่เกิน 75 มม. หากพื้นที่ว่างกว้างกว่า 75 มม. อาจมีความเสี่ยงต่อการบาดเจ็บจากการสัมผัสคอมเพรสเซอร์ที่ร้อนและชิ้นส่วนรอบข้างขณะทำงาน

หมายเหตุ

- การเว้นระยะห่างมากขึ้น อาจช่วยลดการใช้พลังงานของตู้เย็น
- หากติดตั้งตู้เย็นในพื้นที่เล็กกว่าที่กำหนด อาจส่งผลให้อุณหภูมิภายในสูงขึ้น เสียงดังขึ้น และอาจเกิดการทํางานผิดปกติ
- อย่างวางตู้เย็นชิดผนัง ผนังรอบตู้เย็นอาจเกิดคราบสกปรกหรือสีอาจซีดได้ เนื่องจากกระแสลมที่เกิดจากการแผ่รังสีความร้อน

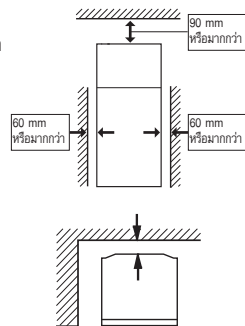


พื้นที่ว่างทั้งหมดที่ต้องเว้นไว้เมื่อใช้งาน

- 2** ใช้ขาตั้งปรับระดับวางตู้เย็นให้มั่นคงและได้ระดับกับพื้น


หมายเหตุ

- วางตู้เย็นในตำแหน่งที่สามารถเข้าถึงปลั๊กไฟได้
 - ไม่ควรให้ตู้เย็นโดนแสงแดดส่องโดยตรง และอย่าวางไว้ใกล้กับเครื่องใช้ไฟฟ้าที่เป็นแหล่งกำเนิดความร้อน
 - ห้ามนำวัสดุที่ใช้ในการบรรจุเป็นแท่นยืนวางตู้เย็นบนพื้นที่มีความมั่นคง และห้ามวางตู้เย็นบนพื้นดินโดยตรง หากวางตู้เย็นบนพื้นดิน ให้ใช้แผ่นไม้หรือฐานรองที่เหมาะสมรองไว้
- ก่อนใช้งานตู้เย็น**
- ทำความสะอาดส่วนประกอบต่างๆ ที่อยู่ภายในให้สะอาดโดยใช้ผ้าชุบน้ำอุ่น หากใช้น้ำสบู่อ่อนๆ ทำความสะอาด ให้เช็ดออกให้หมดด้วยผ้าชุบน้ำสะอาด
 - นำวัสดุบรรจุภัณฑ์ออก (โฟมกันกระแทกและเทปกาว)

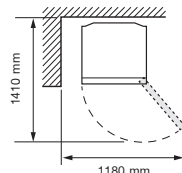

ภาษาไทย

รายละเอียดชิ้นส่วนของตู้เย็น

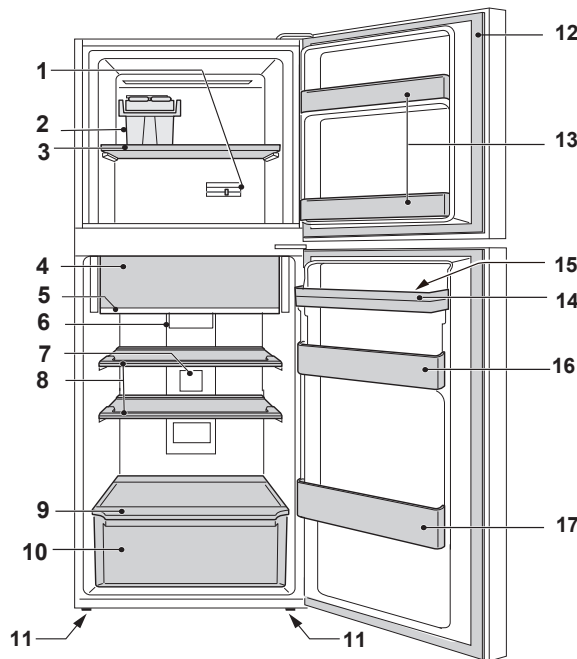

✱ *** ช่องแช่เยือกแข็ง 4 ดาว


SJ-XP500TP

1. ปุ่มควบคุมอุณหภูมิ
2. อุปกรณ์ทำน้ำแข็งแบบถอดได้
3. ชั้นวางในช่องแช่แข็ง
4. ประตูช่องรักษาความสด
5. ลินชักช่องรักษาความสด
6. หลอดไฟ
7. แผงควบคุมการทำงาน
8. ชั้นวางของในช่องแช่เย็น (2 ชั้น)
9. ชั้นวางแช่ผัก
10. ถังใส่ผัก
11. ขาตั้งปรับระดับ
12. ยางรองขอบประตูชนิดแม่เหล็ก
13. ชั้นวางของที่ประตูช่องแช่แข็ง

14. ถาดวางไข่
- SJ-XP470TP : 2 ชั้น
15. ชั้นวางไข่
16. ชั้นวางของที่ประตูช่องแช่เย็น (เฉพาะรุ่น SJ-XP500TP)
17. ชั้นวางขวด

ชุดกำจัดกลิ่น

ตัวทำปฏิกิริยาในการกำจัดกลิ่นจะถูกติดตั้งไว้ตามเส้นทางของลมเย็น จึงไม่จำเป็นต้องเปิดให้ทำงานและไม่ต้องทำความสะอาด

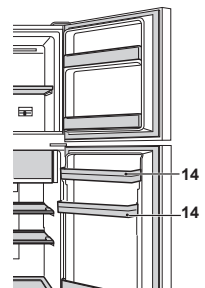

หมายเหตุ


- โปรดแน่ใจว่าได้ดันลิ้นชักและกล่องที่เลื่อนได้เข้าไปจนสุดหลังการใช้งาน

พลาสมาคลัสเตอร์

ระบบพลาสมาคลัสเตอร์จะเริ่มทำงานอัตโนมัติเมื่อเสียบปลั๊กไฟ เครื่องกำเนิดอนุภาคไฟฟ้าที่อยู่ในตู้เย็นจะปล่อยกลุ่มประจุอนุภาค (คลัสเตอร์ไอออน) ซึ่งจะมีทั้งประจุไฟฟ้าบวกและลบออกมายังบริเวณช่องแช่เย็น กลุ่มประจุไฟฟ้าเหล่านี้จะลดจำนวนเชื้อราในอากาศ

หมายเหตุ

ในตู้เย็นอาจมีกลิ่นเกิดขึ้นได้เล็กน้อย ซึ่งเป็นกลิ่นของโอโซนที่เกิดจากเครื่องกำเนิดอนุภาคไฟฟ้า โดยปริมาณของโอโซนจะมีเพียงเล็กน้อยและกลิ่นจะสลายไปอย่างรวดเร็ว

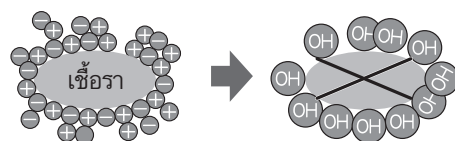

อุปกรณ์ทำน้ำแข็งแบบถอดได้




คำเตือน : โปรดใช้น้ำดื่มเท่านั้น


คุณสามารถวางถาดทำน้ำแข็งที่ได้ก๊อได้ภายในช่องแช่แข็ง

ทางเราขอแนะนำให้อัดน้ำแข็งถอดออกได้ตามภาพประกอบใน “รายละเอียดชิ้นส่วนของตู้เย็น”

- 1) เทน้ำลงในถาดทำน้ำแข็ง
อย่าเติมน้ำเกินปริมาณที่กำหนดในถาดน้ำแข็ง มิฉะนั้นน้ำแข็งจะติดกันเมื่อแข็งตัว

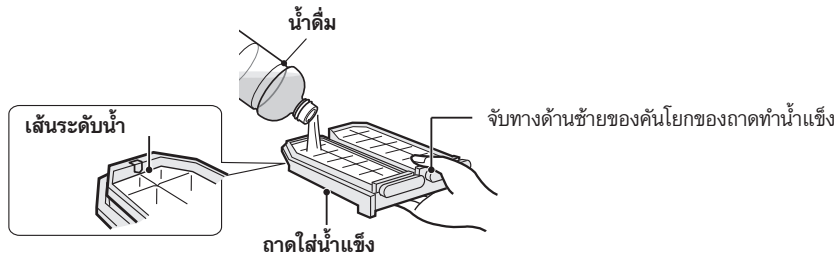

- 2) เมื่อน้ำในถาดกลายเป็นน้ำแข็งแล้ว ให้หมุนที่บิดตามเข็มนาฬิกา
น้ำแข็งจะหล่นลงในถาดใส่น้ำแข็ง

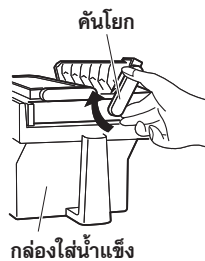

หมายเหตุ


เพื่อป้องกันความเสียหาย:

- ห้ามทำน้ำแข็งโดยตรงในถาดใส่น้ำแข็ง
โปรดระวังอย่าให้น้ำหกจากถาดน้ำแข็ง โดยวางให้เรียบเสมอ
- การแช่แข็งสารอื่นที่ไม่ใช่น้ำอาจทำให้เกิดความเสียหาย รวมถึงการเสื่อมสภาพของวัสดุหรือการเปลี่ยนสี

วิธีติดตั้งสปริงที่ถาดน้ำแข็ง

หากสปริงของถาดน้ำแข็งหลุดออกมา ให้ทำตามคำแนะนำด้านล่างนี้

- 1 สอดชิ้นส่วนรูปตัว L ของสปริงเข้าไปในช่องที่ตัวล็อคถาดน้ำแข็ง

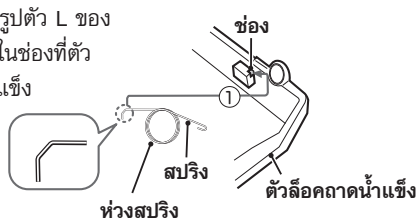

- 2 เกี่ยวชิ้นส่วนรูปตะขอตัวย U ไปยังถาดน้ำแข็ง


- 3 หมุนหัวสปริงเข้าไปยังสลักและใส่ให้พอดีกับตัวล็อคถาดน้ำแข็ง



- 4 ติดตั้งคั่นโยกที่ตัวล็อคถาดน้ำแข็ง

ข้อควรระวัง


โปรดระวังอย่าให้รับบาดเจ็บจากขอบของสปริง

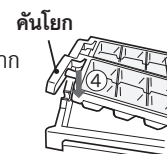

แผงควบคุมการทำงาน / การตั้งค่าอุณหภูมิ

อุณหภูมิภายในอาจเปลี่ยนแปลงไปตามสภาพการติดตั้งและความถี่ในการเปิดประตู
คุณสามารถปรับอุณหภูมิให้เหมาะสมตามประสิทธิภาพการทำงานเย็น

แผงควบคุมการทำงาน

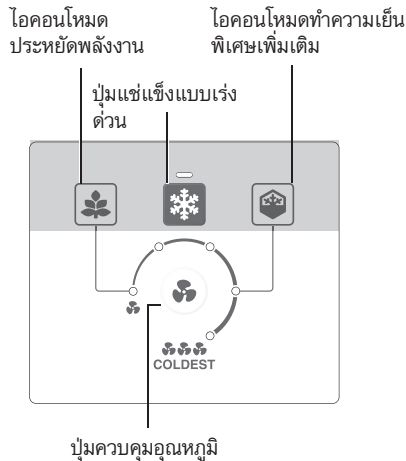


โหมดทำความเย็นพิเศษเพิ่มเติม

การตั้งค่านี้ใช้สำหรับเครื่องดื่มหรือแช่เย็นอาหาร

ข้อควรระวัง

ห้ามนำขวดแก้วและกระป๋อง
เข้ามาแช่แข็งใน เนื่องจากมี
ความเสี่ยงสูงที่จะเกิดการระเบิด

ช่องแช่อาหาร
เย็นจัด

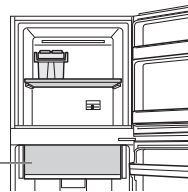

หมายเหตุ

- อาหารที่มีความชื้นสูงอาจกลายเป็นน้ำแข็ง
- เปิดประตูตู้เย็นให้น้อยครั้งที่สุดเท่าที่จะทำได้ในระหว่างใช้งานโหมดการทำงานนี้

โหมดประหยัดพลังงาน

การตั้งค่านี้เพื่อเปลี่ยนตู้เย็นไปสู่วิธีประหยัดพลังงานในขณะที่การ
ตั้งค่านีกำลังทำงาน อุณหภูมิภายในตู้เย็นและช่องแช่แข็งจะสูงกว่า
การตั้งค่าเริ่มต้นดังต่อไปนี้

	ช่องแช่แข็ง	ช่องแช่เย็น
ในโหมด "ประหยัดพลังงาน"	บวก 3°C โดยประมาณ	บวก 4°C โดยประมาณ

ปิดการทำงานของโหมดประหยัดพลังงาน หากเครื่องดื่มหรืออาหาร
ไม่เย็นตามที่ผู้ต้องการ หรือโหมดการทำน้ำแข็งใช้เวลาในการทำน้ำ
แข็งนานเกินไป

หมายเหตุ

- ประสิทธิภาพของการประหยัดพลังงานขึ้นอยู่กับสภาพแวดล้อมในการใช้งาน (การควบคุมอุณหภูมิ, อุณหภูมิโดยรอบ ความถี่ในการเปิดหรือปิดประตู ปริมาณอาหาร)


การตั้งค่าอุณหภูมิ

<ช่องแช่เย็น>

กดปุ่มควบคุมอุณหภูมิ


เมื่อกดปุ่ม ไฟแสดงผลจะเปลี่ยนไปตามที่แสดงด้านล่างเมื่อกดปุ่ม
ไฟแสดงสถานะจะเปลี่ยนแปลงดังภาพด้านล่าง

(① → ② → ③ → ④ → ⑤ → ① → ② → ③ → ④ → ⑤)

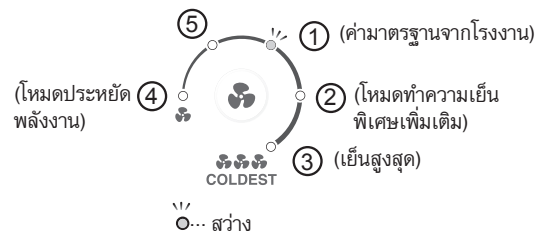

<ช่องแช่แข็ง>

เลื่อนคันโยกไปทางขวาเพื่อเพิ่มความเย็น

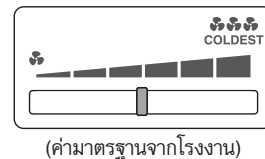

หมายเหตุ


- คันโยกนี้ควบคุมการไหลของอากาศไปยังช่องเก็บอาหารในตู้เย็น
- “เย็นสูงสุด” จะลดการไหลเวียนของอากาศไปยังช่องแช่แข็งและเพิ่มประสิทธิภาพการทำงานเย็นในช่องแช่แข็ง

การตั้งค่าอุณหภูมิที่แนะนำ

	คันโยก	ไฟแสดงระดับอุณหภูมิ
ปกติ		
ในฤดูหนาว (เย็นกว่า 10°C)	 • ตั้งค่าไปยังด้านขวา • อย่าตั้งค่าไปยังด้านซ้าย	

การตั้งค่าอุณหภูมิขั้นสูง

กดปุ่มควบคุมอุณหภูมิค้างไว้ 3 วินาที เพื่อเข้าสู่การตั้งค่าขั้นสูง
โปรดปฏิบัติตามขั้นตอนเดิมเพื่อยกเลิกการตั้งค่านี้

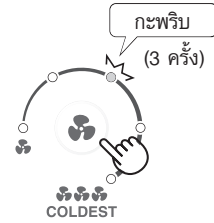

เมื่อกดปุ่ม ไฟแสดงสถานะจะเปลี่ยนแปลงดังภาพด้านล่าง
(7→8→9→10→11→12→13→1→2→3→4→5→6→7)

○... ปิดการทำงาน ❄... ติดสว่าง ✨... โฟกะพริบ (ช้า) ✨... โฟกะพริบ (รวดเร็ว)

1	2	3	4	5	6	7	8	9	10	11	12	13
โหมด ประหยัด พลังงาน						ค่ามาตรฐาน จากโรงงาน			โหมด ทำความเย็น พิเศษเพิ่ม เต็ม *			เย็นสูงสุด

* เฉพาะช่องแช่เย็นเท่านั้น


❄ โหมดแช่แข็งแบบเร่งด่วน

โหมดนี้จะช่วยเร่งเวลาในการแช่แข็งอาหารหรือการทำน้ำแข็ง

ข้อควรระวัง

ห้ามนำขวดแก้วและกระป๋องเข้ามาแช่ข้างใน
เนื่องจากมีความเสี่ยงสูงที่จะเกิดการระเบิด

วิธีเปิด/ปิด
กดปุ่มโหมด

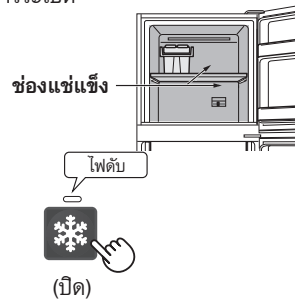

หมายเหตุ

- โหมดนี้จะหยุดการทำงานโดยอัตโนมัติ
- ใช้เวลาในการทำงานปกติประมาณ 2 ชั่วโมง
อย่างไรก็ตาม อาจใช้เวลานานจนกว่าจะเสร็จสิ้น
หากมีการทำงานซ้อนทับกันกับการละลายน้ำแข็ง
โหมดนี้จะเริ่มทำงานหลังจากละลายน้ำแข็งเสร็จแล้ว
- เปิดประตูช่องแช่แข็งให้น้อยครั้งที่สุดเท่าที่จะทำได้ในระหว่างใช้
งานโหมดการทำงานนี้
- ในกรณีของไฟฟ้าดับ โหมดการทำงานนี้จะยกเลิกการทำงาน
อัตโนมัติ

การเก็บอาหารในตู้เย็น

- ตรวจสอบให้แน่ใจว่าอาหารมีคุณภาพสดใหม่ที่สุดเพื่อเพิ่มอายุการเก็บรักษาอาหารที่เน่าเสียง่ายต่อไปนี้เป็นคำแนะนำทั่วไปเพื่อช่วยให้การเก็บรักษาอาหารยาวนานยิ่งขึ้น
- อาหารมีอายุในการเก็บรักษาที่จำกัด ตรวจสอบให้แน่ใจว่า ผู้ใช้บริโภคภายในเวลาที่กำหนดโดยผู้ผลิต

ผลไม้/ผัก

ผลไม้และผักควรห่อด้วยวัสดุพลาสติกอย่างหลวมๆ เช่น พลาสติกปิดอาหารหรือถุง (โดยไม่ปิดสนิท) และวางในช่องแช่ผักเพื่อลดการสูญเสีย

ผลิตภัณฑ์จากนมและไข่

- ผลิตภัณฑ์จากนมส่วนใหญ่จะมีวันหมดอายุแสดงไว้บนบรรจุภัณฑ์ด้านนอกซึ่งจะระบุอุณหภูมิที่เหมาะสมและอายุของอาหารไว้
- ควรเก็บไข่ไว้ที่ถาดวางไข่

เนื้อ / ปลา / ไก่

- ควรวางบนจานและห่อหุ้มด้วยกระดาษหรือพลาสติกห่ออาหาร
- หากเนื้อ ปลา หรือไก่ชิ้นใหญ่ ควรวางไว้ด้านในสุดของชั้นวาง
- อาหารที่ปรุงสุกแล้วควรห่อหุ้มให้มิดชิดหรือใส่กล่องภาชนะบรรจุอัดลม

เพื่อให้การแช่แข็งมีประสิทธิภาพ


- ควรเลือกอาหารที่สดและสะอาด
- ควรแช่แข็งอาหารในปริมาณที่ไม่มากนักเพื่อให้แช่แข็งได้รวดเร็ว
- ควรเก็บอาหารไว้ในภาชนะที่ปิดฝาแน่นหนา
- จัดวางอาหารให้กระจายทั่วช่องแช่แข็ง
- เขียนวันที่เก็บอาหารปิดไว้บนภาชนะบรรจุเพื่อควบคุมความสด หากต้องการแช่ของที่มีขนาดใหญ่ไว้ภายในตู้เย็น
- คุณสามารถถอดเครื่องทำน้ำแข็งแบบถอดได้ และชั้นวางในช่องแช่แข็งออกได้
- สมรรถภาพในการทำความเย็นจะไม่ได้รับผลกระทบใดๆ ถึงแม้ว่าจะใช้ตู้เย็นในสถานการณ์ดังกล่าว

*หมายเหตุสำหรับการเก็บอาหารสด

- อาหารสด (ควรปิดมิดชิด) นั้นควรเก็บด้วยเวลาที่จำกัดเพื่อป้องกันการเน่าเสียและส่งผลเสียต่ออาหารอื่นๆ ที่เก็บไว้

คำแนะนำในการประหยัดพลังงาน

- ติดตั้งตู้เย็นในบริเวณที่อากาศถ่ายเทได้ดี และเว้นที่ว่างให้เหมาะสมเพื่อถ่ายเทอากาศ
- ปริมาณการสิ้นเปลืองพลังงานของตู้เย็นรุ่นนี้วัดค่าตามที่แสดงในรูปด้านล่าง

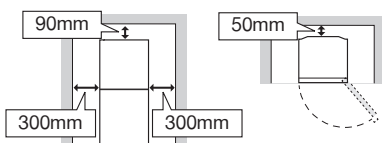


- ไม่ควรให้ตู้เย็นโดนแสงแดดส่องโดยตรงและอย่าวางไว้ใกล้กับเครื่องใช้ไฟฟ้าที่เป็นแหล่งกำเนิดความร้อน
- เปิดประตูตู้เย็นให้น้อยครั้งที่สุดเท่าที่จะทำได้
- อาหารร้อน ควรรอให้เย็นก่อน แล้วจึงนำไปแช่ในตู้เย็น
- วางอาหารไว้บนชั้นวางโดยกระจายสม่ำเสมอเพื่อให้ลมเย็นหมุนเวียนได้อย่างทั่วถึง

คำแนะนำเพื่อป้องกันไม่ให้เกิดหยดน้ำหรือน้ำแข็งภายในตู้เย็น

- ปิดประตูให้สนิท หากอาหารตกลงไประหว่างตัวตู้กับประตู ควรนำกลับไปวางบนชั้นวางหรือช่องเก็บของ
- อาหารที่มีความชื้นสูงควรเก็บไว้ในภาชนะบรรจุอัดลมหรือปิดฝาให้แน่น

คำแนะนำในการเก็บรักษาอาหาร

- วางอาหารไว้บนชั้นวางโดยกระจายสม่ำเสมอเพื่อให้ลมเย็นหมุนเวียนได้อย่างทั่วถึง
- หากประตูถูกเปิดทิ้งไว้นานเกินไป อุณหภูมิภายในอาจเพิ่มขึ้นอย่างมาก
- อาหารร้อน ควรรอให้เย็นก่อน แล้วจึงนำไปแช่ในตู้เย็น การเก็บอาหารที่ร้อนอยู่ในทันทีจะเพิ่มอุณหภูมิให้ตู้เย็นสูงขึ้น และอาจทำให้อาหารเน่าเสียได้
- อย่าวางอาหารหรือภาชนะปิดกั้นช่องทางเข้าและออกของวงจรการไหลเวียนอากาศเย็น มิฉะนั้น อาหารจะไม่เย็นทั่วถึงภายในตู้เย็น
- อย่าวางอาหารหน้าทางออกของลมเย็น เนื่องจากอาจทำให้อาหารแข็งตัวได้

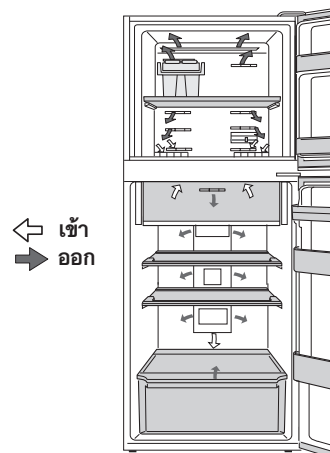

การดูแลรักษาและทำความสะอาด

ข้อสำคัญ


ปฏิบัติตามคำแนะนำด้านล่างนี้ เพื่อป้องกันรอยแตกร้าวบนพื้นผิวด้านในและชิ้นส่วนที่เป็นพลาสติก

- เช็ดคราบน้ำมันอาหารที่ติดอยู่กับชิ้นส่วนพลาสติกออก
- สารเคมีในครัวเรือนบางชนิดอาจทำให้เกิดความเสียหายต่อตู้เย็น โดยเฉพาะน้ำยาทำความสะอาดเงาเงา (น้ำสบู่)
- เช็ดทำความสะอาดน้ำยาทำความสะอาดหรือสบู่ที่ไม่ได้เจือจางให้หมด เพื่อป้องกันการแตกของชิ้นส่วนพลาสติก

การทำความสะอาด

เพื่อสุขอนามัยที่ดี ควรทำขั้นตอนต่อไปนี้เสมอ

- ใช้ผ้าชุบน้ำอุ่นผสมน้ำสบู่เช็ดทำความสะอาดด้านใน แล้วใช้ผ้าชุบน้ำสะอาดเช็ดคราบสบู่ออกให้หมด
- สำหรับอุปกรณ์เสริมที่ถอดได้ ให้ล้างพื้นผิวด้วยน้ำสบู่ จากนั้นล้างด้วยน้ำสะอาดและเช็ดให้แห้งสนิท
- เช็ดตัวตู้ภายนอกด้วยผ้านุ่มทุกครั้งที่เป็น
- ใช้แปรงสีฟันและน้ำอุ่นผสมน้ำยาล้างจานทำความสะอาดประตูแม่เหล็ก
- ห้ามวางชั้นวางบนสลัก
- โปรดแน่ใจว่าได้ใส่ชั้นวางได้ตรงรางตะขอของชั้นวางควรอยู่ด้านหน้าและคว่ำลง หากชั้นวางไม่ตั้งอยู่ในตำแหน่งที่ถูกต้อง อาจทำให้ตกหล่นได้

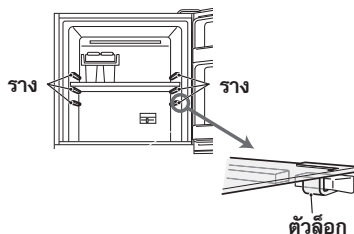

หมายเหตุ

- หลังจากทำความสะอาดเสร็จ โปรดใส่ชั้นวาง กลับลงเก็บต่างๆ กลับเข้าไปตำแหน่งเดิม
- ไม่ควรใช้น้ำยาทำความสะอาดหรือสารละลายที่มีฤทธิ์รุนแรงทำความสะอาดตู้เย็น (เช่น แอลกอฮอล์, ซี, ผงขัดเงา, เบนซิน, น้ำร้อน ฯลฯ) เนื่องจากอาจทำให้เกิดความเสียหายได้
- เมื่อคุณถอดปลั๊กสายไฟออก ให้รออย่างน้อย 5 นาทีก่อนที่จะเสียบปลั๊กกลับเข้าไป
- ชั้นวางที่เป็นกระจกแต่ละชั้นมีน้ำหนัก จึงควรจับให้แน่นเมื่อถอดออกจากตู้
- ห้ามปล่อยให้วัตถุตกหล่นภายในตู้เย็น หรือชนกับผนังด้านใน เนื่องจากอาจทำให้เกิดรอยร้าวที่ผิวด้านในได้

การละลายน้ำแข็ง

การละลายน้ำแข็งจะมีการควบคุมโดยอัตโนมัติด้วยระบบประหยัดพลังงานพิเศษ

หากหลอดไฟภายในตู้เย็นเสีย

ติดต่อศูนย์บริการซาร์ปเพื่อเปลี่ยนหลอดไฟ

ควรเปลี่ยนหลอดไฟโดยช่างซ่อมที่มีความเชี่ยวชาญเท่านั้น


การปิดเครื่อง

หากต้องการดึงปลั๊กไฟตู้เย็นออกเป็นระยะเวลานาน ควรปฏิบัติตามขั้นตอนต่อไปนี้เพื่อลดการเจริญเติบโตของเชื้อรา:

1. นำอาหารออกให้หมด
2. ถอดปลั๊กไฟออกจากเต้ารับ
3. ทำความสะอาดภายในตู้เย็นแล้วเช็ดให้แห้ง
4. แจมประตูตู้เย็นเปิดทิ้งไว้ประมาณ 2 - 3 วัน เพื่อให้ภายในตู้เย็นแห้งสนิท

คำแนะนำก่อนเรียกช่างบริการ

ก่อนเรียกช่างบริการ ควรตรวจสอบตามหัวข้อดังต่อไปนี้

ปัญหา	การแก้ไข
เมื่อสัมผัสด้านนอกตู้เย็นแล้วร้อน	โดยปกติด้านข้างทั้งสองของตู้เย็นจะร้อน เนื่องจากช่องแผงระบายความร้อนไว้เพื่อป้องกันไอน้ำเกาะรอบตู้
เมื่อมีเสียงดังออกมาจากตู้เย็น	ถือว่าเป็นปกติหากตู้เย็นมีเสียงดังต่อไปนี้ ● เสียงดังที่เกิดจากการเริ่มทำงานของคอมเพรสเซอร์ -- ระดับเสียงจะลดลง เมื่อคอมเพรสเซอร์ทำงานได้ระยะหนึ่ง ● คอมเพรสเซอร์ส่งเสียงดังวันละครั้ง -- เสียงจากการทำงานดังกล่าวจะได้ยินทันทีหลังจากการละลายน้ำแข็งอัตโนมัติแล้ว ● เสียงที่เกิดขึ้นจากการไหลของน้ำยา (เสียงจ๊อจ๊อ เสียงฟู่ๆ) -- เสียงสารทำความเย็นไหลอยู่ในท่อ (เสียงอาจดังมากขึ้นเรื่อยๆ) ● เสียงคล้ายกับเสียงแตกร้าวหรือเสียงลั่นของชิ้นส่วนพลาสติก -- เสียงนี้เกิดจากการขยายตัวและหดตัวของผนังด้านในและชิ้นส่วนภายในตู้เย็นในระหว่างการทำความเย็น
เมื่อเกิดหยดน้ำหรือน้ำแข็งที่บริเวณด้านในหรือด้านนอกตู้เย็น	อาจเกิดขึ้นจากกรณีใดกรณีหนึ่งดังต่อไปนี้ ให้ใช้ผ้าเปียกเช็ดเกล็ดน้ำแข็งและใช้ผ้าแห้งเช็ดหยดน้ำให้แห้ง ● อุณหภูมิภายนอกมีความชื้นสูง ● เปิดปิดประตูบ่อยครั้ง ● เชื้ออาหารที่มีความชื้นสูง (ควรห่ออาหารดังกล่าวก่อนนำมาแช่)
อาหารในช่องแช่เย็นเย็นจัดจนแข็ง	● ตรวจสอบดูว่าตู้เย็นทำงานเป็นเวลานานโดยตั้งอุณหภูมิไว้ที่ เย็นสูงสุด (COLDEST) หรือไม่? -- เปลี่ยนการควบคุมอุณหภูมิเป็นการตั้งค่าอื่น ● หากอุณหภูมิแวดล้อมต่ำ อาหารอาจได้รับการแช่แข็งหากลูกบิดควบคุมอุณหภูมิอยู่ในตำแหน่งด้านซ้ายสุด
เกิดกลิ่นไม่พึงประสงค์ภายในตู้	● ห่ออาหารที่มีกลิ่นแรงให้มิดชิด ● ชุดกำจัดกลิ่นไม่สามารถกำจัดกลิ่นได้ทั้งหมด
ประตูตู้เย็นเปิดออกยาก	ประตูตู้เย็นอาจเปิดออกยากหลักจากการปิดประตูห้องแช่แข็ง เนื่องจากอุณหภูมิของอากาศและแรงดันภายในช่องแช่เย็นนั้นต่ำลง โปรดรอประมาณ 10-15 วินาทีเพื่อที่จะเปิดประตูตู้เย็นอีกครั้ง 

หากท่านยังต้องการเรียกศูนย์บริการ

โปรดแจ้งศูนย์บริการชาร์ปใกล้บ้านท่าน

ข้อมูลจำเพาะ

ตู้เย็นซาร์ป แบบมีช่องแช่เยือกแข็ง ระบบละลายน้ำแข็งอัตโนมัติ ประเภทช่องแช่ 4 ดาว

รุ่น		SJ-XP470TP	SJ-XP500TP
แรงดันไฟฟ้า (โวลต์)		220	
ความถี่ (เฮิรตซ์)		50	
จำนวนเฟสไฟฟ้า (เฟส)		1	
กำลังไฟฟ้าเข้า (วัตต์)		172	
ก๊าซเป่าฉนวนความเย็น		CYCLO PENTANE (NON CFC 100%)	
ชนิดของสารทำความเย็น		R-600a	
ปริมาณของสารทำความเย็น (กรัม)		50	
ปริมาณความจุ (ลิตร/คิว)		430 / 15.2	471 / 16.6
ขนาดภายนอก (มม.)	กว้าง	700	700
	ลึก	726	726
	สูง	1680	1795

* จากฉลากประหยัดไฟเบอร์ 5 ของ กฟผ.

หมายเหตุ บริษัทขอสงวนสิทธิ์ในการเปลี่ยนแปลงข้อมูลโดยมิต้องแจ้งให้ทราบล่วงหน้า

SHARP

บริษัท ชาร์ป ไทย จำกัด

อาคารพัฒนาสิน ชั้น 19-20

6/10 ถนนนราธิวาสราชนครินทร์ แขวงทุ่งมหาเมฆ

เขตสาทร กรุงเทพฯ 10120

โทรศัพท์ 0 2855 8899 โทรสาร 0 2855 8855

ศูนย์ลูกค้าสัมพันธ์ 0 2855 8888



<https://www.th.sharp>

TINS- C184 CBRZ 25AT (TH) ①