

คู่มือแนะนำการใช้งาน

หม้อหุงข้าว

รุ่น : NC-R14

Instruction Manual

Automatic Rice Cooker

Model : NC-R14




สารบัญ

ส่วนประกอบตัวเครื่อง	1
ขั้นตอนการหุงข้าว	2-3
คำเตือน / การดูแลรักษา	4
การใช้งานเครื่องใช้ไฟฟ้าที่ปลอดภัย	5
วงจร	6

CATEGORY

PARTS	7
HOW TO USE	8-9
CAUTION / MAINTENANCE PROCEDURES	10
IMPORTANT SAFEGUARDS	11
CIRCUIT	12




ขั้นตอนการหุงข้าว

1. ใช้ถ้วยตวงที่ให้มา สำหรับการการตวงข้าวใส่หม้อชั้นใน



2. สัดส่วนของการเติมน้ำให้ยึดตามข้อมูลต่อไปนี้
ปริมาณข้าว(ถ้วย) ปริมาณระดับน้ำ(ถ้วย)


15 ถ้วย	15 - 16 ถ้วย
12 ถ้วย	12 - 13 ถ้วย
10 ถ้วย	10 - 11 ถ้วย
8 ถ้วย	8 - 9 ถ้วย
6 ถ้วย	6 - 7 ถ้วย
4 ถ้วย	4 - 5 ถ้วย
2 ถ้วย	2 - 3 ถ้วย

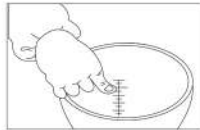

3. ใส่หม้อชั้นใน เติมน้ำตามสัดส่วน ปิดฝาหม้อ
ลองหมุนขยับหม้อชั้นในไปมา ปิดฝาให้สนิท.



4. เสียบปลั๊กไฟ ห้ามเสียบปลั๊กไฟก่อนการดำเนินการตามข้อ 1
เสร็จสิ้นแล้ว

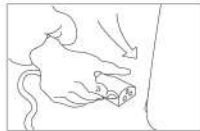


2

ขั้นตอนการหุงข้าว


5. กดสวิตช์ไปที่ตำแหน่งเริ่มหุง (Cook).




6. เมื่อข้าวสุก สวิตช์จะดังขึ้นมาเอง หลังจากสวิตช์ดังแล้ว
ให้รอ 15 นาทีให้ข้าวสุกทั่วถึงสม่ำเสมอ

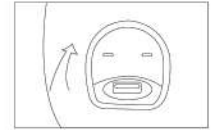

7. ถอดปลั๊ก โดยจับที่ตัวปลั๊ก ห้ามดึงที่สายไฟ.

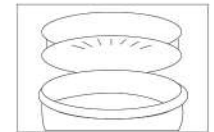

8. กรณีทำการเคี่ยว ระดับน้ำไม่ควรเกิน 70% ของปริมาณหม้อ

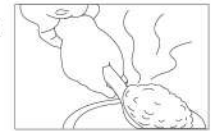

9. ห้ามปิดประตูระบายไอน้ำ

3

คำเตือน

1. ก่อนทำการหุงข้าว ให้ทำความสะอาด หม้อชั้นใน แผ่นให้ความร้อน แล้วหมุนหม้อชั้นใน
กลับไปกลับมาก เพื่อให้น้ำมันติดกับแผ่นให้ความร้อนด้านล่าง มิฉะนั้น หม้อหุงข้าวอาจทำงาน
ไม่สมบูรณ์หรือเกิดความเสียหายได้



การดูแลรักษา


- ถอดหม้อชั้นใน และฝา มาล้างทำความสะอาดด้วยน้ำอุ่นผสมน้ำยาล้างจาน แล้วเช็ดให้แห้งด้วยผ้า
- ทำความสะอาดภายนอกด้วยผ้าหมาด ห้ามใช้ฟอยขัด และห้ามจุ่มหรือแช่ในน้ำยกเว้นหม้อชั้นในและฝาปิด
- กรณีทำความสะอาดแผ่นให้ความร้อน และแผ่นควบคุมความร้อนให้ใช้ฟอยโลหะขัดเบาสิ่งสกปรกออก
แล้วเช็ดด้วยผ้าหมาด ทั้งให้แห้งสนิทก่อนการใช้งาน ต้องคอยดูแลไม่ให้แผ่นให้ความร้อน และแผ่นควบคุม
ความร้อนสกปรก เพราะอาจทำให้การทำงานผิดพลาดได้
- การทำความสะอาดที่ไม่เหมาะสมอาจทำให้เกิดกลิ่นไม่พึงประสงค์ได้
- ควรดักด่างของน้ำส้มสายชูหรือเกลืออาจทำให้เกิดการหมักหมมได้

4

การใช้งานเครื่องใช้ไฟฟ้าให้ปลอดภัย ต้องปฏิบัติตามนี้



- อ่านคู่มือการใช้งานให้เข้าใจ
- ห้ามสัมผัสพื้นผิวร้อน ให้จับที่มือจับหรือปุ่มจับ
- เพื่อป้องกันอันตรายจากไฟฟ้า ห้ามนำสายไฟ หรือสวิตช์หรืออะไหล่ของเหลวอื่นๆ
- การใช้งานโดยเด็ก หรือใช้งานใกล้เด็กต้องมีคนคอยดูแลอย่างใกล้ชิดตลอดเวลา
- ถอดปลั๊กไฟเมื่อไม่ได้ใช้งาน หรือก่อนทำความสะอาด และรอให้เย็นก่อนทำการแยกถอดชิ้นส่วน
- ห้ามใช้งานถ้าสายไฟชำรุด หรือ หลังจากเครื่องทำงานผิดปกติหรือเสียงหาย ให้ส่งคืนศูนย์บริการ
เพื่อทำการตรวจสอบ ซ่อม หรือเปลี่ยนเครื่อง
- การใช้งานจะใส่หรือส่วนประกอบอื่นของเครื่อง ที่ไม่ได้มาตรฐานหรือไม่ได้ผลิตโดยผู้ผลิตอาจก่อให้เกิดอันตรายหรือบาดเจ็บได้
- ห้ามใช้งานนอกอาคาร
- ห้ามวางพาดสายไฟหรือของใต้หรือบนเตา หรือที่สัมผัสความร้อน
- ห้ามวางหรือใช้งานใกล้กับเครื่องทำความเย็น หรือตู้เย็น
- การเคลื่อนย้ายเครื่องที่บรรจุข้าวสุก หรือของร้อนอื่นๆ ต้องใช้ความระมัดระวังเป็นพิเศษ
- ห้ามใช้งานลักษณะอื่นที่นอกเหนือจากที่ควรใช้งาน
- ห้ามแช่น้ำ
- เพื่อความปลอดภัยในการใช้งานเครื่องใช้ไฟฟ้าภายในบ้านเครื่องนี้ ห้ามไม่ให้เด็ก ผู้ไร้สมรรถภาพ พหุภาพ หรือผู้ที่มีความรู้
ขาดประสบการณ์ใช้งาน เว้นเสียแต่ใช้งานภายใต้การแนะนำจากผู้ดูแลหรือผู้มีความรู้เกี่ยวกับเครื่องใช้ไฟฟ้านี้
- ต้องคอยดูแลไม่ให้เด็กเล่นเครื่องใช้ไฟฟ้านี้
- ถ้าสายไฟชำรุด ต้องเปลี่ยนสายไฟที่ได้มาตรฐานเดียวกันเท่านั้น หรือเป็นสายไฟจากศูนย์บริการหรือตัวแทน
- ถ้าสายไฟชำรุด การเปลี่ยนสายไฟต้องดำเนินการโดยผู้ดูแล ศูนย์บริการหรือผู้มีความรู้เกี่ยวกับเครื่องใช้ไฟฟ้านี้

5

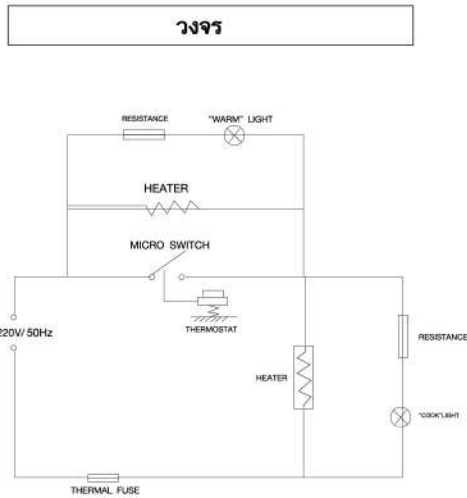

หมายเหตุ

- เครื่องใช้ไฟฟ้ามีใบรับประกันโดยบุคคล (รวมถึงเด็ก) ที่คือความสามารถทางร่างกายทางประสาทสัมผัสหรือจิตใจ หรือขาดประสบการณ์และความรู้ เว้นแต่จะได้รับการควบคุมดูแลหรือการสอนเกี่ยวกับการใช้งานเครื่องใช้ไฟฟ้า โดยบุคคลที่รับผิดชอบความปลอดภัยของบุคคลเหล่านั้น
- เด็กควรได้รับการควบคุมดูแลเพื่อให้แน่ใจว่าไม่เล่นเครื่องใช้ไฟฟ้า

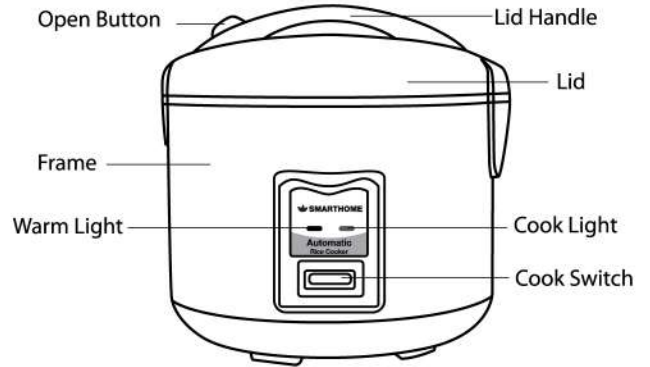


HOW TO USE

1. Using the measuring cup provided in the package, measure and add rice to the inner pot.



2. By measuring cup, add amount to water to the rice inside the inner pot according to the following standard:

Cups of Raw Rice	Water add to the inner pot
20 cups	20 - 25 1/2 cups
16 cups	16 - 20 1/2 cups
12 cups	12 - 16 1/2 cups
8 cups	8 - 12 1/2 cups
4 cups	4 - 8 1/2 cups
2 cups	2 - 4 1/2 cups

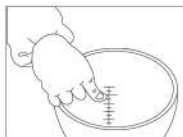

3. Set inner pot in cooker. Place rice and water in inner pot. Close the lid firmly. Turn pan gently to right and left. Close the cover firmly.



4. Plug in power cord. Do not plug in until ready to cook. Otherwise, rice may be spoiled. If pot is not in cooker, cooking will not begin.



HOW TO USE

5. Press switch. "cook" indicator tells you cooking has started.



6. When rice is done, the switch will pop up. After the switch pops up, leave covered for at least 15 minutes to steam rice.



7. Unplug after each use. Grasp the plug, not the cord.



8. When you stew, the water level should not more than 70% of the volume.



9. Do not attach the ventilating hole for fear scalding.

CAUTION

1. BEFORE STARTING TO COOK, CLEAN THE BOTTOM OF THE INNER POT AND THE SURFACE OF THE HEATER PLATE, THEN TURN THE INNER POT CLOCKWISE AND ANTI - CLOCKWISE SO THAT IT SITS PROPERLY ONTO THE HEATER PLATE INSIDE THE RICE COOKER. OTHERWISE, THE RICE COOKER WILL NOT WORK OR WILL BE DAMAGED.



MAINTENANCE PROCEDURES

1. Remove inner pot and lid and wash them in hot soapy water, taking care to rinse completely, then dry with a soft cloth.
2. Clean outside of cooker with a clean damp cloth. Never clean any part of the cooker with abrasive cleaner. Use a damp cloth or sponge with water and mild dish detergent. Do not submerge any part of cooker in water. Wash only inner pot and lid.
3. To clean the heating plate and thermo-control plate, use steel wool to polish or remove any residue. Then wipe with a damp cloth. Allow to dry completely before re-using. You must keep the heating plate and thermo-control plate free from any foreign objects, otherwise the cooker will not operate properly.
4. Improper cleaning of cooker may cause unpleasant odors.
5. Any residue to the vinegar or salt may cause pan to corrode.

10


IMPORTANT SAFEGUARDS

When using your electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions carefully.
2. Do not touch hot surfaces, use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or main body in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near by children.
5. Unplug from outlet when out in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other liquids.
12. Do not use appliance for other than intended use.
13. The appliance must not be immersed in water.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.
16. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacture or its service agent.
17. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

11

Circuit

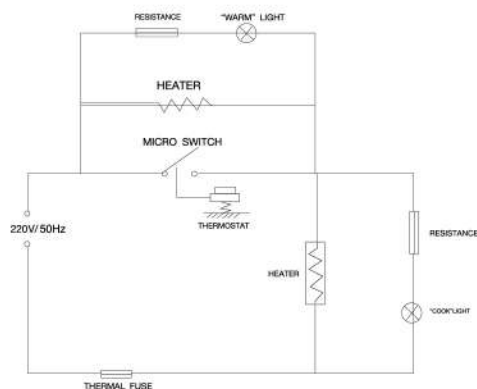

12