




INSTRUCTION MANUAL
Multi Cooker With Steamer
Model : SFP800



1 Dear customer

Thank you for choosing our multifunctional electric cooker, In order to make the product give full play to its functions and achieve the ideal use effect, Please read this manual carefully before use, And keep it for future reference. Thank you for your patronage, You are welcome to send us your valuable comments, So that we can improve. Our tenet is to satisfy customers with our products. Your trust is our greatest honor. Thank you.

2 Product Components

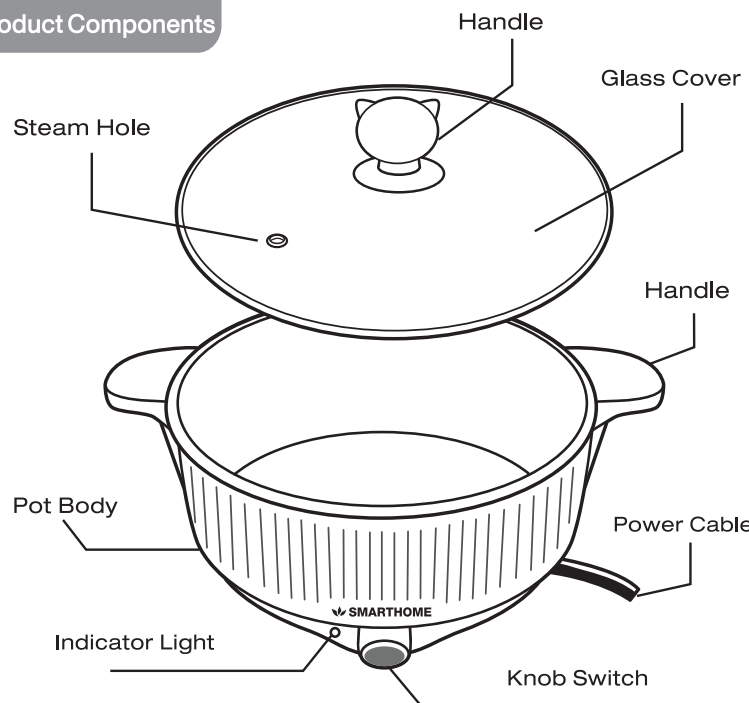

3 instructions

1. Pot utensils need to be cleaned before use, you can use 100 clean cloth or cleaning essence first dry wipe, and then cook one or two times after brushing clean can be used normally.
2. In the process of use, if there is a circle of small white spots at the bottom of the pot, this is a similar scale mark oxidized after boiling, (bleach in water and micro-mineral materials and other water quality reasons) this situation can be removed in white vinegar, hot water immersion for a minute or two.

3. In the process of use, if the pot stops working and the indicator lights go out, wait for a moment and can be used normally, this situation is the function of the anti-dry burning device, the overtemperature of the bottom of the pot, will trigger the anti-dry burning device, protect the safety of electricity consumption, encounter this situation, clean the bottom of the pot, you can continue to use it, the next use, please ensure that the bottom of the pot does not stick to the pot, you can avoid this situation.
4. After use, due to the high temperature of the heating part of the bottom of the pot, be careful not to pour out all at one time, leave a little water in the pot to fade, avoid excessive temperature to form a dry burning phenomenon, burn out the bottom of the pot.
5. With regard to the heating pipe: the heating ring used in this paragraph is combined with temperature control by heating part, which has high reliability and long life because of combined temperature control and current technology.
6. Cleaning method: after use, the inner gallbladder can be brushed with detergent and cloth, and then rinsed with clean water to dry and dry. If the shell has splashing water can be wiped dry with wet cloth, when cleaning, pay attention to the base can not be directly immersed in the water.

4 Matters needing attention

1. Please use detergent with soft cloth before the first use, clean the pot body, please do not clean the pot body with wire ball or other hard objects, so as not to destroy the non-stick ceramic layer. It is strictly forbidden to put the product directly into the water or rinse under the faucet to avoid leakage or failure of the electronic components in the water.
2. Please use qualified grounding protection and mark a power supply voltage with the nameplate to ensure the safety of use.
3. When using, please place the pot on the smooth table to ensure that the child can not be touched, in order to prevent the wrong operation or dumping caused by scald, do not put on the carpet, tablecloth or other software items, in order to prevent blocking the vent, affecting the heat dissipation effect, serious will cause fire accidents!
4. It is normal to use it for the first time if there is a slight smoke or slight scorching. Please rest assured that it is used. Caused by the incomplete removal of moisture-proof grease on the surface of electronic components.
5. The water level shall not exceed the highest water level to prevent boiling water splashing from injuring people or causing leakage and short circuit.
6. The electric pot is equipped with a high temperature protector, when the bottom of the pot exceeds 170 degrees, it will automatically turn off the power. Wait for the temperature to drop to 140 degrees and continue to turn on the electricity.
7. The use of stainless steel inner tank in the electric pot adopts U-shaped heating pipe with only half a circle of heating, and the non-stick pot tank is heated in the whole circle of the O-type heating tube.

5 Reminder

1. When this product for the first time, be sure to clean the product. Cleaning method: traddoprement water the pot and steam for about 20 minutes to achieve the disinfection effect and then clean it with and For one time before normal use.
2. When the machine is working do not touch the glass coner on the steam outlet . Please touch with your handle to avoid scalding.
3. When the machine is used the bottom of the pot may turn white because the heating tube directly heats the inner tank, and the surface touches the water, causing slight oxidation in addition, due to different water quality there will be trace impurities precipitation during heating which can be avoided by timely scrubbing after use.
4. The phenomenon is normal does not affect the normal use no harm to human body
5. There is a high temperature protector installed inside the electric cooker. When the bottom of the cooker exceeds 170 degrees the power will be cut off automatically when the temperature drops to 140 C. continue to heat.

6 Maintenance and cleaning

1. After use, please unplug the power plug from the power socket in time
2. Inner liner, glass cover, steamer and other auxiliary equipment can be cleaned with detergent and sponge, do not use hard steel wire cleaning, so as not to damage the surface
3. When the body is dirty can be wiped with a wet towel. Please do not put the body into water for cheating so as to avoid electric and failure
4. Due to the different water quality in different regions, hard water will produce scale under long-term heating conditions, which is harmless to health, but will affect the normal heating and beauty of the product. Therefore, it is necessary to clean it regularly. The basic reference content is use common edible white vinegar and water in the ratio of 1:2 boil the water, place it for about 10 minutes, pour it out, and clean it with clean water, it can basically remove
5. When the product is not used for a long time, please clean it, put it in the packing box, and put it in a ventilated and dry place, so as not to be affected by damp and affect the use.

13 cm.

19 cm.




คู่มือการใช้งาน
กระทะไฟฟ้าอเนกประสงค์
Model : SFP800



1 เกี่ยวกับลูกค้า

ขอบคุณที่เลือกใช้ กระทะไฟฟ้าอเนกประสงค์ของเรา เพื่อให้ผลิตภัณฑ์สามารถใช้งานได้เต็มรูปแบบ และบรรลุผลการใช้งานที่ดีเยี่ยม โปรดอ่านคู่มือการใช้งานนี้อย่างละเอียดก่อนใช้งาน และเก็บไว้เพื่อใช้อ้างอิงในอนาคต

2 ส่วนประกอบของผลิตภัณฑ์

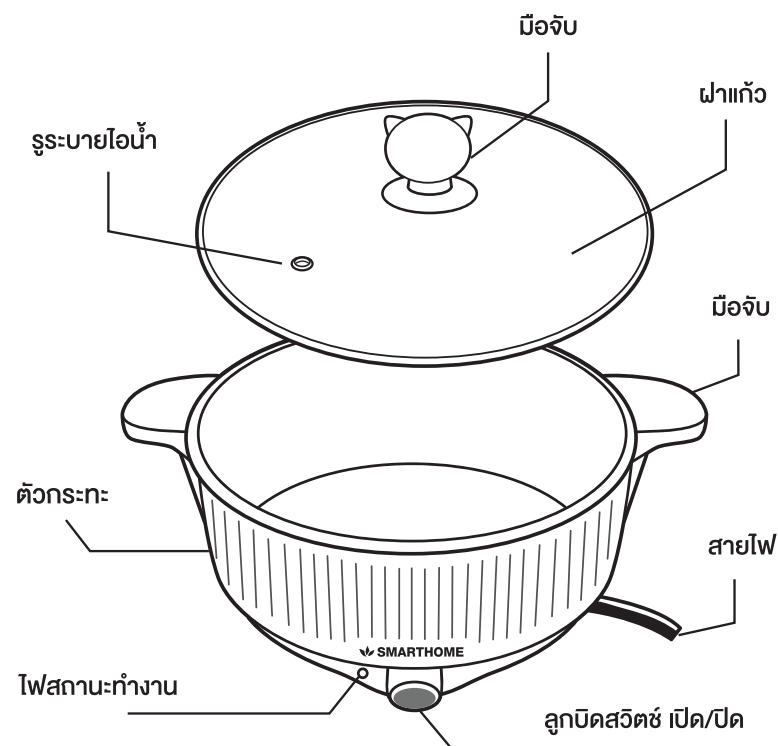

3 คำแนะนำ

1. กระทะความสะอาดกระทะก่อนการใช้งานทุกครั้ง คุณสามารถใช้ผ้าสะอาด ขูดน้ำมันสลายจากจานก่อนใช้ กระทะความสะอาด แล้วขัดให้แห้งก่อนการทำอาหาร
2. หลังจากการใช้งาน หากเกิดจุดสีขาวหรือวงกลมเล็กๆ ที่ก้นกระทะ นั่นคือการออกซิไดซ์หลังจากการเดือดของน้ำ (ตะกอนในน้ำ และแร่ธาตุขนาดเล็ก) วัสดุคราบได้โดยการต้มน้ำสลายไปในเวลาหนึ่งหรือสองนาทีก่อนใช้ (ตะกอนในน้ำ และแร่ธาตุขนาดเล็ก) วัสดุคราบได้โดยการต้มน้ำสลายไปในเวลาหนึ่งหรือสองนาทีก่อนใช้
3. ในขั้นตอนการใช้งาน หากกระทะหยุดการทำงาน และไฟแสดงสถานะดับลงหรือสวิตช์ กระทะจะใช้งานได้อีกครั้งตามปกติ สถานการณ์นี้เกิดจาก ตัวตัดไฟเมื่ออุณหภูมิที่สูงเกินไป กระทะจะทำการตัดไฟอัตโนมัติเพื่อป้องกันการไหม้หรือน้ำแห้ง เพื่อความปลอดภัยในการใช้งาน

4. หลังจากใช้งาน อุณหภูมิของกระทะจะมีความร้อนสูงบริเวณก้นกระทะ ทำน้ำแห้งระเหิด อย่าพ่นน้ำมาก ในครั้งเดียวอย่าเติมน้ำเพื่อกระทะไหม้ และรอให้กระทะเย็นตัวลง แล้วค่อยเติมน้ำ
5. เกี่ยวกับตัวความสะอาด : ตัวความสะอาดที่ใช้ในกระทะนี้ มีประสิทธิภาพสูงและอายุการใช้งานยาวนาน
6. วิธีการทำความสะอาด : หลังจากใช้งานตัวกระทะและฐาน ทำน้ำไปจุ่มหรือเช็ดในน้ำโดยตรง ทำน้ำไปล้างได้ทันทีโดยเด็ดขาด เพราะน้ำจะเข้าไปทำความเสียหายแก่ชิ้นส่วนอิเล็กทรอนิกส์ภายในหม้อได้
- กระทะด้านใน ใช้ผ้าขนหนูสะอาดล้างจานอ่อนๆ เช็ดถูบริเวณก้นกระทะแล้วล้างออกด้วยน้ำสะอาด ใช้ผ้าเช็ดให้แห้ง บริเวณภายนอกใช้ผ้าเปียกหมาดๆ เช็ดทำความสะอาดแล้วใช้ผ้าแห้งเช็ดอีกครั้ง

4 ข้อควรระวัง

1. ใช้ผ้าชุบน้ำเช็ดทำความสะอาด ก่อนการใช้งาน ห้ามใช้แปรงหรือขัดโลหะหรือน้ำยาคำความสะอาดที่มีฤทธิ์กัดกร่อนรุนแรงทำความสะอาด เพราะจะทำให้วัสดุเคลือบผิวหม้อ หุ่นหรือเสียหายในน้ำโดยตรง ทำน้ำไปล้างได้ทันทีโดยเด็ดขาด เพราะน้ำจะเข้าไปทำความเสียหายแก่ชิ้นส่วนอิเล็กทรอนิกส์ภายในหม้อได้
2. โปรดใช้ไฟฟ้าที่ได้มาตรฐาน เพื่อความปลอดภัยในการใช้งาน
3. เมื่อใช้งาน โปรดวางกระทะบนโต๊ะที่แข็งแรงมั่นคง พื้นผิวเรียบ และสูงห่างจากเด็กเล็กเพื่อให้แน่ใจว่าเด็กไม่สามารถสัมผัสกับกระทะได้ เพื่อป้องกันอันตรายที่จะเกิดขึ้น อย่างางบนพรม ผ้าปูโต๊ะเพื่อป้องกันการปิดกั้นช่องระบายอากาศทางด้านล่าง จะส่งผลต่อการกระจายความร้อน ซึ่งอาจทำให้เกิดอุบัติเหตุไฟไหม้ได้
4. ในการใช้งานครั้งแรก หากมีควัน หนาหรือกลิ่นเล็กน้อย ถือเป็นสิ่งปกติ และจะหายไปในการใช้งานครั้งต่อไป
5. ระดับน้ำในกระทะต้องไม่ต่ำกว่าระดับน้ำสูงสุด เพื่อป้องกันไม่ให้น้ำเดือด กระทะดับทำให้เกิดการรั่วไหล และอาจทำให้เกิดไฟฟ้าลัดวงจรได้
6. กระทะไฟฟ้านี้มีตัวป้องกันอุณหภูมิ เนื่องจากกระทะมีอุณหภูมิสูงเกินไป กระทะจะตัดการทำงานโดยอัตโนมัติ หลังจากอุณหภูมิลดลงแล้ว ระบบจะกลับมาทำงานเป็นปกติ
7. การใช้งานกระทะด้านใน ตัวความสะอาดจะเป็นรูปถ้วย U มีความร้อนลักษณะครึ่งวงกลม แต่ด้วยตัวกระทะมีลักษณะกลมสมบูรณ์ ความร้อนจะกระจายได้ดี เป็นวงกลม O มีความร้อนทั่วทั้งกระทะ
8. เนื่องจากการทำงานของรีเลย์อัตโนมัติ ของตัวความสะอาดร้อนที่ด้านล่างของกระทะ อาจทำให้เกิดการลัดวงจร (แร่ธาตุในน้ำ) ได้ง่าย คำแนะนำให้ใช้น้ำสะอาด หรือต้มน้ำที่เดือด 2-3 นาที เพื่อจัดการกระทะ
9. กระทะความสะอาดกระทะทุกครั้งหลังการใช้งาน และควรจอบให้แน่ใจว่าภายในกระทะไม่มีน้ำหลงเหลืออยู่

5 การใช้งาน

1. วิธีการทำความสะอาดขั้นแรกให้เติมน้ำปริมาณพอเหมาะลงในกระทะ แล้วต้มหรือต้ม ประมาณ 20 นาที เพื่อให้ได้ผลดี ในการฆ่าเชื้อโรค จากนั้นทำความสะอาดด้วยน้ำผสมน้ำส้มสายชูอ่อนๆ ก่อนใช้งานตามปกติ
2. ขณะทำอาหารใช้งาน อย่าใช้นิ้วสัมผัสโดยตรงกับฝาแก้ว หรือที่ช่องระบายน้ำ โปรดจับที่บริเวณหม้อจับ เพื่อป้องกันความร้อน หรือร้อนมือ
3. ลูกบิดสวิทช์ ปิด/เปิด เป็นแบบหมุนปรับอุณหภูมิ อยู่ในตำแหน่งปิดสถานะหรือไม่ได้ทำงาน เมื่อหมุนไปตำแหน่งเปิด เครื่องจะทำงาน หากกระทะขาดน้ำ หรือน้ำแห้งเครื่องจะตัดการทำงานโดยอัตโนมัติ
4. เพื่อความปลอดภัยในการใช้งานโปรดปรับระดับที่ตำแหน่ง "ปิด" และถอดปลั๊กไฟออกทุกครั้งเมื่อไม่ได้ใช้งาน
5. กระทะไฟฟ้านี้มีตัวป้องกันอุณหภูมิสูง เมื่ออุณหภูมิของกระทะสูงเกินไป กระทะจะตัดการทำงานโดยอัตโนมัติ หลังจากอุณหภูมิลดลงแล้ว ตัวกระทะจะกลับมาทำงานได้ตามปกติ

6 การดูแลรักษา

1. หลังจากการใช้งาน หมูบลูกบิดสวิทช์ ไปยังตำแหน่ง "ปิด" และถอดปลั๊กไฟออกทุกครั้ง
2. กระทะด้านใน ฝาแก้ว หม้อหุงข้าว สามารถทำความสะอาดด้วย น้ำผสมน้ำส้มสายชูอ่อนๆ ใช้ฟองน้ำ ขูดน้ำมันสลายจากจานก่อนใช้ กระทะความสะอาดที่มีฤทธิ์กัดกร่อนรุนแรง แปรงเหล็กขัดโลหะ เพื่อไม่ให้ทำความเสียหายกับผิวเคลือบ
3. ตัวกระทะด้านนอกทำความสะอาด ใช้ผ้าเปียกหมาดเช็ดคราบสกปรก ทำน้ำหมักเพื่อเช็ดจุดสกปรกในน้ำที่เคี้ยว เพราะน้ำจะเข้าไปใต้ฐานตัวหม้อ และจะทำความเสียหายแก่ชิ้นส่วนอิเล็กทรอนิกส์ภายในได้
4. ห้ามทำความสะอาดกระทะอยู่คนเดียว เพื่อลดการบาดเจ็บทางสติปัญญาและสุขภาพ หากมีคราบสกปรกหนัก ให้ต้มน้ำสลายในกระทะ แล้วเช็ดทิ้งไว้เป็นเวลา 10 นาที ทิ้งออกแล้วจึงทำความสะอาดด้วยน้ำเปล่า
5. เมื่อไม่ได้ใช้ผลิตภัณฑ์เป็นเวลานาน กรุณาทำความสะอาด และจัดเก็บใส่ถุงบรรจุ วางไว้ในที่อากาศถ่ายเทหรือแห้ง เพื่อเป็นการยืดอายุการใช้งาน

หมายเหตุ : เด็ก ผู้สูงอายุ หรือผู้พิการ และผู้ที่ไม่มีความรู้ ในการใช้ผลิตภัณฑ์นี้ ควรได้รับการดูแล และให้คำแนะนำที่ถูกต้องเกี่ยวกับผลิตภัณฑ์ เพื่อให้แน่ใจว่าพวกเขาไม่ได้รับบาดเจ็บ

คำเตือน

- ห้ามมิให้ใช้ผลิตภัณฑ์นี้ บนโต๊ะที่ลื่นหรือบนพื้นเปียก และเก็บให้ห่างจากแหล่งความร้อนเพื่อหลีกเลี่ยงความเสียหายของชิ้นส่วนพลาสติก
- ห้ามนำสายไฟจากเครื่องใช้ไฟฟ้าชนิดอื่น มาใช้ร่วมกับเครื่องใช้ไฟฟ้านี้
- ห้ามใช้งานหม้อ หรือวางหม้อบนเครื่องใช้ไฟฟ้าชนิดอื่น
- ควรใช้ปลั๊กไฟแยกต่างหาก จากเครื่องใช้ไฟฟ้าอื่น และอย่าใช้ตัวรับร่วมกับเครื่องใช้ไฟฟ้าอื่นในเวลาเดียวกัน

หมายเหตุ

- เครื่องใช้ไฟฟ้านี้ไม่มีค่าน้ำใช้โดยบุคคล (รวมถึงเด็ก) ที่มีความสามารถทางร่างกายทางประสาทสัมผัสหรือจิตใจ หรือขาดประสบการณ์และความรู้ เช่นตัวนี้จะได้รับการควบคุมดูแลหรือการสอบเทียบการใช้งานเครื่องใช้ไฟฟ้า โดยบุคคลที่มีคุณสมบัติสอดคล้องความปลอดภัยของบุคคลเหล่านี้
- เด็กควรได้รับการควบคุมดูแลเพื่อให้แน่ใจว่าจะไม่เล่นเครื่องใช้ไฟฟ้า