

18 东芝字体

6

4

คู่มือ การใช้งาน

พัดลมชนิดตั้งพื้น
F-ALC50TH(W)

TOSHIBA



สารบัญ

คำแนะนำด้านความปลอดภัย.....	01
ข้อมูลจำเพาะ.....	02
ภาพรวมผลิตภัณฑ์.....	03
คำแนะนำการใช้งาน.....	05
การทำความสะอาดและบำรุงรักษา.....	06

คำแนะนำเกี่ยวกับความปลอดภัย

ข้อควรระวัง

- โปรดอ่านคู่มือการใช้งานและคำแนะนำโดยละเอียด

คำเตือน

- หากสายไฟชำรุด ต้องทำการเปลี่ยนสายทันทีโดยผู้ผลิต ตัวแทนด้านบริการ หรือช่างผู้เชี่ยวชาญ เพื่อป้องกันไม่ให้เกิดอันตราย
- เพื่อป้องกันไฟฟ้าช็อต อย่าจุ่มสายไฟ ปลั๊ก หรือตัวเครื่องลงในน้ำหรือของเหลว
- เครื่องใช้ไฟฟ้านี้ไม่ได้มีไว้สำหรับใช้งานโดยบุคคล (รวมถึงเด็ก) ที่บกพร่องทางร่างกาย ประสาทสัมผัส หรือจิตใจ หรือขาดประสบการณ์และความรู้ เว้นแต่จะมีผู้รับผิดชอบความปลอดภัยของบุคคลดังกล่าวคอยควบคุมดูแลหรือให้คำแนะนำด้านความปลอดภัยในการใช้งาน เด็กควรได้รับการกำกับดูแลไม่ให้เล่นกับพัดลม
- ขณะที่ไม่ได้ใช้งานพัดลม และก่อนทำความสะอาด ควรดึงปลั๊กออกจากเต้ารับทุกครั้ง
- โปรดวางพัดลมให้ห่างจากเด็กหรือบุคคลทุกสภาพ ไม่อนุญาตให้เด็กและบุคคลทุกสภาพใช้งานพัดลมโดยไม่มีผู้ดูแล

กฎการใช้งานอย่างปลอดภัย


- ห้ามยืนนิ้ว ดินสอ หรือวัตถุใด ๆ เข้าไปในตะแกรงขณะพัดลมกำลังทำงาน
- ควรถอดปลั๊กไฟออกก่อนเมื่อย้ายพัดลมไปยังบริเวณอื่น
- ขณะใช้งาน ต้องวางพัดลมบนพื้นที่ยื่นคงเพื่อป้องกันการล้ม
- ห้ามใช้พัดลมโดยตั้งติดกับหน้าต่าง เนื่องจากฝนอาจทำให้เกิดอันตรายทางไฟฟ้า
- ใช้ภายในอาคารเท่านั้น
- เปิดใช้งานพัดลมหลังจากติดตั้งตะแกรงและใบพัดแล้ว

ข้อมูลจำเพาะ

รุ่น	F-ALC50TH(W)
แรงดันไฟฟ้า	220-240V 50Hz
กำลังไฟฟ้าตามพิกัด	60W

ภาพรวมผลิตภัณฑ์


ภาพของชิ้นส่วน

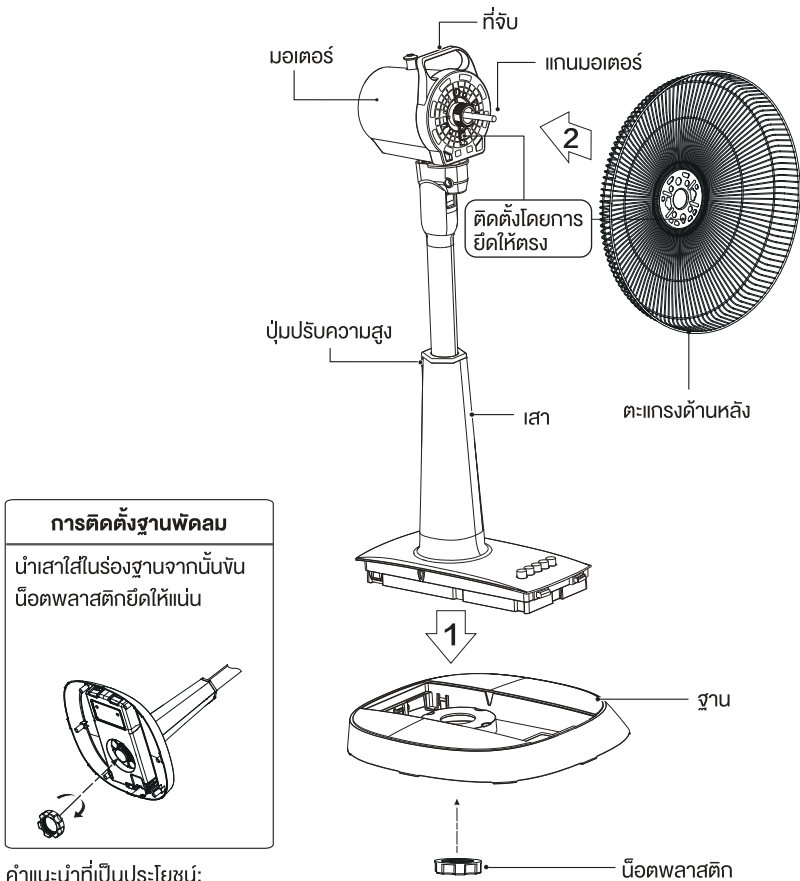


คำแนะนำที่เป็นประโยชน์:
ควรแยกชิ้นส่วนของพัดลม
ออกจากกันก่อนที่จะประกอบ

การติดตั้งตะแกรงหน้าและตะแกรงหลัง


จัดให้ตะของของตะแกรงหน้าตรงกับแนว
ด้านบนของตะแกรงหลัง จากนั้นดูภาพ
ประกอบด้านล่าง

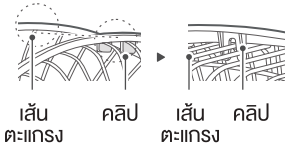

กดตะแกรงทั้งสองด้านด้วยมือทั้งสอง
ข้าง เมื่อมีเสียง “คลิก” แสดงว่าติดตั้ง
เสร็จสมบูรณ์




การติดตั้งล็อกในตัว

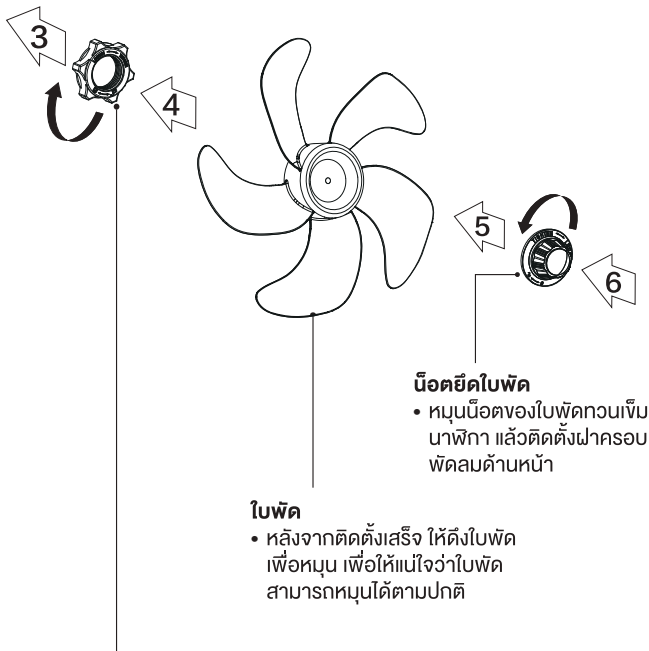


น็อตยึดตะแกรง

- ขันน็อตยึดตะแกรงตามเข็มนาฬิกาไปพร้อมกับยึดตะแกรงด้านหลัง

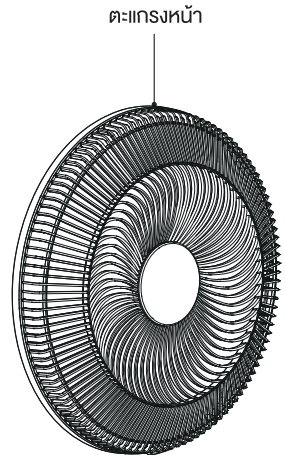


คำแนะนำในการใช้งาน

คำแนะนำการใช้งานตัวเครื่อง

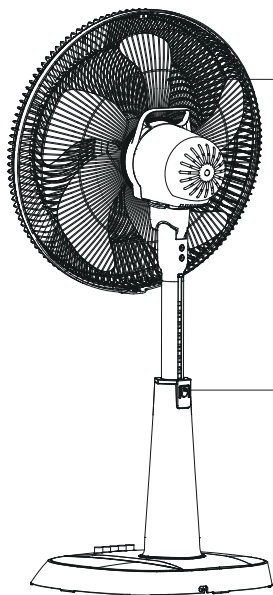


ปรับระดับความเอียงของพัดลม

ปรับด้วยมือ

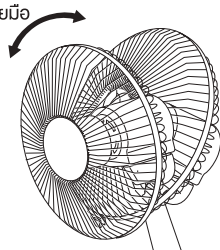

ปรับความสูง

กดปุ่มเพื่อปรับความสูง
ปรับความสูงหลังจากติดตั้งพัดลม

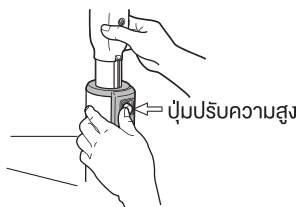

การทำความสะอาดและบำรุงรักษา

คำแนะนำในการดูแลรักษา

พัดลมดูแลรักษาได้อย่างง่ายดาย อย่าพยายามแยกส่วนด้วยตนเอง กรณีที่ต้องการบริการ ควรติดต่อศูนย์บริการที่ได้รับการรับรอง

1. ก่อนการทำความสะอาดและประกอบ ควรดึงปลั๊กพัดลมออกก่อนทุกครั้ง
2. เพื่อให้มอเตอร์ระบายอากาศได้อย่างสะดวก ควรหมั่นปิดฝุ่นบริเวณช่องระบายอากาศด้านหลังมอเตอร์ ไม่ควรถอดประกอบพัดลมเพื่อกำจัดฝุ่น
3. ใช้ผ้าขนหนูชุบน้ำยาทำความสะอาดชนิดอ่อนโยน เช็ดทำความสะอาดภายนอกตัวเครื่อง
4. ห้ามใช้น้ำยาทำความสะอาดที่มีฤทธิ์รุนแรงหรือสารละลายอินทรีย์ เพื่อป้องกันรอยลอก ห้ามใช้สารต่อไปนี้ในการทำความสะอาด ได้แก่ น้ำมันเบนซิน ทินเนอร์
5. ห้ามให้น้ำหรือของเหลวอื่นๆ เข้าไปในตัวมอเตอร์หรือภายใน

การทำความสะอาด


1. ก่อนทำความสะอาด ควรถอดปลั๊กออกจากแหล่งจ่ายไฟฟ้าทุกครั้ง
2. ทำความสะอาดชิ้นส่วนพลาสติกด้วยผ้าขนหนู ชุบน้ำสบูชนิดอ่อนๆ เช็ดคราบสบู่ให้หมดด้วยผ้าแห้ง

#DetailsMatter

USER MANUAL

STAND FAN
F-ALC50TH(W)

TOSHIBA

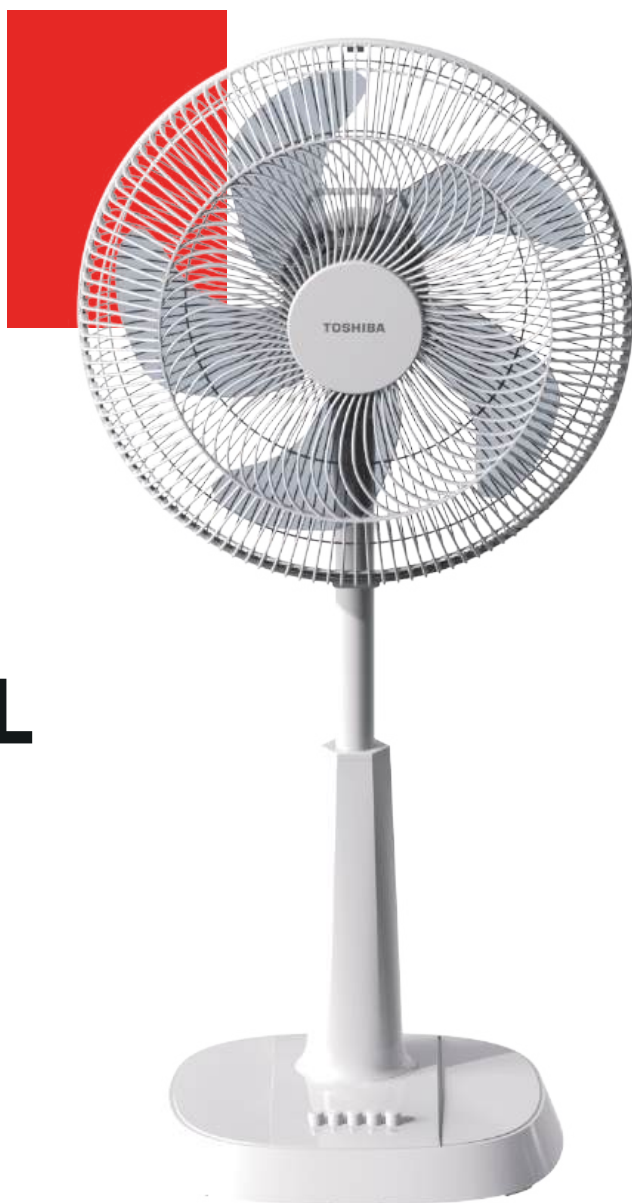

CONTENTS

SAFETY INSTRUCTIONS	01
SPECIFICATIONS	02
PRODUCT OVERVIEW	03
OPERATION INSTRUCTIONS	05
CLEANING AND MAINTENANCE	06

SAFETY INSTRUCTIONS

CAUTION

- Read Rules for Safe Operation and Instructions Carefully.

WARNING

- If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
- Keep electrical appliances out of reach from Children or infirm persons. Do not let them use the appliances without supervision.

RULES FOR SAFE OPERATION


- Never insert fingers, pencils, or any other object through the grille when fan is running.
- Disconnect fan when moving from one location to another.
- Be sure fan is on a stable surface when operating to avoid overturning.
- DO NOT use fan in window, rain may create electrical hazard.
- Indoor use only.
- Operate the fan after ensuring the grill and blade is installed.

SPECIFICATIONS

Model	F-ALC50TH(W)
Rated voltage	220-240V 50Hz
Rated power	60W


PRODUCT OVERVIEW

Part Figure

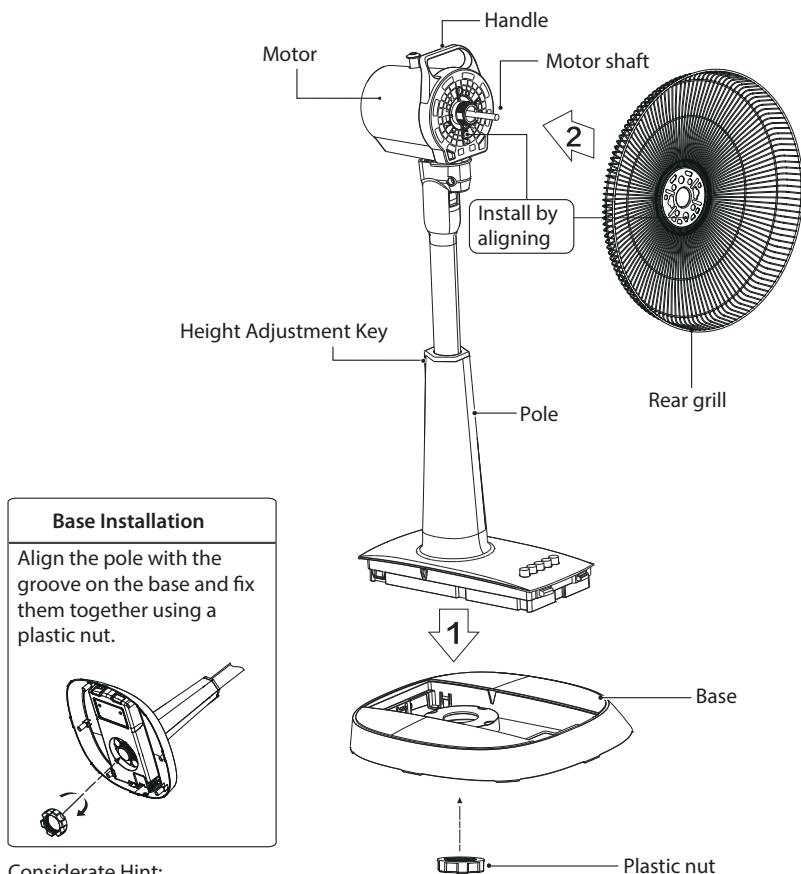


Front And Rear Guard Installation



Align the front grill buckle with the top line on the rear grill, then look at the schematic from the back.

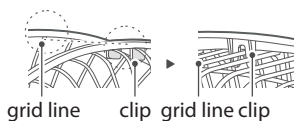

Press guards sequentially with both hands. With the "click", the installation is in place.



Self-Catch Installation

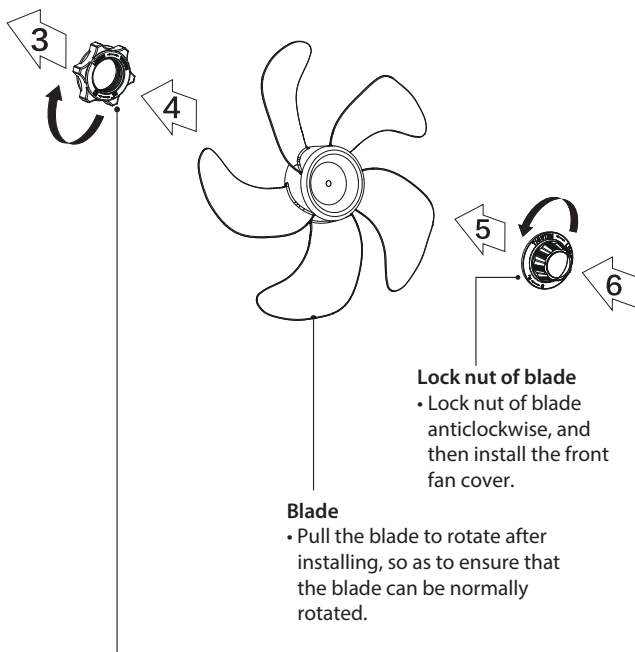


Lock nut of blade

- Lock nut of blade anticlockwise, and then install the front fan cover.

Blade

- Pull the blade to rotate after installing, so as to ensure that the blade can be normally rotated.

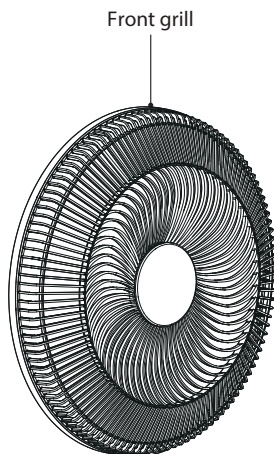


Lock nut of grill

- Screw the lock nut of grill clockwise, and in the meantime, fix the rear grill.

Instructions For Use

Instructions for operation of body

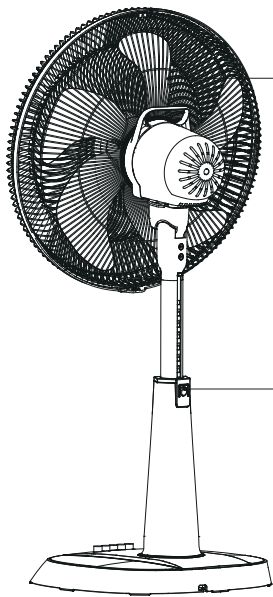

90-degree pitch adjustment

Manual

Height Adjustment

Press the key to adjust the height.
Adjusting the height after the fan is installed.

Height Adjustment key

CLEANING AND MAINTENANCE

Maintenance Instruction

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

1. Before cleaning and assembling, fan must be unplugged.
2. To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
3. Please wipe the exterior parts with a soft cloth soaking a mild detergent.
4. Do not use any abrasive detergent or solvents to avoid scratching the surface.
Do not use any of the following as a cleaner: gasoline, thinner.
5. Do not allow water or any other liquid into the motor housing or interior parts.

Cleaning

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.

#DetailsMatter



6 939924 857121

<https://www.toshiba-lifestyle.com/th>