

MINIMEX
SUPER BLEND

คู่มือการใช้งาน
เครื่องปั่นน้ำผลไม้

Minimex
รุ่น SUPER BLEND 4
(MCB4)



Instruction Manual
Commercial Blender

Model : MCB4
220V., ~50Hz., 1,200W.

ไทย / English

คำแนะนำเพื่อความปลอดภัย:

1. อ่านคู่มือก่อนใช้งาน
2. ตรวจสอบสายไฟ หรือปลั๊กไฟเป็นประจำ หากพบว่ามีความเสียหาย ควรส่งเข้าศูนย์บริการฯ เพื่อเปลี่ยนใหม่
3. ระวังอย่าให้สายไฟพับ งอ หรืออยู่ขอบโต๊ะ
4. ห้ามวางตัวเครื่องไว้ใกล้เตาแก๊ส เตาไฟฟ้า และอื่นๆที่หน้าสัมผัสร้อน
5. ไม่ควรซ่อมเครื่อง หรือตรวจเช็คสภาพเครื่องด้วยตัวเอง ควรส่งเข้าศูนย์บริการฯ เพื่อการซ่อมแซมที่ถูกต้อง
6. หากพบสายไฟหรือปลั๊กหลุดเสียหาย ควรหยุดใช้ทันทีและส่งเข้าศูนย์บริการฯ
7. ควรรอให้ใบมีดหยุดหมุนสนิทก่อนการยกโล่ปั่นออกจากตัวเครื่อง
8. ถอดปลั๊กออกจากเต้าเสียบไปบ้านทุกครั้งที่เลิกใช้งานและทำความสะอาด
9. ใบมีดของของเครื่องมือมีความคม ห้ามใช้มือยื่นลงในขณะเครื่องกำลังทำงาน
10. ห้ามทิ้งวัตถุของแข็ง เช่น ช้อน ช้อน ใบมีด ไว้ในโล่ปั่น ทำให้เกิดอันตรายในการใช้งานซ้ำ
เพราะอาจเผลอปั่นวัตถุดังกล่าว
11. ระวังใบมีดขณะทำความสะอาด
12. ห้ามใช้อะไหล่หรืออุปกรณ์ที่ไม่ใช่อะไหล่อุปกรณ์แท้ เพราะอาจเป็นสาเหตุให้เกิดความเสียหายของ
ตัวเครื่อง และอันตรายต่อผู้ใช้งาน
13. ห้ามปล่อยให้เครื่องทำงานโดยไม่มีวัตถุติดอาหาร
14. ห้ามให้เครื่องปั่นถูกน้ำ หรือของเหลว หรือใช้งานเครื่องในขณะที่มือเปียก
15. ห้ามใช้อุปกรณ์และของมีคมเข้าไปในขณะที่เครื่องทำงาน
16. ควรหยุดเครื่อง ปิดสวิตช์เครื่อง จึงค่อยใช้ช้อน หรือไม้พายในการตรวจเช็คเครื่องตีในโล่ปั่น
17. วางโล่ให้สนิทกับเครื่องทุกครั้งเมื่อใช้งาน
18. เครื่องปั่นนี้ใช้สำหรับปั่นอาหารและเครื่องดื่มเท่านั้น
19. ห้ามเปิดฝาโล่ในขณะที่เครื่องทำงาน
20. ห้ามเอามือล้วงเข้าไปในโล่ปั่น ขณะที่เครื่องทำงาน
21. หากอนุญาตให้ผู้ด้อยความสามารถทางกายภาพเป็นผู้ใช้งาน ต้องมีผู้ใหญ่ที่มีความเข้าใจในการใช้งานและ
ความปลอดภัยคอยดูแลอย่างใกล้ชิด
22. ห้ามปล่อยเครื่องให้เด็กใช้งานอย่างเด็ดขาด ควรเก็บเครื่องและอุปกรณ์ให้ห่างมือเด็ก
23. ห้ามเด็กใช้งานเครื่องปั่นนี้ หากอนุญาตให้เด็กใช้งานต้องมีผู้ใหญ่ที่มีความเข้าใจในการใช้งานและ
ความปลอดภัยคอยดูแลอย่างใกล้ชิด
24. เครื่องปั่นน้ำผลไม้เอนกประสงค์ออกแบบสำหรับใช้ในที่ร่มเท่านั้น ห้ามนำไปใช้ในที่โล่งแจ้ง
25. เครื่องปั่นเอนกประสงค์นี้ ออกแบบให้ใช้ภายในครัวเรือนเท่านั้น บริษัทฯ ขอสงวนสิทธิ์ในความรับผิดชอบ
หากผู้ใช้งานใช้งานอย่างผิดวิธี หรือนำไปใช้นอกเหนือจากจุดประสงค์ของการออกแบบ


26. ปิดสวิตช์และถอดปลั๊กไฟออกจากเต้าเสียบไฟบ้านทุกครั้งหลังใช้งาน ห้ามเสียบปลั๊กค้างไว้กับเต้ารับไฟบ้าน
27. เก็บคู่มือนี้ไว้

ส่วนประกอบ



- ① ถ้วยตวง
- ② ฝาโถ
- ③ โถปั่นพร้อมระบบล็อกเพื่อความปลอดภัย
- ④ ใบมีดปั่น
- ⑤ ตัวเครื่อง
- ⑥ ปุ่มโปรแกรมเครื่อง
- ⑦ ก้านคน

CONTROL PANEL

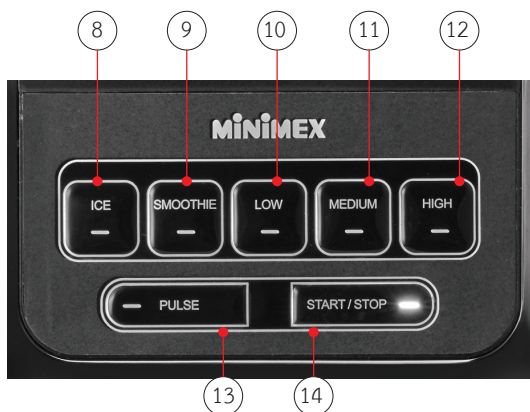

- ⑧ ปุ่มโปรแกรมน้ำแข็ง
- ⑨ ปุ่มโปรแกรมสมูทตี้
- ⑩ ปุ่มความเร็วต่ำ
- ⑪ ปุ่มความเร็วปานกลาง
- ⑫ ปุ่มความเร็วสูง
- ⑬ ปุ่มโปรแกรม Pulse
- ⑭ ปุ่ม เริ่ม/หยุด โปรแกรมปั่น

วิธีการใช้งาน

ก่อนใช้งานครั้งแรก


1. ก่อนใช้งานครั้งแรก ให้แกะเครื่องและวางชิ้นส่วนทั้งหมดบนพื้นผิวแนวนอน
2. ล้างชิ้นส่วนที่ถอดออกได้ทั้งหมด ยกเว้นตัวเครื่อง
3. เมื่อทำความสะอาดและทำให้ชิ้นส่วนทั้งหมดแห้งสนิทแล้ว ให้ประกอบกลับ

วิธีการใช้งาน

โหมดการทำงานของเครื่อง

1. เสียบปลั๊กเครื่อง ไฟแสดงสถานะทั้งหมดจะเปิดขึ้นเป็นเวลา 2 วินาทีแล้วดับลง เครื่องพร้อมใช้งาน หากไม่มีการใช้งานเป็นเวลา 3 นาที เครื่องจะเข้าสู่โหมดประหยัดพลังงาน(Sleep Mode) หากต้องใช้งาน ให้หมุนโล่เข้ากับตัวเครื่อง หรือเสียบปลั๊กใหม่
2. การทำงาน มีปุ่ม 7 ปุ่มโปรแกรมบนแผงควบคุม: ปุ่มเปิด/ปิด (START/STOP) และปุ่มฟังก์ชัน 6 ปุ่ม ได้แก่ ปุ่ม PULSE, ปุ่มความเร็วต่ำ, ปุ่มความเร็วปานกลาง, ปุ่มความเร็วสูง, ปุ่ม SMOOTHIE และปุ่ม ICE น้ำแข็ง

การทำงานของปุ่ม

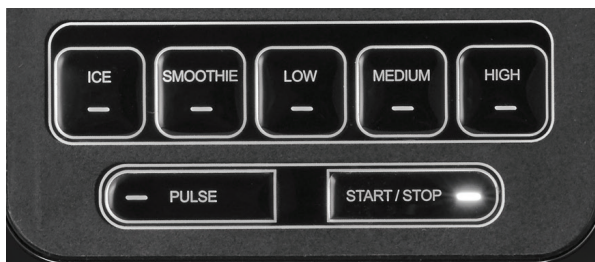

• ปุ่ม START/STOP:

ในโหมดสแตนด์บาย ไฟแสดงสถานะจะดับลง กดปุ่ม ไฟแสดงสถานะจะเปิดขึ้น เครื่องจะไม่ทำงานจนกว่าจะกดปุ่มฟังก์ชันใดๆ ในโหมดการทำงาน สามารถหยุดเครื่องได้โดยการกดปุ่มนี้ และเครื่องจะอยู่ในโหมดสแตนด์บาย

• ปุ่ม PULSE:

กดปุ่มโดยไม่ต้องปล่อย ไฟแสดงสถานะจะเปิดขึ้น และเครื่องจะเริ่มทำงาน หากปล่อย ไฟแสดงสถานะจะดับลง และเครื่องจะหยุดทำงาน หากกดปุ่มนานกว่า 2 วินาที เครื่องจะหยุดทำงานโดยอัตโนมัติ

- **ปั๊ม HIGH speed:**

กดปุ่ม ไฟแสดงสถานะจะเปิดขึ้น และเครื่องจะทำงานด้วยความเร็วสูงสุด เครื่องจะหยุดทำงานโดยอัตโนมัติหลังจาก 2 นาที และไฟแสดงสถานะจะกระพริบ 3 ครั้งก่อนดับลง คุณสามารถหยุดชั่วคราวได้โดยการกดอีกครั้งระหว่างการทำงานของเครื่อง

- **ปั๊ม MEDIUM speed:**

กดปุ่ม ไฟแสดงสถานะจะเปิดขึ้น และเครื่องจะทำงานด้วยความเร็วปานกลาง เครื่องจะหยุดทำงานโดยอัตโนมัติหลังจาก 2 นาที และไฟแสดงสถานะจะกระพริบ 3 ครั้งก่อนดับลง คุณสามารถหยุดชั่วคราวได้โดยการกดอีกครั้งระหว่างการทำงานของเครื่อง

- **ปั๊ม LOW speed:**

กดปุ่ม ไฟแสดงสถานะจะเปิดขึ้น และเครื่องจะทำงานด้วยความเร็วต่ำสุด เครื่องจะหยุดทำงานโดยอัตโนมัติหลังจาก 2 นาที และไฟแสดงสถานะจะกระพริบ 3 ครั้งก่อนดับลง คุณสามารถหยุดชั่วคราวได้โดยการกดอีกครั้งระหว่างการทำงานของเครื่อง

- **ปั๊ม SMOOTHIE:**

กดปุ่ม ไฟแสดงสถานะจะเปิดขึ้น และเครื่องจะทำงานในโปรแกรมปั่นสมูทตี้ เครื่องจะหยุดทำงานโดยอัตโนมัติหลังจาก 1 นาที และไฟแสดงสถานะจะกระพริบ 3 ครั้งก่อนดับลง คุณสามารถหยุดชั่วคราวได้โดยการกดอีกครั้งระหว่างการทำงานของเครื่อง

- **ปั๊ม ICE:**

กดปุ่ม ไฟแสดงสถานะจะเปิดขึ้น และเครื่องจะทำงานในโปรแกรมปั่นน้ำแข็ง เครื่องจะหยุดทำงานโดยอัตโนมัติหลังจาก 60 วินาที และไฟแสดงสถานะจะกระพริบ 3 ครั้งก่อนดับลง คุณสามารถหยุดชั่วคราวได้โดยการกดอีกครั้งระหว่างการทำงานของเครื่อง

หมายเหตุ : ระหว่างเครื่องการทำงาน หากกดปุ่มโปรแกรมอื่น เครื่องจะเปลี่ยนไปยังโปรแกรมนั้นโดยอัตโนมัติ

1. ปอกเปลือก หรือควั่นผลไม้ หรือผัก แล้วหั่นเป็นลูกเต๋าเล็กๆ
2. ใส่ส่วนผสมที่จะปั่นลงในโถ ควรเติมน้ำบริสุทธิ์ (ของเหลว) ในปริมาณที่เหมาะสมเพื่อช่วยให้เครื่องทำงานได้อย่างราบรื่น อัตราส่วนของอาหารและน้ำ(ของเหลว) คือ 2:3 ปริมาณส่วนผสมทั้งหมดต้องไม่เกินระดับสูงสุดที่ระบุไว้บนโถ

วัตถุดิบ	ขนาด	ปริมาณ
แครอท (แอปเปิ้ล และอื่นๆ)	หันขนาด ก15 x ย15 x ส15 มม.	แครอท 740 กรัม / น้ำ 1,110 กรัม
น้ำแข็ง	ขนาด ก25 x ย25 x ส25 มม.	300 กรัม

หมายเหตุ : ห้ามใช้น้ำเดือด* หรือปั่นอาหารโดยเครื่องเปล่า *แรงดันในภาชนะสูงเกินไป
ห้ามใช้เครื่องปั่นน้ำร้อน หรือของร้อน

3. วางฟาปิดที่ขวดให้เรียบร้อย ตรวจสอบให้แน่ใจว่าถ้วยตวงที่ฟาอยู่ในตำแหน่ง
4. เสียบปลั๊กไฟเข้ากับเต้าเสียบที่มีมาตรฐาน
5. สำหรับการปั่นที่รวดเร็ว หรือต้องการให้ส่วนผสมเข้ากัน ให้กดที่ปุ่ม PULSE ค้างไว้สักครู่แล้วปล่อย ทำซ้ำหลายครั้งจนได้ผลตามต้องการ
6. หากต้องการเพิ่มส่วนผสมระหว่างการปั่น ให้ถอดถ้วยตวงออกที่ฟาออก และเติมส่วนผสมผ่านช่องที่ฟา
7. เมื่อบดน้ำแข็ง หรือวัตถุดิบแข็ง ให้ใช้มือหนึ่งจับฟาให้แน่น

หมายเหตุ :

1. สำหรับการใช้งานต่อเนื่องในเวลา 3 นาที ควรพักเครื่องอย่างน้อย 7-10 นาที เพื่อให้เครื่องทำความร้อนก่อนที่จะเริ่มการทำงานในรอบถัดไป
2. หากต้องการหยุดเครื่องในระหว่างการทำงาน กดปุ่ม Stop

เคล็ดลับการใช้งานที่สำคัญ

- เพื่อการปั่นที่ได้ประสิทธิภาพที่สุด ควรเติมของเหลวลงในโถปั่นก่อน แล้วจึงใส่วัตถุดิบตามลงไป
- เครื่องไม่สามารถปั่น หรือทำอาหารเหล่านี้ ได้แก่ การตีไข่ขาว การตีครีม การบดมันฝรั่ง การบดเนื้อ การผสมแป้ง การสกัดน้ำผลไม้จากผลไม้และผัก
- วัตถุดิบต่อไปนี้ไม่ควรใส่ในเครื่อง อาจทำให้เกิดความเสียหาย: กระดุก, ชิ้นใหญ่ของของแข็ง, อาหารแช่แข็ง, หรืออาหารที่แข็งเช่น ผีอก
- การบดน้ำแข็ง ให้ใส่น้ำแข็งได้สูงสุดถึง 10 ก้อน หากต้องการเติมน้ำแข็ง ให้ถอดถ้วยตวงออก และเพิ่มก้อนน้ำแข็งทีละก้อนผ่านช่องฟา

ห้ามเปิดใช้งานเครื่องเกิน 3 นาทีในแต่ละครั้ง และต้องรอจนเครื่องเย็นถึงอุณหภูมิห้องก่อนเริ่มรอบการทำงานถัดไป

การทำความสะอาด

ผลิตภัณฑ์นี้ไม่มีชิ้นส่วนที่ผู้ใช้สามารถซ่อมแซมด้วยตนเองได้ ควรส่งให้ศูนย์บริการ ติดต่อโทร 02-493-6565

1. ก่อนทำความสะอาด ให้ถอดปลั๊กเครื่องปั่นออก
2. ควรล้างทันทีหลังจากใช้งานเพื่อให้ง่ายต่อการทำความสะอาด และไม่ให้อาหารแห้งติดอยู่ที่โถปั่น เพราะจะทำให้การทำความสะอาดยากขึ้น
3. ล้างถ้วยตวง, ฝา, โถปั่น เช็ดให้แห้ง ชิ้นส่วนเหล่านี้ปลอดภัยสำหรับการล้างในเครื่องล้างจาน แต่อุณหภูมิไม่ควรเกิน 65°C
4. การทำความสะอาดโถและใบมีด สามารถทำตามขั้นตอนดังต่อไปนี้

หมายเหตุ : ปิดเครื่องทุกครั้ง ก่อนทำความสะอาด

- หลังการใช้งาน เติมน้ำอุ่นสะอาดปริมาณ 400-500มล. หยดน้ำยาล้างจาน 1-2 หยด
- เสียบปลั๊กไฟเข้ากับเต้าเสียบไฟบ้าน หมุนปุ่มไปที่ “START” เลือกความเร็วต่ำ
- เมื่อล้างทำความสะอาดแล้ว หมุนไปที่ “STOP” เพื่อปิด
- ดึงปลั๊กออก ยกโถ ล้างทำความสะอาดอีกครั้ง

5. เช็ดตัวเครื่องด้วยผ้าชุบน้ำบิดหมาด เช็ดอย่างทั่วถึง

คำเตือน :

1. ห้ามแช่ หรือจุ่มเครื่องลงในของเหลว เพื่อป้องกันความเสี่ยงจากไฟฟ้าช็อต
2. ห้ามใช้แผ่นขัดหยาบทำความสะอาดกับชิ้นส่วนหรือพื้นผิว

การรับประกัน

เครื่องปั่นน้ำผลไม้ รุ่น Super Blend (MCB4) ระยะเวลาประกัน 1 ปี (รับประกันมอเตอร์ 2 ปี)

เงื่อนไขการรับประกัน

การรับประกันครอบคลุมถึงคุณภาพของสินค้าและมีเงื่อนไขการประกอบโดยสินค้าต้องใช้ในครัวเรือนเท่านั้น ผู้ใช้ ต้องใช้งานและบำรุงรักษาอย่างถูกต้องตามคำแนะนำในหนังสือคู่มือ

ข้อยกเว้นการรับประกัน

บริษัทฯ ขอสงวนสิทธิ์ในความรับผิดชอบต่อความเสียหายใดๆ ที่เป็นผลสืบเนื่องจากการใช้สินค้า และสงวนสิทธิ์การรับประกันหากลูกค้า :

- นำสินค้าไปใช้ผิดจากวัตถุประสงค์ของการออกแบบ เช่น การนำเอาสินค้าที่ออกแบบมาเพื่อการใช้ในครัวเรือน แต่นำไปใช้เพื่อประกอบอาชีพหรือในเชิงพาณิชย์
- ใช้งานผิดวิธีหรือไม่ได้ใช้งานตามวิธีที่อธิบายในหนังสือคู่มือ
- มิได้บำรุงรักษาตามคำแนะนำในหนังสือคู่มือ

การใช้สิทธิ์การรับประกันสินค้า

การรับประกันสินค้ามีผลตามวันที่ ที่ระบุในใบรับประกันสินค้า กรุณาแสดงใบรับประกันสินค้า หรือใบกำกับภาษี ใบเสร็จรับเงิน เพื่อเป็นหลักฐานในการซื้อต่อเจ้าหน้าที่ศูนย์บริการฯ ในการใช้สิทธิ์การรับประกันสินค้า

การพิจารณาความบกพร่องของสินค้าเพื่อการรับประกัน

บริษัทฯ จะทำการตรวจสอบสินค้าอย่างละเอียด และตัดสินใจว่าความบกพร่องของสินค้านั้นอยู่ในเงื่อนไขการรับประกันหรือไม่ซึ่งเป็นสิทธิ์ของบริษัทฯ เท่านั้น ในกรณีที่อยู่ในเงื่อนไขการรับประกัน บริษัทฯ จะเป็นผู้รับผิดชอบค่าแรงในการซ่อม ค่าอะไหล่ และค่าจัดส่งสินค้าถึงบ้านลูกค้า โดยลูกค้าไม่ต้องชำระค่าบริการใดๆทั้งสิ้น หากบริษัทฯ พิจารณาเห็นว่าต้องเปลี่ยนสินค้าใหม่ให้แก่ลูกค้าแต่สินค้านั้นเดิมๆไม่มีจำหน่ายแล้ว บริษัทฯ จะเป็นผู้ตัดสินใจว่าสินค้านั้นใดเหมาะสมที่จะเปลี่ยนแทน

การคืนสินค้า

ในกรณีที่ลูกค้าซื้อสินค้าไปแล้วแต่ไม่พอใจ บริษัทฯ ยินดีรับคืนสินค้าภายใน 15 วัน โดยมีเงื่อนไขว่าสินค้าต้องมีบรรจุภัณฑ์อย่างสมบูรณ์และสินค้ามิได้ถูกใช้งานมาก่อน โดยลูกค้าต้องนำหลักฐานการซื้อเพื่อคืนสินค้า ณ ร้านค้าที่ซื้อเท่านั้น


ศูนย์บริการ

หากท่านต้องการบริการรายละเอียดเพิ่มเติมหรือสั่งซื้ออุปกรณ์พิเศษท่านสามารถติดต่อศูนย์บริการได้

Service Center : Tel. 02-493-6565

E-mail : SERVICE_minimex@penk.co.th

ช่วยกันรักษาสิ่งแวดล้อม

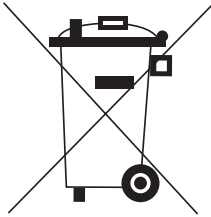

เราขอชี้ชวนให้ท่านร่วมรักษาสภาพแวดล้อม
ด้วยการทิ้งเศษอุปกรณ์ที่เลิกใช้แล้ว ณ สถานที่ที่เหมาะสม

MINIMEX
SUPER BLEND

Instruction Manual
COMMERCIAL BLENDER

Minimex

Model : SUPER BLEND 4
(MCB4)



Instruction Manual
Commercial Blender

Model : MCB4
220V., ~50Hz., 1,200W.

English

IMPORTANT SAFEGUARDS :

When using the electrical appliance, the below basic safety precautions should be followed:


1. Read all instructions.
2. Before using check that the voltage indicated on the product corresponds with the voltage of your electrical outlet.
3. Do not let cord hang on hot surface or over edge of table or counter.
4. Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.
5. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
6. Close supervision is necessary when any appliance is used by or near children.
7. Avoid contacting the moving parts. Do not attempt to defeat any safety interlock mechanisms.
8. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
9. The use of attachments, including canning jars, not recommended or sold by manufacturer may cause fire, electric shock or injury.
10. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. To disconnect, turn any control to "off", then remove plug from wall outlet by grasping the plug, not the cord.
11. To reduce the risk of injury, never place blade assembly on motor unit without the jar properly attached.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Keep the appliance and its cord out of reach of children.
13. Children should be supervised to ensure that they do not play with the appliance.
14. Do not leave the machine on unattended.
15. When removing the blender from the motor unit, wait until the blades have completely stopped.
16. Always operate blender with cover in place.
17. Always use the appliance on a secure, dry level surface.
18. Never place this appliance on or near a hot gas or an electric burner or where it could touch a heated appliance.

19. Do not use outdoors.
20. Do not use appliance for other than its intended use.
21. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
22. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
23. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
24. To protect against risk of electrical shock do not put cord, plug or appliance in water or other liquid.
25. Risk of thermal burn injury due to excessive pressure in the container. Do not blend hot liquids.
26. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.
27. Save this instruction.

KNOW YOUR BLENDER



CONTROL PANEL

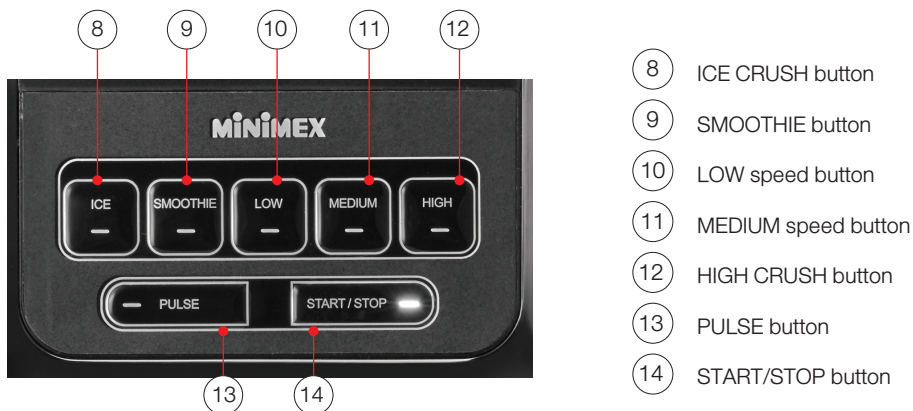

HOW TO USE

BEFORE INITIAL USE

1. Before first use, unpack the appliance and place all parts on a horizontal surface.
2. The jar assembly has already been assembled into the motor unit. Disassemble to wash all detachable parts except the motor unit. Refer to the latter chapter CARE AND CLEANING.
3. Once all pieces have been cleaned and dry thoroughly, reassemble.

HOW TO USE

Appliance working mode

1. After the appliance be plugged without jar on unit base position , all indicators on the panel are off ; when the jar is stalled on position,all indicates turn on for 2seconds then off, the appliance is in standby mode, if without operation for 3 minutes, the appliance will be in dormancy, it needs be activated by re_plugged or rescrewed the jar.

2. Button working mode

There are 7 buttons on the control panel:a power button(START/STOP) and 6 functional buttons, includes **PULSE** button, **LOW** speed button, **MEDIUM** speed button, **HIGH** speed button, **SMOOTHIE** button and **ICE** button.

BUTTONS OPERATION



START/STOP button :

In standby mode,the indicator is off, press the button, the indicator on, the appliance doesn't work until any functional buttons be pressed. At working mode, the appliance can be stopped by pressing this button ,and appliance will be in standby mode.

PULSE button :

Press the button without release, the indicator on and the appliance start to work, if release, the indicator will be off and appliance will stops; if press the button over 2 minutes, the appliance will be stopped automatically.

HIGH speed button :

Press the button, the indicator will be on and the appliance will work at the highest speed, the appliance will be automatically stopped after 2 minutes and the indicator will blink 3 times before going out; you can pause it by pressing it again during appliance operation.

MEDIUM speed button :

Press the button, the indicator will be on and the appliance will work at the medium speed, the appliance will be automatically stopped after 2 minutes and the indicator will blink 3 times before going out; you can pause it by pressing it again during appliance operation.

LOW speed button :

Press the button, the indicator will be on and the appliance will work at the lowest speed, the appliance will be automatically stopped after 2 minutes and the indicator will blink 3 times before going out; you can pause it by pressing it again during appliance operation.

SMOOTHIE button :

Press the button, the indicator will be on and the appliance will work at smoothie working mode, the appliance will be automatically stopped after 1 minute and the indicator will blink 3 times before going out; you can pause it by pressing it again during appliance operation.

ICE button :

Press the button, the indicator will be on and the appliance will work at ice crushing mode, the appliance will be automatically stopped after 60 seconds and the indicator will blink 3 times before going out; you can pause it by pressing it again during appliance operation.

NOTE : During the working state, touch other functional buttons, the appliance can be automatically switch to the corresponding function.

1. Peeled or cored the fruit or vegetables and then cut it into small dices.
2. Place the food to be blended into the jar. Usually, certain amount of purified water has to be added to facilitate the smooth running of appliance. The proportion of the food and water is 2:3. The amount of mixture should not exceed the max level as indicated on the jar.

FOOD TYPE	SPEC	WEIGHT
Carrot (apple, pear etc.)	Cut into 15mm*15mm*15mm	Carrot: 740g / Water: 1110g
Ice crush	25mm*25mm*25mm	300g

NOTE : Never use boiling liquids or run the appliance empty.

NOTE : Risk of thermal burn injury due to excessive pressure in the container.

Do not blend hot liquids

3. Put the lid on the jar. Be sure the measuring cup is in place.
4. Plug the power cord into a standard wall outlet.
5. For quick or delicate blending tasks, press the PULSE position and hold for a few seconds and then release, Operate several times until the consistence you want is obtained
6. If you want to add ingredients while the blender is working, remove the measuring cup and place through the lid opening.
7. When crushing ice or hard food, keep one hand firmly on the lid.

NOTE :

- 1) For each use, the consecutive operation time should be less than 3 minutes.
at least 7-10 minutes rest time must be maintained between two continuous cycles,
let the unit cool to room temperature before performing next operation cycle.
- 2) If you want to stop the machine during operation, turn the knob to O position anytime.

Important operating tips

- For best circulation of food that are to be blended with some liquid, pour the liquid into the jar first, then add solids.
- Some of the tasks that cannot be performed efficiently with a blender are: beating egg whites, whipping cream, mashing potatoes, grinding meat, mixing dough, extracting juice from fruit and vegetable
- The following items should never be placed in the unit as they may cause damage: bones, large pieces of solid, frozen food, or tough foods such as turnips.
- To crush ice, add up to 10 ice cubes. If more ice is needed, remove the cup and add cubes one by one through the lid opening.

-
- 3) Do not run the appliance for more than 3 minutes per time, and only wait until the unit is cooled to room temperature before performing next operation cycles.

CLEANING AND MAINTENANCE

This product contains no user serviceable parts. Refer service to qualified service personnel.

1. Before cleaning, unplug the blender.
2. Always wash immediately after use for easier cleaning. Don't let food dry on the jar assembly as this will make cleaning difficult.
3. Dismantle all detachable parts. Lift the jar assembly off the motor unit. In addition, detach the jar cover seal ring from the jar cover
4. Rinse the measure cup, lid, seal ring, jar unit by hands or in a dishwasher and then dry. They are dishwasher safe components, but the temperature setting shall not exceed 65°C.
5. Brush the blade clean using warm soapy water, then rinse thoroughly under the tap. Don't touch the sharp blades, handle carefully. Don't immerse the blade assembly in water. Leave to dry upside down away from children.
6. Wipe the motor unit with a damp cloth and dry thoroughly. Remove the stubborn spots by rubbing with non-abrasive cleaner. If liquids spill into the motor unit; first unplug the unit, then wipe with a damp cloth and dry thoroughly.

CAUTION :

- 1) Do not immerse the motor unit in liquid to prevent the risk of electric shock.
- 2) Do not use rough scouring pads or cleansers on parts or finish.

WARRANTY

We hereby warranty our Commercial Blender model MCB4 in a period of 1 (one) year (Motor Warranty 2 years).

Warranty Conditions

The warranty cover product defective and workmanship . Users must properly use and maintain following the instructions manual..

Warranty exceptions

We disclaims all responsibility for incidental or consequential damage caused by use of this appliance
This warranty will be void if customers.

- lead to a misunderstanding of the purpose of the design, such as using product in a commercial use.
- Use the wrong way or not used as described in the instruction manual.
- no maintenance as recommended in the instruction manual.

Customer right for product warranty

The warranty is effective on the date specified in the warranty card , invoice or receipt as proof of purchase.

Determination of defective product

The company will inspect the false or defective of the product and decide that the defective of the product is in warranty or not. The decision is solely the rights of the company. If the product proved to be defected and covered by warranty, company will be responsible for parts and labor to repair and deliver the product to customers' house. Customers do not have to pay any fee.If the company considers that it must change its products to customers, but the same model of product is not available, the company will determine an appropriate version of the product to be replaced.

Returns of Product

If customer purchases to be dissatisfy. Customer could return the product within 15 days after purchasing date only if the product is completely perfect packaging and has not been used before.
Customers must present proof of purchase to return the product at the store of purchase only.

Service Center

If customer need service or information, customer can contact our Minimex Service Center

Service Center : Tel. 02-493-6565, LineOA : @minimex_service

E-mail : SERVICE_minimex@penk.co.th

ENVIROMENT FRIENDLY DISPOSAL

Please dispose of old machines in an environmentally neutral way.

Old machines contain valuable materials which should be salvaged for recycling.

Please therefore dispose of old machines via your regional collection system





DISTRIBUTOR

จัดจำหน่ายโดย

บริษัท เพ็น เค อินเตอร์เทรดดิ้ง จำกัด

อาคาร พี.บี. ทาวเวอร์ ชั้นที่ 16 เลขที่ 1000/63-64

ถนนสุขุมวิท 71 แขวงคลองตันเหนือ เขตวัฒนา กรุงเทพฯ 10110

หมายเลขโทรศัพท์ 02-493-6565 แฟกซ์ 02-391-1141

ศูนย์บริการ minimex 02-493-6565