

Although we do our best to ensure the accuracy of the contents of the instructions, due to technical updates or manufacturing adjustments, the instructions may differ slightly from the actual product. In case of doubt, please refer to the actual product. We reserve the right to update, modify or replace the product instructions at any time without prior notice. Changes may include, but are not limited to, product functions, operating procedures, technical parameters, safety tips, etc.



<https://www.gaabor-global.com>

Manufacturer: UNITED GAIN LIMITED
Entrusting party: HANGZHOU GLOBAL JET ECOMMERCE CO., LTD
Address: I-2310, 501 2nd Avenue, QianTang New Area, Hangzhou, P.R. China
Telephone: 0571-87333137
Origin: Made in China

Vietnam--- VN for short
Thailand--- TH for short
Malaysia--- MY for short
Philippines--- PH for short
Indonesia--- ID for short

Vacuum Cleaner Operation Manual

เครื่องดูดฝุ่น คู่มือการใช้งาน



CW-12T01A

Please read this manual carefully before using the product and keep it properly for future reference.

กรุณารอ่านคู่มือการใช้งานฉบับนี้อย่างละเอียดก่อนใช้งาน

The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
Children being supervised not to play with the appliance.
The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
The supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
The appliance is only to be used with the unit provided.

Safety Notice for Using

This product contains lithium batteries. When disposing of this product, use a screwdriver to remove the screws on the front and rear shell of the lock. Please remove the batteries completely from the product. Do not disassemble, roll or break the batteries internally.
Before use, be sure to read all of the following instructions to avoid injury or damage and get the best results. Be sure to keep this manual in a safe place. If you transfer this appliance to someone else, make sure to include this instruction manual as well. If the appliance is damaged due to failure to follow the requirements in this manual, the warranty service will not be enjoyed. The manufacturer/importer shall not be liable for damages caused by negligent use, etc. for not following the use requirements.
Please place the product on a stable, horizontal, heat-resistant working surface.
Never immerse the plug or any part of the vacuum cleaner in water or other liquids.
Never leave the vacuum while it is working.
Pay close attention to safety when using or near a vacuum cleaner
Be safe when pets are near the vacuum cleaner.
This device is not intended for use by persons (including children) who are physically weak, mentally retarded or mentally impaired, and is not intended for use by unattended young children or persons with disabilities unless it is safely used with the assistance of a person responsible for their safety. Do not allow children to play with or operate the vacuum cleaner to avoid accidents. Children are not allowed to clean and maintain the user without supervision, do not turn on the power when no one is operating, disconnect the adapter charging power when not in use after charging saturation or before maintenance, do not hang the charger lead on the edge of the table or counter, or contact any heat source. Accessories other than original accessories are not recommended.
Do not drag the charger wire to avoid damage to the charger wire.
This product may not be used for any purpose other than its intended use.

This product is for household use only.
Do not use any external power cables.
Do not suck liquids, sharp objects such as nails or thumbtacks.
This product cannot be used to absorb water
This product cannot be washed in water
Unplug the adapter before cleaning and maintenance.
In the event of a fault, stop using it immediately and seek advice from the service department.
If the power adapter is damaged, replace it with the original one.



Danger

In order to avoid electrical equipment to produce arc, spark and cause fire or explosion.
Keep away from flammable and explosive objects or liquids.



Notice
Remind you of the risk of injury to this product or other objects.


Precautions

 Do not pull the wires or body forcefully when unplugging the plug	 Do not use this machine to suck burning cigarette butts, hot ash, etc
 Prohibit the use of this machine to suck liquid objects	 Do not use this machine to suck sharp objects

Product Features

1. This machine adopts a detachable and washable filtration system, which is easy to use and efficient for vacuuming.
2. This machine has the characteristics of low noise, power saving, and durability, and is suitable for use in homes, hotels, office buildings, offices, and other places, creating a healthy and clean living environment. It is a major improvement in modern human living standards.
3. This machine adopts a modular structure, with stable quality and simple maintenance.
4. Transparent dust bin design, easy to load and unload, convenient to clean, is currently the simplest and most user-friendly design on the market.
5. Portable disassembly function, making it easier for users to store after use.

Product structure

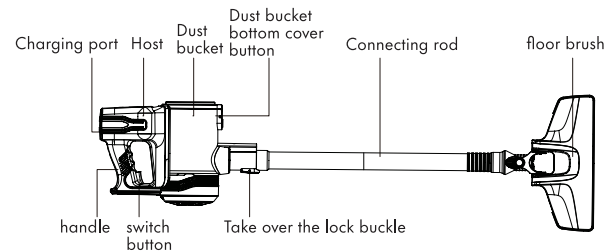


Pictures are for reference only, please prevail in kind

Technical parameters

Model	Rated voltage	Rated power
CW-12T01A	11.1V	100W (PH\MY)
Battery capacity	Dust cup capacity	Vacuum Degree
2000mAh	0.6L	12kpa

Installation guide

1. First, install the floor brush and connecting rod.
2. Install the body onto the connecting rod again.

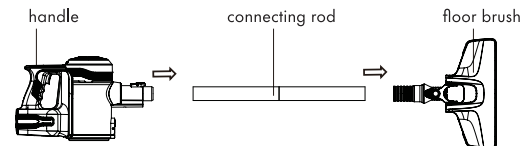


Do not insert the plug into the power source during installation


Operating instructions

Suggestion: Before use, if the battery is low or has no charge, please fully charge it before use.

Press the power button once to set the host to first gear, press it again to set it to second gear, and press it again to shut it down. When the host runs out of power during first gear operation, press the power button twice before recharging. When there is no power during the second gear operation of the host, press the switch button once before recharging.

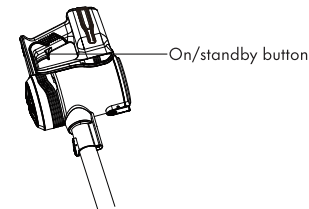

Clean the dust

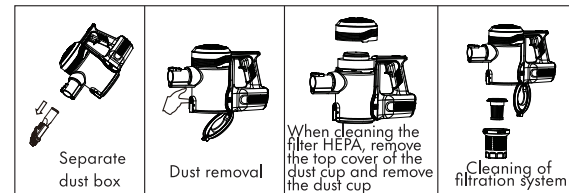

Cleaning and Maintenance

Please turn off the device and unplug the charger before cleaning.

1. Except for the host, other parts can be cleaned with warm soapy water. After cleaning, it must be thoroughly dried before being put back into use. Do not immerse the host in water or any liquid.
2. Only use a soft and slightly damp cloth to clean the outer shell of the vacuum cleaner. Do not allow any liquid substances to enter the vacuum cleaner.
3. Do not use any corrosive chemicals or abrasives.
4. Do not use when the filter is damaged or worn.
5. This product does not contain usable parts. Please do not disassemble or repair it yourself.

For better performance, please empty the dust bin and clean the filter every time you use it

1. Press and hold the lock of the dust bucket to remove the part of the dust bucket
 2. Remove the dust bin to dump the dust inside.
 3. Take out the filter and wash it in clean water. After cleaning, it should be left to air dry for 24 hours before being refilled into the dust bin.
- Important reminder: Do not use cleaning equipment to clean the filter. Do not use drying equipment to dry the vacuum cleaner. Only for natural air drying.
4. Load the dust bucket onto the main unit.

Tip: It is recommended to replace the filter every month (depending on usage) to ensure optimal performance.

Simple troubleshooting

Failure	Possible causes	Treatment
Insufficient suction	1. The filtration system is blocked; 2. The accessory connection is not firm enough;	1. Clean the dustbin and garbage in a timely manner, and clean the filter; 2. Connect the accessories firmly;
The air outlet is weak	The air outlet is blocked	Timely clean the dust at the air outlet

If any abnormalities are found during the use of this product, please refer to the table below to resolve them on your own.

Packing list

Product Model	Host	Connecting tube	Floor brush	2-in-1 Combination Brush	Charger	Manual
CW-12T01A	1	2	1	1	1	1

ห้ามบุคคลต่อไปนี้ (รวมถึงเด็ก) ใช้เครื่องใช้ไฟฟ้า ผู้ที่มีบกพร่องทางร่างกาย ทางประสาทสัมผัส ทางจิตใจ หรือขาดประสบการณ์และความรู้ในการใช้งาน เว้นแต่จะได้รับ การดูแลหรือให้คำแนะนำอย่างถูกต้อง
เด็กควรได้รับการดูแลไม่ให้เล่นเครื่องนี้
ต้องถอดปลั๊กออกจากเต้ารับก่อนทำความสะอาดหรือนำมาบำรุงรักษาเครื่อง
สายไฟที่ชำรุด ต้องทำการเปลี่ยนโดยผู้ผลิต ตัวแทนบริการ หรือบุคคลที่มีความเชี่ยวชาญเฉพาะด้าน เพื่อหลีกเลี่ยงอันตราย

คำอธิบายความปลอดภัย

ผลิตภัณฑ์นี้มีแบตเตอรี่สแตนด์บายอยู่ภายใน เมื่อต้องการทิ้งผลิตภัณฑ์นี้ กรุณาใช้ไขควงถอดน็อตที่ยึดฝาครอบด้านหน้าและด้านหลังออก จากนั้น ถอดแบตเตอรี่ออกจากตัวผลิตภัณฑ์อย่างสมบูรณ์ ห้ามแยกชิ้นส่วน กุบ บด หรือทำลายแบตเตอรี่ที่เลิกใช้งาน โปรดตรวจสอบให้แน่ใจว่าผิวของแบตเตอรี่ยังคงสภาพสมบูรณ์ และนำไปทิ้งในถังขยะที่จัดสำหรับขยะประเภทนี้โดยเฉพาะ ก่อนใช้งาน กรุณาอ่านคำแนะนำทั้งหมดในคู่มือนี้อย่างละเอียด เพื่อหลีกเลี่ยงอันตรายหรือความเสียหาย และเพื่อให้ได้ผลลัพธ์การใช้งานที่ดีที่สุด โปรดเก็บคู่มือนี้ไว้ในที่ปลอดภัย หากท่านส่งต่อเครื่องใช้ไฟฟ้านี้ให้ผู้อื่น กรุณาแนบคู่มือนี้ไปด้วยเสมอ หากเกิดความเสียหายจากการใช้งานที่ไม่เป็นไปตามคำแนะนำในคู่มือฉบับนี้ จะไม่ได้รับการรับประกันสินค้า ผู้ผลิต/ผู้นำเข้าไม่รับผิดชอบต่อความเสียหายที่เกิดจากการใช้งานโดยประมาณหรือไม่ปฏิบัติตามคำแนะนำในคู่มือ โปรดวางผลิตภัณฑ์บนพื้นผิวที่มั่นคง เรียบ และทนความร้อนได้ขณะใช้งาน ห้ามจุ่มปลั๊กหรือส่วนใดๆ ของเครื่องดูดฝุ่นลงในน้ำหรือของเหลวอื่นๆ ห้ามทิ้งเครื่องดูดฝุ่นไว้โดยไม่มีคนดูแลขณะเครื่องทำงาน ห้ามให้เด็ก เล่นหรือใช้งานเครื่องดูดฝุ่น เพื่อป้องกันอุบัติเหตุ เด็กไม่ควรทำความสะอาดหรือดูแลรักษาอุปกรณ์โดยไม่มีผู้ดูแล ห้ามเสียบปลั๊กขณะไม่มีผู้ใช้งาน หลังชาร์จเต็มแล้วหรือก่อนนำมารักษา ควรถอดปลั๊กอะแดปเตอร์ออก ห้ามปล่อยให้สายชาร์จห้อยอยู่ริมโต๊ะหรือตู้ หรือสัมผัสกับแหล่งความร้อน ไม่แนะนำให้ใช้ชิ้นส่วนเสริมนอกเหนือจากของแถมจากผู้ผลิต ห้ามลากหรือดึงสายชาร์จ เพื่อหลีกเลี่ยงความเสียหายต่อสาย ห้ามใช้งานผลิตภัณฑ์นี้นอกเหนือจากวัตถุประสงค์ที่กำหนด ผลิตภัณฑ์นี้เหมาะสำหรับใช้ภายในครัวเรือนเท่านั้น

ห้ามใช้สายไฟต่อพ่วงจากภายนอก
ห้ามดูดของเหลวหรือวัตถุมีคม เช่น ตะปูหรือหนวด
ผลิตภัณฑ์นี้ไม่สามารถใช้ดูดน้ำได้
ห้ามจุ่มผลิตภัณฑ์ลงในน้ำเพื่อล้างทำความสะอาด
ถอดปลั๊กอะแดปเตอร์ออกก่อนทำความสะอาดหรือนำมาบำรุงรักษา
หากเกิดความผิดปกติ ให้หยุดใช้งานทันทีและติดต่อฝ่ายบริการ
หากอะแดปเตอร์แหล่งจ่ายไฟชำรุด กรุณาเปลี่ยนเป็นอะแดปเตอร์ของผู้ผลิตดั้งเดิมเท่านั้น



เพื่อหลีกเลี่ยงการเกิดอาร์คไฟหรือประกายไฟจากอุปกรณ์ไฟฟ้า ซึ่งอาจก่อให้เกิดไฟไหม้หรือการระเบิด
ขณะใช้งาน กรุณาอยู่ให้ห่างจากวัตถุหรือของเหลวที่ติดไฟหรือระเบิดได้ง่าย



แจ้งเตือนถึงความเสี่ยงที่อาจก่อให้เกิดความเสียหายต่อผลิตภัณฑ์นี้หรือวัตถุอื่น ๆ


หมายเหตุ

 ห้ามดึงสายไฟหรือเครื่องโดยตรงขณะถอดปลั๊ก	 ห้ามใช้เครื่องนี้ดูดกับบุหรือที่ติดไฟ เถ้าร้อน หรือสิ่งของที่กำลังลุกไหม้
 ห้ามใช้เครื่องนี้ดูดวัตถุที่มีของเหลวปนอยู่	 กรุณาอย่าใช้เครื่องดูดฝุ่นดูดวัตถุแหลมคม

คุณสมบัติของผลิตภัณฑ์

1. เครื่องนี้ใช้ระบบกรองแบบถอดล้างได้ สะดวกต่อการใช้งาน และดูดฝุ่นได้อย่างมีประสิทธิภาพ
2. เครื่องรุ่นนี้มีคุณสมบัติคือ เสียงเบา ประหยัดพลังงาน และทนทาน เหมาะสำหรับใช้งานในบ้าน โรงแรม อาคารสำนักงาน และออฟฟิศต่าง ๆ ช่วยสร้างสภาพแวดล้อมที่สะอาดและดีต่อสุขภาพ ถือเป็นอีกหนึ่งก้าวสำคัญของการยกระดับคุณภาพชีวิตของคนยุคใหม่
3. เครื่องนี้ใช้โครงสร้างแบบแยกโมดูล มีความเสถียร และซ่อมบำรุงได้ง่าย
4. ออกแบบถังเก็บฝุ่นแบบใส ถอดประกอบง่าย ทำความสะอาดสะดวก เป็นการออกแบบที่เรียบง่ายและใช้งานได้สะดวกที่สุดในตลาดปัจจุบัน
5. ฟังก์ชันถอดประกอบแบบพกพา ช่วยให้จัดเก็บหลังใช้งานได้สะดวกยิ่งขึ้น

โครงสร้างผลิตภัณฑ์

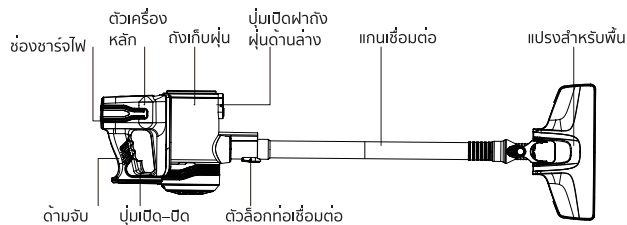


ภาพนี้ใช้เพื่อการอ้างอิงเท่านั้น รายละเอียดให้ยึดตามสินค้าจริง

พารามิเตอร์ทางเทคนิคของผลิตภัณฑ์

รุ่นผลิตภัณฑ์	พิกัดแรงดัน	พิกัดความถี่	พิกัดกำลังไฟฟ้า	ความจุสูงสุด	ระดับสัญญาณ
CW-12T01A	11.1V	100W	2000mAh	0.6L	12kpa

คู่มือการติดตั้ง

1. ติดตั้งแปรงพื้นเข้ากับแกนเชื่อมต่อก่อน
2. จากนั้นติดตั้งตัวเครื่องเข้ากับแกนเชื่อมต่อ

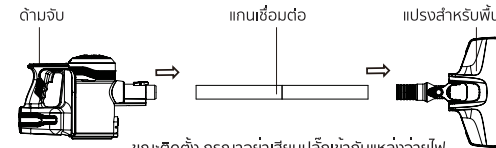

คำแนะนำในการใช้งาน

หมายเหตุ: ก่อนใช้งาน หากแบตเตอรี่มีพลังงานต่ำหรือหมด ควรชาร์จให้เต็มก่อนใช้งาน


กดปุ่มเปิด-ปิดหนึ่งครั้ง เครื่องจะทำงานในระดับที่ 1

กดอีกครั้งจะเปลี่ยนเป็นระดับที่ 2


กดอีกครั้งจะปิดเครื่อง

คำแนะนำ: หากเครื่องไม่ทำงานในโหมดระดับ 1 กรุณากดปุ่มเปิด/ปิดสองครั้งแล้วชาร์จแบตเตอรี่ใหม่

หากเครื่องไม่ทำงานในโหมดระดับ 2 กรุณากดปุ่มเปิด/ปิดหนึ่งครั้งแล้วชาร์จแบตเตอรี่ใหม่

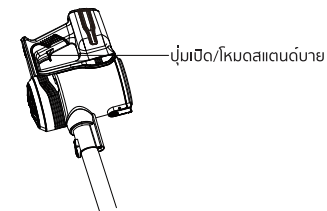


การทำความสะอาดฝุ่น




ถอดกล่องเก็บฝุ่นออก



เทฝุ่นออก



เมื่อจำเป็นต้องทำความสะอาดแผ่นกรอง HEPA ให้ถอดฝาครอบด้านบนของถัวยเก็บฝุ่น แล้วถอดถัวยฝุ่นออก



การทำความสะอาดระบบกรอง

การทำความสะอาดและการบำรุงรักษา

ก่อนทำความสะอาด กรุณาปิดเครื่องและถอดปลั๊กที่ชาร์จ์ออกก่อน

- ยกเว้นตัวเครื่องหลัก ส่วนอื่น ๆ สามารถล้างด้วยน้ำสบูได้ หลังทำความสะอาดต้องทำให้แห้งสนิทก่อนนำกลับมาใช้งาน ห้ามนำตัวเครื่องหลักแช่น้ำหรือน้ำยาใด ๆ
- ให้ใช้ผ้านุ่มชุบน้ำหมาด ๆ เช็ดเฉพาะตัวเครื่องด้านนอก ห้ามของเหลวใด ๆ เข้าไปในเครื่องดูดฝุ่น
- ห้ามใช้สารเคมีที่มีฤทธิ์กัดกร่อนหรือสารขัดถูใด ๆ
- หากแผ่นกรองเสียหายหรือสึกหรอ ห้ามใช้งาน
- ผลิตภัณฑ์นี้ไม่มีชิ้นส่วนที่ผู้ใช้สามารถซ่อมได้ ห้ามถอดหรือซ่อมเอง

เพื่อผลการใช้งานที่ดียิ่งขึ้น กรุณาทำความสะอาดถังเก็บฝุ่นและแผ่นกรองทุกครั้งหลังใช้งาน

- ถอดลิ้นชักฝุ่นเพื่อถอดถังออก
- เมื่อถอดถังแล้วสามารถเทฝุ่นออกได้ทันที
- นำแผ่นกรองออกมาล้างในน้ำสะอาด แล้ววางตากลมให้แห้ง 24 ชั่วโมงก่อนนำกลับเข้าไป ห้ามใช้เครื่องซัก ห้ามใช้เครื่องเป่าร้อน ต้องใช้วิธีผึ่งลมตามธรรมชาติเท่านั้น
- ติดตั้งถังเก็บฝุ่นกลับเข้ากับตัวเครื่อง

แนะนำให้เปลี่ยนแผ่นกรองทุก 1 เดือน (หรือขึ้นอยู่กับการใช้งาน) เพื่อให้เครื่องทำงานได้เต็มประสิทธิภาพ

แนวทางแก้ไขปัญหาเบื้องต้น

อาการเสีย	สาเหตุที่เป็นไปได้	วิธีแก้ไข
แรงดูดอ่อน	1.ระบบกรองอุดตัน 2.อุปกรณ์เสริมเชื่อมต่อไม่แน่นหนาพอ	1.กรุณาทำความสะอาดถังเก็บฝุ่นและล้างตัวกรองอย่างสม่ำเสมอ 2.กรุณาต่ออุปกรณ์เสริมให้แน่นหนาก่อนใช้งาน
ไม่มีลมออก	ช่องลมถูกอุดตัน	กรุณาทำความสะอาดฝุ่นที่ช่องลมออกอย่างทั่วถึง

หากพบปัญหาระหว่างใช้งาน โปรดดูตารางด้านล่างเพื่อแก้ไขเบื้องต้น

รายการอุปกรณ์ในกล่อง

รุ่นสินค้า	แปรงสำหรับพื้น จำนวน	ตัวเครื่องหลัก จำนวน	อะแดปเตอร์ชาร์จ์	แท่นเชื่อมต่อ	คู่มือการใช้งาน
CW-12T01A	1 ชิ้น	1 เครื่อง	1	2	1
อแปรงแบบ 2-in-1					
1					