

Although we do our best to ensure the accuracy of the contents of the instructions, due to technical updates or manufacturing adjustments, the instructions may differ slightly from the actual product. In case of doubt, please refer to the actual product. We reserve the right to update, modify or replace the product instructions at any time without prior notice. Changes may include, but are not limited to, product functions, operating procedures, technical parameters, safety tips, etc.



<https://www.gaabor-global.com>

Entrusting party: HANGZHOU GLOBAL JET ECOMMERCE CO., LTD
Address: 1-2310, 501 2nd Avenue, QianTang New Area, Hangzhou, P.R. China
Telephone: 0571-87333137
Origin: Made in China

Vietnam--- VN for short
Thailand--- TH for short
Malaysia--- MY for short
Philippines--- PH for short
Indonesia--- ID for short



PH

MY

TH

Electric pot Operation Manual



GR-N15A



GR-N20A



EC-20M01A



EC-20E01B



EC-30M01A

Please read this manual carefully before using the product and keep it properly for future reference.

กรุณาอ่านคู่มือการใช้ผลิตภัณฑ์นี้อย่างรอบคอบก่อนใช้และเก็บไว้ให้ดีเพื่อให้สะดวกในการอ่านในอนาคต

The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

Children being supervised not to play with the appliance.

This appliances is intended to be used in household and similar applications such as:

-staff kitchen areas in shops, offices and others working environments;

-farm houses;

-by clients in hotels, motels and other residential type environments;

-bed and breakfast type environments.

The appliance must not be immersed.

Please avoid spillage on the connector

Potential injury from misuse.

The heating element surface is subject to residual heat after use.

Precautions

1.Please read this manual carefully before using the product and keep it properly for future reference.

2.Please place the product horizontally at a stable place and keep it upright when using. Hold the product holder tightly and operate in a safe environment that is dry and out of the reach of children. When your hand leaves the product holder, pay attention to keeping the product balanced and stable, to prevent scalding caused by splashing boiling water in the boiler when the boiler is toppled;

3.It is strictly forbidden to put this product in water or wash it with water to avoid short circuit of internal circuit, which may cause danger;

4.Do not share a socket with other appliances at the same time, and use 10A and above sockets separately to avoid electric shock or fire accidents;

5.Please check the power cord and plug of the product before use. In case of aging, discoloration, damage and expansion, stop using the product to avoid electric shock or fire accidents;

6.Do not use this product in humid and high temperature environments to avoid electric shock or fire accidents;

7.It is strictly forbidden to use this product unattended. Please unplug the power cord when not in use. Do not let children or elderly people without self-care ability operate this product alone to avoid electric shock or fire accidents;

8.Do not switch on the power when there is no water in the pan, adding water, cleaning or moving the product;

9.Do not touch the transparent glass cover when the product is working, keep your hands away from the steam drain hole, and do not touch the heating plate to prevent scalding by steam and heating parts;

10.After using this product, be sure to pull out the power plug in time, dry it and place it in a safe place after cleaning. If the power plug is not pulled out in time, the product will be electrified for a long time, and the product will repeatedly dry burn - protect - dry burn - protect the reciprocating cycle, which will greatly shorten the product life, and damage the non-stick coating in the heating plate, which is very likely to cause a fire accident;


11.In case of damage to the power cord, it must be replaced with special power cord or accessories purchased from the store;

12.Note for use of non-stick layer: Do not cook food with high sugar content, such as bubble and chocolate. In case of burning during cooking, soak it with detergent and water for 6 hours, and then clean it with sponge or scouring pad to better clean the residue;


Technical parameters(PH\MY)

Product Model	Rated Power	Rated Voltage	Rated Frequency	Rated Capacity
GR-N15A	600W	220-240V~	50/60Hz	1.5L
GR-N20A	600W	220-240V~	50/60Hz	2.0L
EC-20M01A	600W	220-240V~	50/60Hz	2.0L
EC-20E01B	600W	220-240V~	50/60Hz	2.0L
EC-30M01A	600W	220-240V~	50/60Hz	3.0L

Product parts description

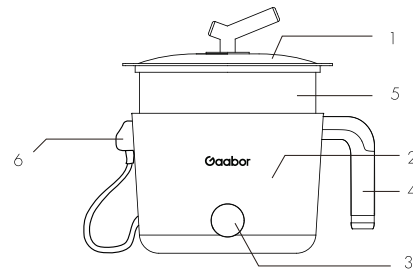


GR-N15A

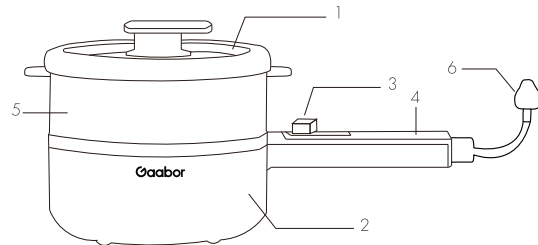

EC-30M01A

Pictures are for reference only,
please prevail in kind

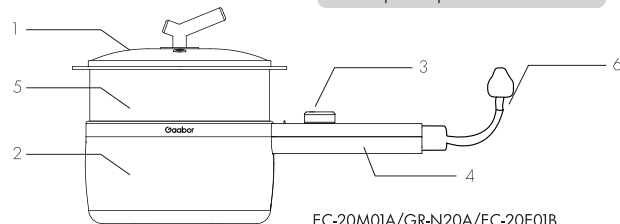

EC-20M01A/GR-N20A/EC-20E01B

1. Glass cover
2. Boiler
3. Gear knob
4. Handle
5. Steamer
6. Power cord

Operation method

1. Boil water

- ① Remove the cover and add clean water. Make sure that the water cannot exceed the "Maximum" limit mark, and then cover the cover.
- ② Plug the power plug into the power supply, turn the switch knob to "II", the indicator light is on, and the product starts to heat.
- ③ After about 10 minutes, the water starts to boil, then turn the switch knob to "0", the indicator light goes off, and the product stops heating.

2. Noodles

- ① Remove the cover and add clean water. Make sure that the water cannot exceed the "Maximum" limit mark, and then cover the cover.
- ② Plug the power plug into the power supply, turn the switch knob to "II", the indicator light is on, and the product starts to heat.
- ③ After about 10 minutes, the water starts to boil. Put the noodles into the boiler. The water temperature drops, and after the water boils again, add the seasoning and stir evenly, and turn the switch knob to "II". Turn the switch knob to "0" when the indicator light is off. The product will stop heating when the indicator light is off.

3. Hot pot

- ① Remove the cover and add clean water. Make sure that the water cannot exceed the "Maximum" limit mark, and then cover the cover.
- ② Plug the power plug into the power supply, turn the switch knob to "II", the indicator light is on, and the product starts to heat.
- ③ After about 10 minutes, the water starts to boil. Put the side dishes in the boiler and enjoy them after cooking. If you want to reduce the fire, turn the switch knob to "I". If you don't need to heat up, turn the switch knob to "0" and turn off the power.

4. Steaming function (heating dishes)

- ① Remove the glass cover, add some water, put the steaming rack in the boiler, then put the food on the steaming rack, and cover the glass cover.
- ② Plug the power plug into the power supply, turn the switch knob to "II", the indicator light is on, and the product starts to heat.
- ③ After about 7-8 minutes, the water starts to boil. After the food is hot, turn the switch knob to "I" and heat it with low fire for a while, then turn the switch knob to "0" and turn off the power.

Working principle

- 1、When the knob is turned to "0", the product is not powered on, the indicator light is not on, and the product is not heated.
- 2、When the knob is turned to "I", the product is powered on, the indicator light is on, and the product is heated slowly under 300W low power.
- 3、When the knob is turned to "II", the product is powered on, the indicator light is on and heated, and the product is heated rapidly under 600W high power.
- 4、In case that the indicator light suddenly fails to light when the power is on.


There are two reasons for this situation: the first situation is that the boiler is stuck, and the second situation is that there is no water in the boiler, and the boiler automatically starts the anti-overheating protection mode, which will automatically repeat heating every one to three minutes.

- 5、Please be sure to turn the knob to "0" when you stop using the product to ensure safety

Cleaning and maintenance

- 1、After each use, first unplug the power plug, let it naturally cool to room temperature, then clean it with scouring pad or soft cloth, wipe it dry, and place it in a safe and ventilated place.
- 2、It is strictly prohibited to immerse the boiler in water for cleaning, so as not to damage the internal electrical components of the product. The glass cover can be washed in water.
- 3、Scratch the non-stick coating in the boiler carelessly or local natural wear of the non-stick coating in the boiler after a long time of use will not affect the normal use of the product, but will increase the difficulty of product cleaning.
- 4、When the boiler is too greasy, drop an appropriate amount of detergent into the boiler, then wipe it repeatedly with a wet rag, and place it in a safe and ventilated place after drying.
- 5、The body of this product is sprayed with a non-stick coating, which will not deposit scale after long-term use.

Electrical schematic diagram

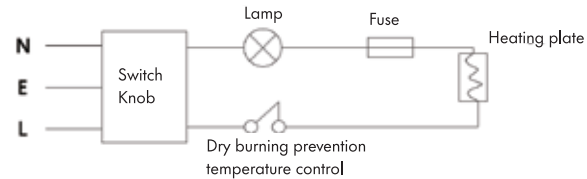

Note: The picture is for reference only, please prevail in kind, changes will be made without notice.

Packing list

Name	Electric pot	Steamer	Cover	Power cord	Manual
Qty.	1	1	1	1	1

ห้ามบุคคล (รวมถึงเด็ก) ที่มีความสามารถบกพร่องทางร่างกาย ทางประสาทสัมผัส ทางจิต หรือผู้ที่ขาดประสบการณ์และความรู้ใช้เครื่องใช้ไฟฟ้านี้ เว้นแต่จะได้รับการดูแลหรือให้คำแนะนำ

เด็กควรได้รับการดูแลไม่ให้เล่นเครื่องใช้ไฟฟ้านี้

เครื่องใช้ไฟฟ้านี้มีวัตถุประสงค์เพื่อใช้ในครัวเรือนและการใช้งานที่ใกล้เคียง เช่น:

- ห้องครัวสำหรับพนักงานทำอาหารในร้านค้า สำนักงาน และสภาพแวดล้อมการทำงานอื่น ๆ

- บ้านสวน

- ลูกค้ายในโรงแรม โมเต็ล และประเภทที่พักอาศัยอื่นๆ

- ที่พักพร้อมอาหารเช้า

- ห้ามนำเครื่องใช้ในน้ำเด็ดขาด

- โปรดหลีกเลี่ยงการหกหรือไหลบริเวณขั้วต่อ เพราะอาจได้รับบาดเจ็บจากการใช้งานผิดประเภท พื้นผิวองค์ประกอบความร้อนอาจมีความร้อนตกค้างหลังการใช้งาน

หัวข้อหนึ่ง: ข้อควรระวัง

1.โปรดอ่านคู่มือการใช้ผลิตภัณฑ์อย่างรอบคอบและเก็บไว้ให้ดีเพื่อการอ่านในอนาคต

2.ในขณะที่ใช้งานกรุณาวางผลิตภัณฑ์บนพื้นผิวที่เรียบและแห้งอย่างสม่ำเสมอเพื่อป้องกันอุบัติเหตุที่อาจเกิดขึ้นจากน้ำหรือของเหลวที่หกหรือหกเลอะเทอะ ผลิตภัณฑ์นี้ไม่ได้ออกแบบมาเพื่อป้องกันน้ำหรือของเหลวที่หกหรือหกเลอะเทอะ

3.ห้ามนำผลิตภัณฑ์นี้ลงในน้ำหรือแช่ในน้ำ เพื่อป้องกันไฟฟ้าลัดวงจรภายในซึ่งอาจเป็นอันตราย

4.อย่าใช้ช่องเสียบปลั๊กร่วมกับอุปกรณ์ไฟฟ้าอื่นๆพร้อมกันควรใช้ปลั๊กแยกอย่างน้อย 10 แอมป์ขึ้นไปมิฉะนั้นอาจเกิดอันตรายในเรื่องการไฟฟ้าช็อตหรือเหตุเพลิงไหม้

5.ก่อนใช้โปรดตรวจสอบสายไฟและปลั๊กของผลิตภัณฑ์หากพบสีเปลี่ยนสีชำรุดหรือบวมควรหยุดใช้ผลิตภัณฑ์นี้เพื่อป้องกันการช็อตไฟฟ้าหรือเหตุเพลิงไหม้

6.อย่าใช้ผลิตภัณฑ์ในสภาพแวดล้อมที่มีความชื้นและอุณหภูมิสูง เนื่องจากอาจทำให้เกิดการไฟฟ้าช็อตหรือเหตุเพลิงไหม้

7.ห้ามใช้ผลิตภัณฑ์ในสภาพที่ไม่มีคนดูแลและถอดสายไฟเมื่อไม่ใช่อย่าให้เด็กหรือผู้สูงอายุที่ไม่สามารถดูแลตนเองใช้ผลิตภัณฑ์เอง มิฉะนั้นอาจเกิดไฟฟ้าช็อตหรือเหตุเพลิงไหม้

8.ห้ามเปิดเครื่องในกรณีที่ไม่มีความจำเป็น ในขณะที่ไม่ได้ใช้งาน เมื่อทำความสะอาดหรือเคลื่อนย้ายผลิตภัณฑ์

9.ในระหว่างที่เครื่องทำงาน อย่าสัมผัสที่ฝาครอบ ไม่ควรนำมือเข้าไปใกล้รูระบายไอน้ำ และอย่าสัมผัสกับผลิตภัณฑ์โดยตรง

10.เมื่อเสร็จงานโปรดถอดปลั๊กไฟทันทีและทำความสะอาดผลิตภัณฑ์ให้สะอาดและให้แห้งแล้ววางไว้ในที่ปลอดภัยการไม่ถอดปลั๊กไฟทันทีจะทำให้ผลิตภัณฑ์มีกระแสไฟฟ้าตลอดเวลาซึ่งอาจทำให้เกิดการควบคุมชำรุดซึ่งอาจส่งผลให้ผลิตภัณฑ์มีอายุการใช้งานสั้นลงอย่างมาก และทำลายผิวหุ้มที่ไม่เกาะแน่นภายในแผ่นฝา ซึ่งอาจเป็นสาเหตุของเหตุระเบิด


11.หากสายไฟอ่อนเสียหาย จะต้องใช้สายไฟที่เป็นพิเศษหรืออุปกรณ์ที่ซื้อจากร้านค้ามาแทน

12.ระวังการใช้งานชิ้นไม้ควรดัดอาหารที่มีระดับน้ำตาลสูงเช่นทำโยเกิร์ตทอดซอซโกเลตเมื่ออาหารถูกคว่ำให้สัแล้วควรแช่ในน้ำผสมสบู่ละลายเป็นเวลา 6 ชั่วโมงจากนั้นใช้ฟองน้ำหรือผ้าชุบน้ำเพื่อทำความสะอาดเพื่อให้สารที่เหลืออยู่เรียบง่ายขึ้น


ตารางพารามิเตอร์ทางเทคนิคของผลิตภัณฑ์ (TH)

รุ่นผลิตภัณฑ์	กำลังไฟฟ้าที่กำหนด	แรงดันไฟฟ้าที่กำหนด	ความถี่ที่กำหนด	ความจุที่กำหนด
GR-N15A	600W	220-240V~	50/60Hz	1.5L
GR-N20A	600W	220-240V~	50/60Hz	2.0L
EC-20M01A	600W	220-240V~	50/60Hz	2.0L
EC-20E01B	600W	220-240V~	50/60Hz	2.0L
EC-30M01A	600W	220-240V~	50/60Hz	3.0L

การแนะนำส่วนประกอบหลัก

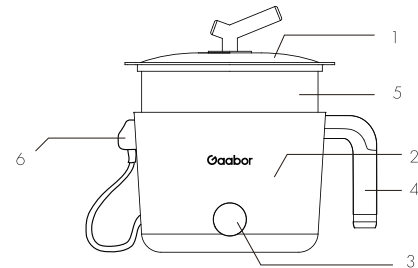


GR-N15A

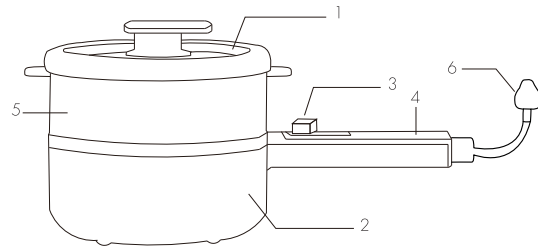

EC-30M01A

รูปภาพใช้เพื่อการอ้างอิงเท่านั้น กรุณา
อ้างอิงจากสินค้าจริง

1. ฟาปิดแก้ว
2. ตัวหม้อ
3. ปุ่มปรับระดับ
4. ที่จับ
5. ชั้นนึ่ง
6. สายไฟฟ้า

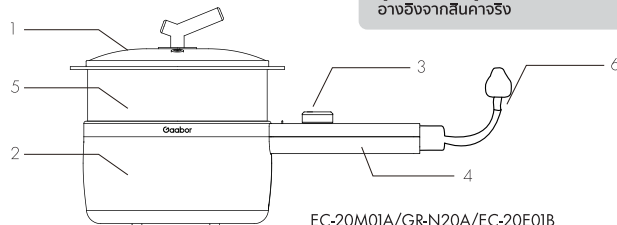

EC-20M01A/GR-N20A/EC-20E01B

คำแนะนำในการใช้งาน

1. การต้มน้ำ

- ① เปิดฝาแล้วเติมน้ำสะอาด เพิ่มน้ำไม่ให้เกินเส้นขีดระดับน้ำสูงสุด จากนั้นปิดฝา
- ② เสียบปลั๊กไฟเข้ากับเต้าเสียบไฟฟ้า ปรับปุ่มสวิตช์ไปที่ตำแหน่ง "II" ไฟแสดงสถานะจะติด และผลิตภัณฑ์เริ่มทำความร้อน
- ③ หลังจากประมาณ 10 นาที น้ำจะเริ่มเดือด ปรับปุ่มสวิตช์ไปที่ตำแหน่ง "0" ไฟแสดงสถานะจะดับและผลิตภัณฑ์หยุดทำความร้อน

2. การต้มบะหมี่

- ① เปิดฝาแล้วเติมน้ำสะอาด ให้ระวังเพิ่มน้ำไม่ให้เกินเส้นขีดระดับน้ำสูงสุด จากนั้นปิดฝา
- ② เสียบปลั๊กไฟเข้ากับเต้าเสียบไฟฟ้า ปรับปุ่มสวิตช์ไปที่ตำแหน่ง "II" ไฟแสดงสถานะจะติด และผลิตภัณฑ์เริ่มทำความร้อน
- ③ หลังจากประมาณ 10 นาที น้ำจะเริ่มเดือด ใส่บะหมี่ลงในหม้อ หลังจากน้ำเริ่มเดือดอีกครั้ง ให้ตีเครื่องปรุงและผสมให้เข้ากัน ปรับปุ่มสวิตช์กลับไปที่ตำแหน่ง "II" จากนั้นเมื่อไฟแสดงสถานะดับ ปรับปุ่มสวิตช์ไปที่ตำแหน่ง "0" ไฟแสดงสถานะจะดับ และผลิตภัณฑ์หยุดทำความร้อน

3. การทำหม้อไฟ

- ① เปิดฝาแล้วเติมน้ำสะอาด ให้ระวังเพิ่มน้ำไม่ให้เกินเส้นขีดระดับน้ำสูงสุด จากนั้นปิดฝา
- ② เสียบปลั๊กไฟเข้ากับเต้าเสียบไฟฟ้า ปรับปุ่มสวิตช์ไปที่ตำแหน่ง "II" ไฟแสดงสถานะจะติด และผลิตภัณฑ์เริ่มทำความร้อน
- ③ หลังจากประมาณ 10 นาที น้ำจะเริ่มเดือด ใส่เครื่องเคียงลงในหม้อ ปรุงจนสุกแล้วก็พร้อมรับประทาน ถ้าต้องการลดไฟ ให้ปรับปุ่มสวิตช์ไปที่ตำแหน่ง "I" และเมื่อไม่ต้องการให้ทำความร้อนอีก ปรับปุ่มสวิตช์ไปที่ "0" และปิดแหล่งจ่ายไฟ

4. การใช้งานฟังก์ชันการนึ่ง (เพื่ออุ่นอาหาร)

- ① เปิดฝาแล้ว ใส่น้ำสะอาดเป็นจำนวนที่เหมาะสม จากนั้นวางชั้นนึ่งลงในหม้อ วางอาหารบนชั้นนึ่งและปิดฝา
- ② เสียบปลั๊กไฟเข้ากับเต้าเสียบไฟฟ้า ปรับปุ่มสวิตช์ไปที่ตำแหน่ง "II" ไฟแสดงสถานะจะติด และผลิตภัณฑ์เริ่มทำความร้อน
- ③ หลังจากประมาณ 7-8 นาที น้ำจะเริ่มเดือด หลังจากอาหารร้อนดีแล้ว ปรับปุ่มสวิตช์ไปที่ตำแหน่ง "I" เพื่อให้ความร้อนเบาๆ สักพัก จนได้ผลลัพธ์ที่ต้องการ แล้วปรับปุ่มสวิตช์ไปที่ "0" ปิดแหล่งจ่ายไฟ


หลักการทำงานของผลิตภัณฑ์

- 1.เมื่อปุ่มหมุนขึ้นไป "0" ผลิตภัณฑ์จะไม่มีไฟฟ้าผ่าน ไฟแสดงสถานะจะไม่เปิด และผลิตภัณฑ์ไม่ทำความร้อน
- 2.เมื่อปุ่มหมุนขึ้นไป "I" ผลิตภัณฑ์จะมีไฟฟ้าผ่านไฟแสดงสถานะเปิดและทำความร้อนณขณะนี้ผลิตภัณฑ์ทำความร้อนด้วยกำลังไฟฟ้าต่ำ 300 วัตต์ ทำให้การทำความร้อนช้า
- 3.เมื่อปุ่มหมุนขึ้นไป "II" ผลิตภัณฑ์จะมีไฟฟ้าผ่านไฟแสดงสถานะเปิดและทำความร้อนณขณะนี้ผลิตภัณฑ์ทำความร้อนด้วยกำลังไฟฟ้าสูง 600W/800W ทำให้การทำความร้อนเร็ว
- 4.ถ้าในขณะที่มีไฟฟ้าผ่านและไฟแสดงสถานะกันที่ไม่เปิด มีสองสาเหตุของสถานการณ์นี้สาเหตุแรกคือหม้อติดสาเหตุที่สองคือไม่มีน้ำในหม้อหม้อจะเปิดใช้งานโหมดป้องกันความร้อนสูงเกินไปโดยอัตโนมัติและจะทำความร้อนซ้ำโดยอัตโนมัติภายในเวลาหนึ่งถึงสามนาที
- 5.เพื่อความปลอดภัย หากหยุดใช้งานผลิตภัณฑ์ ต้องปรับปุ่มหมุนไปที่ "0"

การทำความสะอาดและการบำรุงรักษา

- 1.หลังจากใช้งานทุกครั้งให้ถอดปลั๊กไฟออกก่อนและให้หม้อเย็นลงจนถึงอุณหภูมิปกติจากนั้นใช้ฟองน้ำหรือผ้านุ่มเช็ดทำความสะอาดและเช็ดให้แห้ง วางไว้ในที่ที่ปลอดภัยและมีการระบายอากาศดี
- 2.ห้ามจุ่มหม้อลงในน้ำเพื่อทำความสะอาดเพราะจะทำให้ส่วนประกอบทางไฟฟ้าภายในผลิตภัณฑ์เสียหายผ่าแก้วสามารถจุ่มลงในน้ำเพื่อล้างได้
- 3.หากเพลอขัดข้องผิวเคลือบกันติดภายในหม้อหรือหลังจากใช้งานไปนานๆมีการสึกหรอตามธรรมชาติสิ่งเหล่านี้จะไม่ส่งผลต่อการใช้งานปกติของผลิตภัณฑ์ แต่อาจเพิ่มความยากลำบากในการทำความสะอาด
- 4.ถ้าหม้อมีความมันมากสามารถหยดน้ำยาทำความสะอาดลงในหม้อแล้วใช้ผ้าชุบน้ำเช็ดซ้ำหลายๆครั้งจนสะอาดทำให้แห้งแล้ววางไว้ในที่ที่ปลอดภัยและมีการระบายอากาศดี
- 5.ผลิตภัณฑ์นี้มีการพ่นเคลือบกันติดในตัวหม้อการใช้งานระยะยาวก็จะเป็นการสะสมของตะกอนน้ำช่วยประหยัดความยุ่งยากในการขจัดตะกอนน้ำ

แผนภาพหลักการทำงานของเครื่องใช้ไฟฟ้า

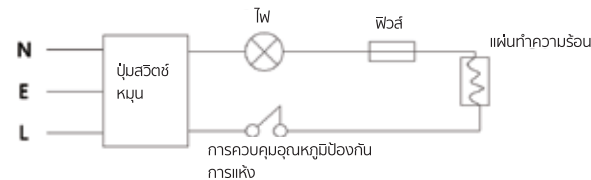

หมายเหตุ: ภาพเป็นเพียงสำหรับการอ้างอิงเท่านั้น กรุณาอ้างอิงจากสินค้าจริง หากมีการเปลี่ยนแปลงจะไม่มีการแจ้งให้ทราบล่วงหน้า

รายการในกล่อง

ชื่อ	หม้อไฟฟ้า	ตะแกรง	ฝาหม้อ	สายไฟ	คู่มือการใช้งาน
จำนวน	1	1	1	1	1