

LocknLock



คู่มือการใช้งาน

กาต้มน้ำไฟฟ้า EJK216WHT

220-240V, 50-60Hz, 1360W, 1.2L

LocknLock

กรุณาอ่านคู่มืออย่างละเอียดก่อนการใช้งานและเก็บคู่มือนี้ไว้
เพื่อการใช้งานในอนาคต


สารบัญ

คำแนะนำด้านความปลอดภัย	3
ส่วนประกอบของผลิตภัณฑ์	4
ก่อนการใช้งานครั้งแรก	4
วิธีการใช้งาน	5
การดูแล และการบำรุงรักษา	6
ข้อมูลจำเพาะของผลิตภัณฑ์	6
ปัญหาและการแก้ไข	7

คำแนะนำด้านความปลอดภัย

1. อ่านคู่มืออย่างละเอียดก่อนใช้งาน
2. เด็กที่อายุ 8 ปีขึ้นไปและบุคคลที่มีความบกพร่องทางร่างกาย ประสาทสัมผัส หรือจิตใจ หรือผู้ที่ขาดประสบการณ์ และความรู้ สามารถใช้ผลิตภัณฑ์นี้ได้ หากได้รับการดูแล หรือคำแนะนำ เกี่ยวกับการใช้ผลิตภัณฑ์นี้อย่างปลอดภัย และตระหนักถึงอันตรายที่เกี่ยวข้องในการใช้งาน
3. เก็บอุปกรณ์และสายไฟให้อยู่ห่างจากเด็กที่มีอายุน้อยกว่า 8 ปี
4. ห้ามใช้ผลิตภัณฑ์นอกเหนือจากวัตถุประสงค์ที่กำหนด
5. ผลิตภัณฑ์นี้ผลิตขึ้นเพื่อใช้งานในครัวเรือน และสถานที่ที่คล้ายกัน เช่น พื้นที่ครัวในสำนักงาน หรือบ้านพัก ไม่ควรนำไปใช้ในเชิงพาณิชย์
6. โปรดตรวจสอบแรงดันไฟฟ้าของเตารับที่ใช้ในบ้าน ว่าเหมาะกับผลิตภัณฑ์หรือไม่
7. ต้องใช้กาต้มน้ำคู่กับฐานจ่ายไฟที่ให้มาเท่านั้น
8. ห้ามใช้เตารับร่วมกับเครื่องใช้ไฟฟ้าอื่น
9. ห้ามวางผลิตภัณฑ์ และสายไฟไว้ที่ขอบโต๊ะ หรือบริเวณที่มีความร้อน เช่น ใกล้เตาแก๊ส เตาไฟ หรือเตาอบ เพื่อป้องกันไม่ให้ผลิตภัณฑ์ และสายไฟเสียหาย
10. ห้ามทำความร้อนโดยไม่มีน้ำในหม้อ
11. วางผลิตภัณฑ์ไว้บนที่เรียบและมั่นคง วางให้ห่างจากบริเวณที่มีความร้อน เพื่อไม่ให้ชิ้นส่วนที่เป็นพลาสติกเสียหายและห้ามวางใกล้กับเครื่องใช้ไฟฟ้าอื่น ๆ
12. ขณะต้มน้ำ ห้ามสัมผัสบริเวณพวยกา ใอน้ำร้อน และไม่ควรเปิดฝาทิ้งไว้ให้น้ำ ในระหว่างเครื่องกำลังทำงาน เพื่อป้องกันการถูกน้ำร้อนลวก
13. โปรดระมัดระวังขณะเคลื่อนย้ายผลิตภัณฑ์
14. ถอดปลั๊กทุกครั้งเมื่อไม่ใช้งาน โดยจับที่ปลั๊กแล้วดึงออก ห้ามดึงที่สายไฟ
15. ห้ามวาง หรือจุ่มผลิตภัณฑ์ลงในน้ำ หรือของเหลวใด ๆ
16. หากผลิตภัณฑ์และสายไฟเสียหาย ห้ามถอดประกอบด้วยตนเอง โปรดหยุดใช้งาน และติดต่อศูนย์บริการลูกค้า

ส่วนประกอบของผลิตภัณฑ์

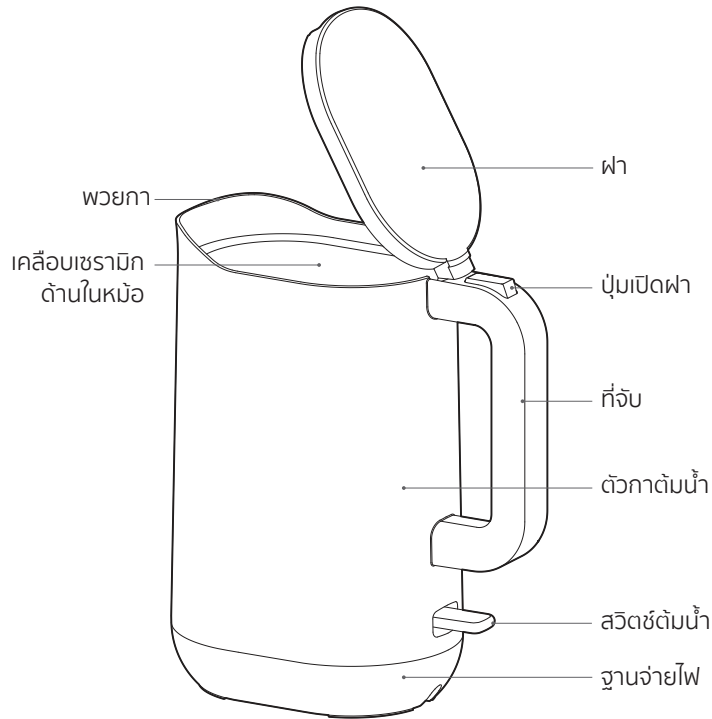

ก่อนการใช้งานครั้งแรก

1. โปรดนำบรรจุภัณฑ์ออก และระวังอย่าให้เด็กเล่นบรรจุภัณฑ์พลาสติกครอบบนศีรษะ (มีความเสี่ยงที่จะขาดอากาศหายใจ)
2. วางผลิตภัณฑ์ไว้บนที่เรียบและมั่นคง
3. ก่อนการใช้งานครั้งแรก หรือหลังจากที่ไม่ได้ใช้งานผลิตภัณฑ์เป็นเวลานาน โปรดเติมน้ำที่ระดับสูงสุด และตุนน้ำ 1-2 ครั้งเพื่อทำความสะอาดด้านในหม้อ
* น้ำที่ตุนในขั้นตอนนี้ไม่สามารถดื่มได้
4. กรุณาอ่านคู่มืออย่างละเอียดก่อนการใช้งานและเก็บคู่มือนี้ไว้เพื่อการใช้งานในอนาคต หากส่งต่อผลิตภัณฑ์นี้ให้กับผู้อื่น โปรดนำคู่มือการใช้งานไปด้วย

วิธีการใช้งาน

1. หากต้องการเติมน้ำ ให้แยกกาต้มน้ำออกจากฐาน เปิดฝา และเติมน้ำลงไป ระวังอย่าเติมน้ำน้อยกว่าระดับ min และมากกว่าระดับ max

หมายเหตุ :

- หากเติมน้ำมากเกินไป น้ำเดือดอาจล้นออกมา
- หากเติมน้ำน้อยเกินไป ตัวเครื่องจะหยุดทำงานก่อนที่น้ำจะเดือด
- โปรดใช้น้ำอุณหภูมิห้อง
- แนะนำให้ใช้น้ำที่ผ่านการกรองมาแล้ว

2. ตรวจสอบให้แน่ใจว่าวางผลิตภัณฑ์ไว้บริเวณที่แห้ง และไม่มี ความชื้น
3. วางกาต้มน้ำลงบนฐานจ่ายไฟ โปรดตรวจสอบว่าวางอย่างถูกต้อง และมั่นคงแล้ว
4. เสียบปลั๊กเข้ากับเต้ารับ
5. กดสวิตช์ตุนน้ำ จากนั้นไฟแสดงสถานะจะสว่างขึ้น และเริ่มทำความร้อน
6. เมื่อตุนน้ำเสร็จเรียบร้อยแล้ว ตัวเครื่องจะปิดสวิตช์โดยอัตโนมัติและไฟแสดงสถานะจะดับลง
7. ถอดปลั๊กออก ยกกาต้มน้ำออกจากฐาน แล้วจึงเทน้ำ

หมายเหตุ :

- ค่อย ๆ เทน้ำเดือดอย่างช้า ๆ และระมัดระวัง เพื่อป้องกันการถูกน้ำร้อนลวก
- หากต้มน้ำที่มีสีอาจทำให้ผลิตภัณฑ์เป็นคราบ
- **ในช่วงที่น้ำเริ่มเดือด จะมีเสียงตุนน้ำ ซึ่งเกิดขึ้นตามกระบวนการทำงานของตัวเครื่อง**

ระบบตัดไฟอัตโนมัติ

1. เมื่อกาต้มน้ำทำความร้อนขณะที่ไม่มีน้ำ ตัวเครื่องจะตัดไฟโดยอัตโนมัติ เพื่อป้องกันไม่ให้เกิดกาต้มน้ำเสียหาย
2. เมื่อเกิดเหตุการณ์ในข้อที่ 1 กรุณาถอดปลั๊กและรอให้กาต้มน้ำเย็นตัวลง ซึ่งจะใช้เวลาประมาณ 10 นาที
* ห้ามเทน้ำเย็นลงไปบนกาต้มน้ำ เพื่อลดอุณหภูมิในทันที เพราะจะทำให้อายุการใช้งานของผลิตภัณฑ์สั้นลง

การดูแล และการบำรุงรักษา

- 1. ถอดปลั๊ก และรอให้ผลิตภัณฑ์เย็นตัวลงก่อนทุกครั้งที่จะทำความสะอาด
- 2. ห้ามแช่ หรือจุ่มผลิตภัณฑ์ลงในน้ำ หรือของเหลวใด ๆ
- 3. เก็บผลิตภัณฑ์ในที่ที่ปลอดภัย และมีอากาศถ่ายเท

ระบบตัดไฟอัตโนมัติ

- 1. เหน้าสัมสายชูลงไปประมาณ 0.5 ลิตร แล้วแช่ทิ้งไว้ประมาณ 1 ชั่วโมง
- 2. เหน้าสัมสายชูลงไป แล้วเช็ดคราบตะกอนที่เหลืออกด้วยผ้าชุบน้ำ
- 3. เหน้าเปล่าลงไป รอให้น้ำเดือด แล้วเทน้ำทิ้งประมาณ 3-5 ครั้ง เพื่อจัดกลั่นน้ำสัมสายชูล
- 4. เช็ดด้านนอกด้วยผ้านุ่ม ห้ามใช้ฟอยขัด หรืออุปกรณ์ที่เป็นโลหะ รวมถึงน้ำยาที่มีฤทธิ์กัดกร่อนในการทำความสะดวก

การดูแล และการบำรุงรักษา

ชื่อสินค้า	กาต้มน้ำไฟฟ้า
รหัสสินค้า	EJK216WHT
แรงดันไฟฟ้า	220-240V
ความถี่	50-60Hz
กำลังไฟฟ้า	1360W
ความจุ	1.2 ลิตร

ปัญหาและการแก้ไข

ปัญหา	สาเหตุ	การแก้ไข
ไฟไม่ติด	ไม่ได้เสียบปลั๊กหรือเสียบปลั๊กไม่แน่น	ตรวจสอบปลั๊ก
	ระบบตัดไฟอัตโนมัติ	รอให้ผลิตภัณฑ์เย็นลง จากนั้นจึงเติมน้ำและต้มน้ำอีกครั้ง
	ปลั๊กไฟชำรุด	ติดต่อศูนย์บริการลูกค้า
	ระบบไฟภายในเครื่องหลวมหรือชำรุด	
	ฐาน/ระบบตรวจจับอุณหภูมิชำรุด	
ยังคงต้มน้ำไม่ได้	ไฟแสดงสถานะชำรุด	ติดต่อศูนย์บริการลูกค้า
มีกลิ่นขณะต้มน้ำ	เกิดขึ้นได้เมื่อใช้งานผลิตภัณฑ์ครั้งแรก	กลิ่นจะหายไปหลังจากการใช้งาน 3-4 ครั้ง หากยังมีกลิ่นอยู่ ให้เติมน้ำในผลิตภัณฑ์จนถึงระดับสูงสุด แล้วเติมน้ำสัมสายชูล 2 ช้อนโต๊ะ จากนั้นให้ต้มน้ำ แล้วเทน้ำทิ้ง
น้ำเดือดล้นออกมา	ระบบตรวจจับอุณหภูมิ/ท่อทำความร้อนชำรุด	ติดต่อศูนย์บริการลูกค้า
	เติมน้ำเกินกว่าระดับ max	เติมน้ำตามขีดที่กำหนดไว้
ปุ่มสวิตช์ทำงานผิดปกติ	ระบบตรวจจับอุณหภูมิชำรุด	ติดต่อศูนย์บริการลูกค้า

เงื่อนไขการรับประกันสินค้า บริษัท LocknLock (Thailand) Warranty terms and conditions

- ระยะเวลาการรับประกัน : 2 ปี หลังจากวันที่ซื้อสินค้า
- กรณีสินค้าเกิดความเสียหายจากโรงงานหรือการขนส่ง สามารถติดต่อเพื่อเปลี่ยนเป็นสินค้าตัวใหม่ได้ (ขอสงวนสิทธิ์ในการเปลี่ยนสินค้าต้องเป็นรุ่นเดียวกันเท่านั้น สินค้าต้องมีอุปกรณ์ ตัวสินค้าและกล่องอยู่ในสภาพสมบูรณ์เท่านั้น)
- สินค้าที่อยู่ในสภาพนอกเงื่อนไข เช่น แตก บวม หัก เบี้ยว ราว มีรอยขีดข่วนที่เกิดจากบุคคลหรืออุปกรณ์บางส่วนหลุดหายไป ถือว่าสิ้นสุดการรับประกัน
- สินค้าที่มีสภาพชำรุดเสียหาย อันเนื่องมาจากอุบัติเหตุทางธรรมชาติ เช่น ไฟไหม้ น้ำท่วม ถือเป็นกรณีสิ้นสุดการรับประกัน
- ทางบริษัท ล็อก แอนด์ ล็อก (ประเทศไทย) จำกัด ไม่รับผิดชอบหรือคืนสินค้าที่เกิดจากความผิดพลาด หรือความไม่พอใจของลูกค้า ไม่ว่ากรณีใดๆ
- ทางบริษัทขอสงวนสิทธิ์ในการเปลี่ยนแปลงเงื่อนไขการรับประกันโดยมีต้องแจ้งให้ทราบล่วงหน้า



ใช้เฉพาะ 1 นาที กรุณาอ่าน ข้อควรระวัง เพื่อตรวจสอบข้อมูลและประวัติการสั่งซื้อสินค้าของท่าน เพื่อรักษาสิทธิ์และประโยชน์ในการรับประกันสินค้าจากเรา ทางบริษัทฯ ขอสงวนสิทธิ์ในการรับประกันสินค้าให้เฉพาะที่ออกโดยเรา และส่งกลับมายังบริษัทฯ เท่านั้น หากพบปัญหาในการสแกน QR Code โปรดติดต่อ LINE Official ของ LocknLock Thailand LINE ID : @locknlockth Less than 1 min to... Scan QR Code and fill in your personal information and purchase records for a warranty service. The company reserves a rights to customer who completely fill in the form and submit to us. If you're unable to scan a QR code, please contact us via LocknLock Thailand's LINE official account. LINE ID : @locknlockth

(Standard New)

LocknLock



INSTRUCTION MANUAL

SILENT ELECTRIC KETTLE EJK216WHT

220-240V, 50-60Hz, 1360W, 1.2L

LocknLock

Read instruction manual before using to use product in safe and appropriate way.
Keep this manual in the proper place in order that we can take it when we need it.


CONTENTS

Safety instruction	11
Product structure	12
Before first use	12
Operation	13
Care and maintenance	14
Product specification	14
Troubleshoot	15

SAFETY INSTRUCTION

1. Read all instruction carefully.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and maintenance shall not be made by children unless they are older than 8 and supervised.
4. Keep the appliance and its cord out of reach of children aged less than 8 years.
5. Do not use the appliance for other than intended use.
6. This appliance is intended to be used in household and similar applications such as:
 - Staff's kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
7. Before connecting the kettle to the power supply, make sure the voltage indicated on the appliance (underside of the kettle and base) corresponds with the used voltage in your area.
8. The kettle can only use with the provided power base.
9. Do not share the socket with other electrical appliances.
10. Do not let the cord hang over the edge of a table or counter or touch hot surface.
11. Do not place the kettle on or near a hot gas or electric burner or in a heated oven.
12. Please not operate the kettle without water inside to avoid damaging the heating element.
13. Ensure that the kettle is used on a firm and flat surface, which will prevent the kettle from overturning and avoid damage or injury.
14. While water is boiling, or just after the water has been boiled, avoid contacting with steam from the kettle spout.
15. Extreme caution must be used when moving an appliance containing hot water.
16. Switch off the kettle and remove the plug from the electrical outlet when the kettle is not in use. To unplug, grasp and pull the plug, not the cord.
17. Do not handle the kettle with wet or moist hands. Should the kettle become wet or moist, unplug immediately.
18. To protect against fire, electric shock or personal injury, do not immerse cord, electric plug or kettle in water or any other liquid, or come in contact with liquid.
19. If the power cord is damaged, please stop using it and contact service center.

PRODUCT STRUCTURE

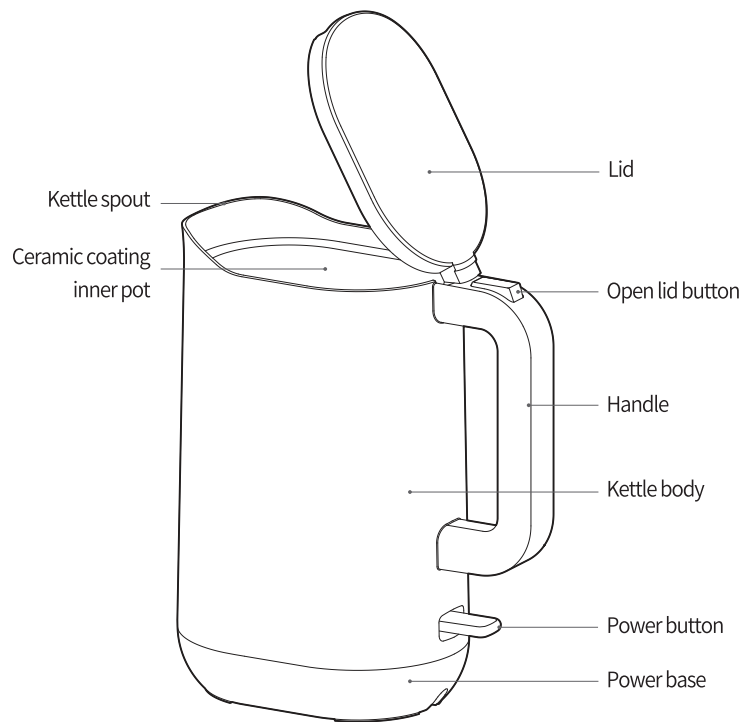

BEFORE FIRST USE

1. Before first use, dispose of any plastic bags as they pose a risk of suffocation to children.
2. When using, please place the product on a firm and flat surface.
3. Please add water to the maximum water level, then boil the water and pour it out, repeat it twice to clean the glass body.
4. Please read this manual before operate the product and keep it in a safe place for future reference. If this product is transferred to a new owner, the manual should also be provided to that new owner.

OPERATION

1. To fill water into the kettle, take the kettle out of the power base, open the lid, fill it with the desired amount of water (not exceed MAX or below MIN level), and then close the lid.

Notice:

- If the kettle is overfilled, boiling water may spill out.
- Too little water will cause the kettle to switch off before the water has boiled.
- Please use ambient water when filling the kettle to avoid damaged.
- It is recommended to use purified water.

2. Check if there is any water or liquid on the power base and the kettle bottom part. Make sure these parts are dry before operation.
3. Position the kettle on the power base. Place the product on a firm and flat surface.
4. Plug the power cord into the electrical outlet.
5. Press power button, the indicator light (in the power button) will light up, and the product will start to boil water.
6. After boiling, the indicator light will be off, the product will automatically turn off.
7. Remove the plug from the electrical outlet, lift the kettle from the power base and then pour the water.

Notice:

- Always pour boiling water slowly and carefully without tipping the kettle too fast to avoid scald.
- Boiling colored ingredients may cause product parts to be stained.
- **During operation, the kettle works very quietly. However, in the final stage when the water boils, the boiling sound could be heard. This is a normal phenomenon.**

DRY BURN PROTECTION

1. When the product is heated without water, the double anti-dry-burning protection function of the product will automatically stop heating to prevent the kettle from being damaged.
2. When the above situation occurs, please pull out the power plug from the socket and wait for the product to cool down naturally (about 10 minutes) before it can be used normally. Do not use cold water directly to cool it so as to reduce the service life of the heating system.

CARE AND MAINTENANCE

- 1. Remove the plug from electrical outlet after using and before cleaning the product. Do not clean the body until it has cooled down.
- 2. Never immerse the kettle and the power base in water or any other liquid.
- 3. Please store the product in a safe and ventilated place.

HOW TO DESCALE

- 1. Pour in 0.5L edible white vinegar and soak for more than 1 hour.
- 2. Discard the white vinegar in the pot and wipe off the remaining sediment with a damp cloth.
- 3. Pour in water and boil, then discard the hot water and wash the kettle with clean water several times to remove any vinegar smell.
- 4. Wipe the exterior of the kettle with a soft cloth. Do not use abrasive scouring pads or powers.

PRODUCT SPECIFICATION

Product name	Silent electric kettle
Model number	EJK216WHT
Voltage	220-240V
Frequency	50-60Hz
Power	1360W
Capacity	1.2L

TROUBLESHOOT

Problem		Possible cause	Solution
The indicator light does not light up	Can't boil water	The plug is not connected properly	Please check the plug
		Anti-dry-burning protection	Allow the kettle to cool down before filling with water to re-boil
		The power cord is damaged	Contact service center
		Internal wiring is loose or damaged	
		Coupler / thermostat is broken	Contact service center
	Can boil water	Indicator light is broken	
There is slight odor		This might occur when using the product for the first time	The odor will disappear after three to four uses. If the problem persists, add water into the product to the maximum level, add 2 tablespoons of white vinegar, boil the water and then pour it out.
Large boiling water overflow		The thermostat is broken / the steam pipe is loose	Contact service center
		Whether the water exceeds the maximum limit	Add water but not exceed MAX level
Abnormal power button		Thermostat switch is broken	Contact service center

เงื่อนไขการรับประกันสินค้า บริษัท LocknLock (Thailand)

Warranty terms and conditions

- 1. Warranty Period : 2 year after purchase date.
- 2. All defective or malfunctioned caused by factory or transportation will be replaced into a new product, but the product must be returned in good shape with packaging box; Lock&Lock has a right to replace a new or comparable products and/or optional products will be provided for customer selections.
- 3. Items that are in unfavorable condition, such as bumps, fractures, cracks, scratches caused by a person or equipment are missing is considered a termination of the warranty.
- 4. Damaged goods due to natural accidents like fire, flood are considered a termination of the warranty.
- 5. No return or return of goods caused by mistake or dissatisfaction.
- 6. This policy is subjected to change at any time and without prior notice.



(Standard New)

ใช้ภายใน 1 นาที
กรุณาเก็บ คือการติดต่อเพื่อขอข้อมูลส่วนตัวและประวัติการสั่งซื้อสินค้าของท่าน เพื่อความสะดวกและประโยชน์
ในการบริการสินค้าจากเรา ทางบริษัทขอสงวนสิทธิ์ในการบริการสินค้าให้เฉพาะกลุ่มลูกค้า
และผลิตภัณฑ์บางรุ่นเท่านั้น หากพบปัญหากับสินค้า กรุณาติดต่อ LINE ID : @locknlockth
Less than 1 min to...
Scan QR Code and fill in your personal information and purchase records for a warranty service.
The company reserves a rights to customer who completely fill in the form and submit to us.
If you're unable to scan a QR code, please contact us via LocknLock Thailand's LINE official account.
LINE ID : @locknlockth