


HÄFELE

คู่มือการใช้งาน
เครื่องฟอกอากาศ 70 ตร.ม.

495.38.952

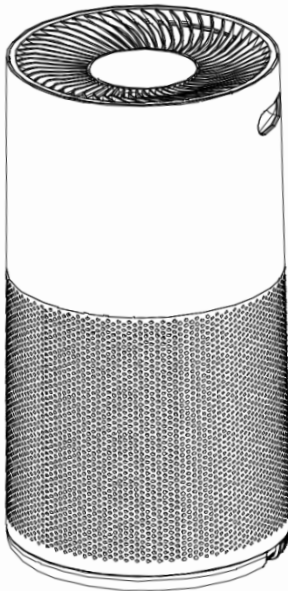

โปรดอ่านคู่มืออย่างละเอียดก่อนใช้งาน
ถอดถุงพลาสติกใส่กรองด้านในเครื่องฟอกอากาศก่อนการใช้งานครั้งแรก

บริษัท เฮเฟล่ (ประเทศไทย) จำกัด

57 ซอยสุขุมวิท 64 ถนนสุขุมวิท แขวงพระโขนงใต้ เขตพระโขนง กรุงเทพฯ 10260

โทรศัพท์: +66 (0) 2768 7171

การอ่านและเก็บรักษาคู่มือนี้ไว้

คำเตือน หากไม่ปฏิบัติตามคำเตือนต่อไปนี้ อาจส่งผลให้เกิดไฟฟ้าช็อตหรือบาดเจ็บร้ายแรงได้

! ผลัดภักทน์นี้ควรใช้งานตามข้อกำหนดที่ระบุไว้ในคู่มือฉบับนี้เท่านั้น

การใช้งานที่นอกเหนือจากที่ระบุไว้ในคู่มือฉบับนี้ อาจก่อให้เกิดอันตรายร้ายแรงได้


เพื่อความปลอดภัยในการใช้งานเครื่องใช้ไฟฟ้า โปรดปฏิบัติตามคำแนะนำด้านล่างอย่างเคร่งครัด เพื่อลดความเสี่ยงจากไฟไหม้ ไฟฟ้าช็อต หรืออันตรายต่อผู้ใช้:

- โปรดอ่านคำแนะนำทั้งหมดก่อนใช้งานเครื่อง
- เสียบปลั๊กเครื่องเข้ากับเต้ารับไฟฟ้ากระแสสลับ (AC) ที่ถูกต้องและเหมาะสมโดยตรง เพื่อป้องกันอันตรายจากไฟไหม้หรือไฟฟ้าช็อต
- หลีกเลี่ยงการวางสายไฟในบริเวณที่คนเดินผ่าน หรือได้พรม โกล่แหล่งความร้อน เช่น ฮีตเตอร์ เตา หรือหม้อน้ำ
- ห้ามจุ่มเครื่องลงในน้ำหรือของเหลวใดๆ และควรหลีกเลี่ยงการใช้งานใกล้น้ำ เพื่อความปลอดภัยจากไฟฟ้าช็อต
- เด็กอาจไม่สามารถรับรู้ถึงอันตรายจากเครื่องใช้ไฟฟ้าได้ ควรดูแลอย่างใกล้ชิดเมื่อมีเด็กอยู่ใกล้เครื่อง
- เด็กควรได้รับการควบคุมดูแล เพื่อให้แน่ใจว่าจะไม่เล่นเครื่องใช้ไฟฟ้า
- ก่อนเคลื่อนย้ายเครื่อง เปิดตะแกรง เปลี่ยนไส้กรอง หรือทำความสะอาด ควรถอดปลั๊กออกทุกครั้ง โดยดึงที่หัวปลั๊ก ไม่ใช่ที่สายไฟ
- ห้ามนำสิ่งของใดๆ แหย่หรือใส่ลงในช่องเปิดของเครื่อง
- ห้ามวางหรือลากสายไฟไว้ได้พรมปูพื้น
- ห้ามคลุมสายไฟด้วยพรม ผ้าปูพื้น หรือวัสดุคลุมอื่นๆ ที่คล้ายกัน
- ห้ามลากสายไฟผ่านใต้เฟอร์นิเจอร์หรือเครื่องใช้ไฟฟ้า ควรวางสายไฟให้อยู่ห่างจากบริเวณที่มีการเดินผ่านเพื่อป้องกันการสะดุด
- อย่าใช้งานเครื่องหากสายไฟหรือปลั๊กเสียหาย มอเตอร์พัดลมไม่ทำงาน เครื่องมีปัญหา หรือได้รับความเสียหายจากการตกหล่น ควรติดต่อฝ่ายบริการลูกค้า

- อย่าให้เครื่องใช้ไฟฟ้าทำงาน ถ้าเครื่องใช้ไฟฟ้าเสียหายอย่างเห็นได้ชัด
- ใช้งานเครื่องเฉพาะในบ้าน และตามวัตถุประสงค์ที่ระบุในคู่มือนี้เท่านั้น การใช้งานที่นอกเหนือจากคำแนะนำ อาจเสี่ยงต่ออันตราย
- ห้ามใช้เครื่องในพื้นที่กลางแจ้ง
- ห้ามวางสิ่งของใดๆ บนตัวเครื่อง
- อย่าปิดช่องระบายอากาศ และหลีกเลี่ยงการวางเครื่องบนพื้นผิวที่นุ่ม เช่น เตียงหรือโซฟา ซึ่งอาจทำให้อากาศเข้า-ออกติดขัดหรือเครื่องล้า
- ห้ามซ่อมหรือปรับเปลี่ยนระบบไฟฟ้าหรือชิ้นส่วนกลไกของเครื่องด้วยตนเอง การกระทำดังกล่าวจะทำให้การรับประกันเป็นโมฆะ และอาจเกิดอันตราย ควรให้ช่างผู้ชำนาญดำเนินการเท่านั้น
- ถ้าสายอ่อนจ่ายกำลังไฟชำรุด ต้องให้ผู้ทำหรือตัวแทนฝ่ายบริการหรือผู้มีความรับผิดชอบเป็นผู้เปลี่ยน เพื่อหลีกเลี่ยงอันตราย
- **คำเตือน:** ห้ามใช้เครื่องนี้ร่วมกับอุปกรณ์ควบคุมความเร็วแบบโซลิดสเตต เนื่องจากอาจทำให้เกิดไฟไหม้หรือไฟฟ้าช็อต

ข้อมูลทางเทคนิค

- 220 โวลต์, 50 เฮิร์ตซ์, 38 วัตต์
- ขนาด: 290 x 290 x 535 มม.
- ระดับเสียง: ≤52 เดซิเบล
- พื้นที่ใช้งานที่เหมาะสม: 70 ตารางเมตร

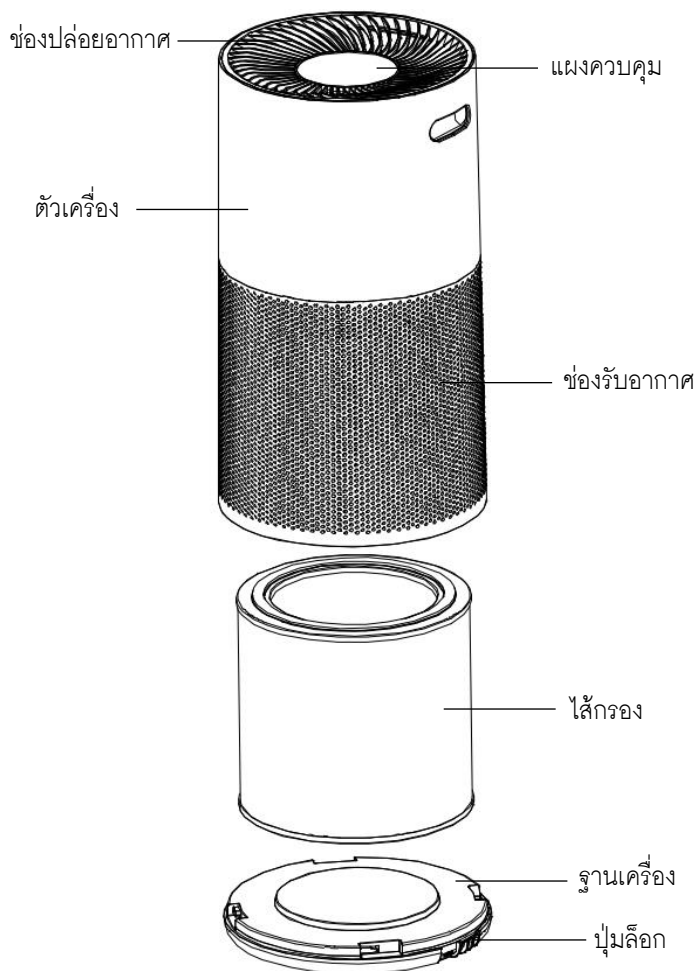

ระบบทำความสะอาดอากาศ

ปรับปรุงคุณภาพอากาศภายในบ้านของคุณด้วยระบบทำความสะอาดอากาศแบบหลายขั้นตอน

1. ใส์กรอง Pre-Filter: กรองฝุ่นและอนุภาคขนาดใหญ่
2. ใส์กรอง HEPA ป้องกันไวรัส: กรองฝุ่น คิววัน เกสร และสารก่อภูมิแพ้อื่นๆ รวมถึงช่วยลดไวรัส เช่น ไวรัส SARS-CoV-2 และอนุภาค H1N1 & H3N2
3. ใส์กรอง Carbon: ขจัดกลิ่นไม่พึงประสงค์

คำแนะนำการใช้งาน


ก่อนเริ่มใช้งานเครื่องฟอกอากาศ:

1. ยกเครื่องฟอกอากาศออกจากกล่องอย่างระมัดระวัง และนำถุงพลาสติกที่ห่อเครื่องและใส์กรองออก
2. เลือกสถานที่ที่มั่นคงและราบเรียบสำหรับวางเครื่องฟอกอากาศ
3. เสียบปลั๊กไฟเข้ากับเต้ารับ AC ที่มีแรงดันไฟฟ้าถูกต้อง

*เพื่อการไหลเวียนของอากาศที่ดี ควรวางเครื่องห่างจากผนังหรือเฟอร์นิเจอร์อย่างน้อย 1 ฟุต

*ตรวจสอบให้แน่ใจว่าไม่มีช่องระบายอากาศถูกบล็อก

การใช้งานเครื่องฟอกอากาศ

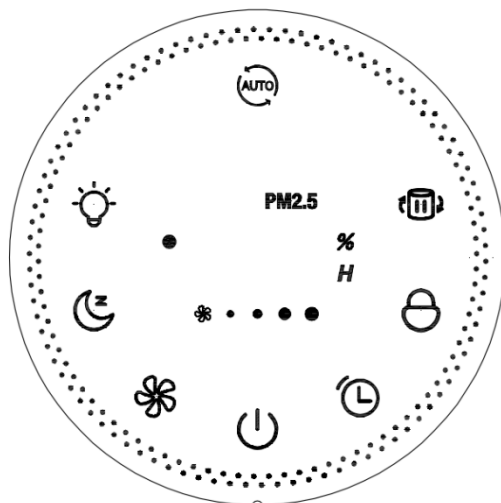

ปุ่ม 'POWER'

กดปุ่มสั้นๆ เพื่อเปิด/ปิดเครื่อง



ปุ่ม 'TIMER'

กดปุ่มนี้เพื่อกำหนดเวลาใช้งาน 1-12 ชั่วโมง

กดปุ่มนี้ค้างไว้ 3-5 วินาทีเพื่อยกเลิกการตั้งเวลา



ปุ่ม 'CHILD LOCK'

กดปุ่มนี้ค้างไว้ 3-5 วินาทีเพื่อเปิดหรือปิดโหมดล็อกป้องกันเด็ก หากมีการกดปุ่มใดๆ เมื่อโหมดล็อกป้องกันเด็กเปิดอยู่ ไอคอนจะกระพริบ 3 ครั้งเพื่อ แจ้งสถานะการล็อก



ปุ่ม "FILTER RESET"

กดปุ่มสั้นๆ เพื่อตรวจสอบอายุการใช้งานที่เหลือ (%) ของไส้กรอง หลังจากประมาณ 5 วินาที หน้าจอจะกลับไปแสดงค่า PM ตามปกติ

หลังจากใช้งานครบ 4,320 ชั่วโมง ไฟแสดงสถานะ "FILTER RESET" จะสว่างขึ้น ซึ่งหมายความว่าควรเปลี่ยนไส้กรองใหม่

เมื่อเปลี่ยนไส้กรองแล้ว ให้กดปุ่มนี้ค้างไว้ประมาณ 3-5 วินาที เพื่อรีเซ็ตไฟแสดงสถานะ และเริ่มต้นการนับเวลาใช้งานของไส้กรองใหม่อีกครั้ง



ปุ่ม "AUTO"

กดปุ่มนี้เพื่อเข้าสู่โหมดอัตโนมัติ (Auto Mode)

เมื่ออยู่ในโหมด Auto เครื่องจะปรับความเร็วพัดลมโดยอัตโนมัติตามคุณภาพอากาศที่ตรวจจับได้จากเซ็นเซอร์

วงแหวนไฟแสดงคุณภาพอากาศ จะแสดงสีแตกต่างกันตามระดับคุณภาพอากาศ โดยมีตรรกะดังนี้:

มลพิษรุนแรง	สีแดง
มลพิษเล็กน้อย	สีส้ม
ปานกลาง	สีเหลือง
อากาศดี	สีน้ำเงิน



ปุ่ม "LIGHT"

กดปุ่มนี้เพื่อเปิดหรือปิดไฟแสดงผลของเครื่อง



ปุ่ม 'SLEEP'

กดปุ่มนี้เพื่อเปิดหรือปิดโหมดนอนหลับ โดยไอคอน SLEEP จะกะพริบเป็นเวลา 5 วินาทีก่อนเข้าสู่โหมดนี้ ในโหมดนอนหลับ ไฟแสดงผลทั้งหมด (ยกเว้นปุ่ม SLEEP) จะดับลง และเครื่องจะทำงานด้วยความเร็วต่ำที่สุดเพื่อความเงียบ

หากต้องการออกจากโหมดนอนหลับ ให้กดปุ่ม SLEEP อีกครั้งหรือกดปุ่มใดก็ได้



ปุ่ม 'SPEED'

กดปุ่มนี้เพื่อปรับระดับความเร็วลม โดยสามารถเลือกได้ 4 ระดับ:

I (ต่ำ), II (กลาง), III (สูง) และ IV (เทอร์โบ)

หมายเหตุสำคัญ: เมื่อไม่ได้ใช้งานเครื่อง ควรปิดเครื่องและถอดปลั๊กออกจากเต้ารับทุกครั้ง

การติดตั้งและถอดไส้กรอง

ไฟแสดงสถานะการเปลี่ยนไส้กรอง


เมื่อไอคอน FILTER สว่างขึ้น หมายความว่า ถึงเวลาต้องเปลี่ยนไส้กรองแล้ว

ให้ดำเนินการตามขั้นตอนด้านล่างเพื่อเปลี่ยนไส้กรองและรีเซ็ตโปรแกรม

หมายเหตุ:

*อย่าลืมหักปลั๊กของพลาสติกของไส้กรองใหม่ออกก่อนติดตั้ง

*ไส้กรองแบบรวม (Combination Filter) มีอายุการใช้งานประมาณ 6 เดือน

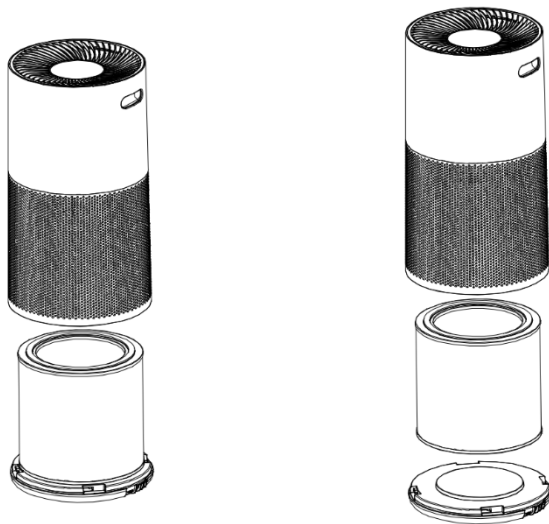

1. หมุนล็อกที่ฐานของตัวเครื่องไปทางซ้ายเพื่อปลดล็อก
2. ยกฝาครอบตัวเครื่องขึ้น
3. ถอดไส้กรองที่สกปรกออกและเปลี่ยนเป็นไส้กรองใหม่ จากนั้นปิดฝาครอบกลับเข้าที่และหมุนล็อกไปทางขวาเพื่อล็อก
4. กดปุ่ม "FILTER" ค้างไว้บนแผงควบคุมเป็นเวลา 3-5 วินาที เพื่อรีเซ็ตอายุการใช้งานของไส้กรอง

การทำความสะอาดและการดูแลรักษา

ควรทำความสะอาดเครื่องอย่างน้อยเดือนละ 1 ครั้ง ด้วยผ้าที่สะอาดแห้ง และนุ่ม หากอยู่ในสภาพแวดล้อมที่มีฝุ่นหรือมลภาวะมาก อาจต้องทำความสะอาดบ่อยขึ้น

หมายเหตุ:

- ห้ามสอดนิ้วมือหรือวัตถุแปลกปลอมใดๆ เข้าไปในตัวเครื่อง
- ห้ามใช้น้ำมันเบนซิน ทินเนอร์ หรือผลิตภัณฑ์ทำความสะอาดที่มีฤทธิ์กัดกร่อน เนื่องจากอาจทำให้ตัวเครื่องเสียหาย
- ห้ามใช้น้ำยาที่มีแอลกอฮอล์หรือสารละลายใดๆ ในการทำความสะอาด

คำแนะนำและข้อมูลเกี่ยวกับการทิ้งวัสดุบรรจุภัณฑ์ที่ใช่แล้ว

ทิ้งวัสดุบรรจุภัณฑ์หรือกล่องกระดาษในสถานที่กำจัดขยะสาธารณะ

การกำจัดเครื่องใช้ไฟฟ้าและอุปกรณ์อิเล็กทรอนิกส์ที่ใช่แล้ว



ความหมายของสัญลักษณ์บนผลิตภัณฑ์ อุปกรณ์เสริม หรือบรรจุภัณฑ์ เป็นการระบุว่าผลิตภัณฑ์นั้นไม่ควรได้รับการกำจัดเหมือนเป็นขยะทั่วไปในครัวเรือน กรุณากำจัดผลิตภัณฑ์นี้ ณ จุดรวบรวมสำหรับการรีไซเคิลขยะประเภทอุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์

สำหรับอีกทางเลือกหนึ่งในบางรัฐของสหภาพยุโรปหรือรัฐอื่นๆ ในยุโรป อาจส่งคืนผลิตภัณฑ์เก่าของคุณไปยังผู้ค้าปลีกในพื้นที่ของคุณเมื่อซื้อผลิตภัณฑ์ใหม่ที่เทียบเท่าการกำจัดที่ถูกต้องนี้จะช่วยประหยัดทรัพยากรธรรมชาติที่มีค่า และช่วยในการป้องกันผลกระทบเชิงลบที่อาจเกิดขึ้นต่อสิ่งแวดล้อมและสุขภาพของมนุษย์ซึ่งอาจเกิดจากการกำจัดของเสียที่ไม่เหมาะสม โปรดสอบถามหน่วยงานในพื้นที่ของคุณหรือศูนย์รวบรวมขยะที่ใกล้ที่สุดสำหรับรายละเอียดเพิ่มเติม การกำจัดของเสียประเภทนี้อย่างไม่เหมาะสมอาจก่อให้เกิดค่าปรับได้สำหรับในบางประเทศ

สำหรับหน่วยงานในสหภาพยุโรป

หากคุณต้องการทิ้งอุปกรณ์ไฟฟ้าหรืออิเล็กทรอนิกส์ โปรดขอข้อมูลที่จำเป็นจากผู้ขายหรือซัพพลายเออร์ของคุณ

การกำจัดในประเทศอื่นๆ นอกสหภาพยุโรป

หากคุณต้องการทิ้งผลิตภัณฑ์นี้ โปรดขอข้อมูลที่จำเป็นเกี่ยวกับวิธีการกำจัดที่ถูกต้องจากหน่วยงานรัฐบาลท้องถิ่นหรือจากผู้ขายของคุณ



ผลิตภัณฑ์นี้ เป็นไปตามข้อกำหนดพื้นฐานตามกฎหมายบังคับที่เกี่ยวข้องของสหภาพยุโรปการเปลี่ยนแปลงข้อความ การออกแบบ และข้อกำหนดทางเทคนิค อาจเกิดขึ้นได้โดยไม่ต้องแจ้งให้ทราบล่วงหน้าและเราขอสงวนสิทธิ์ในการเปลี่ยนแปลงเหล่านี้

การรับประกัน

คำจำกัดความการรับประกันสินค้า

1. วันที่ได้รับการประกันสินค้าคือวันที่ลูกค้าได้รับสินค้าที่ระบุตามใบเสร็จรับเงิน
2. ลูกค้าต้องทำการลงทะเบียนรับการประกันสินค้าผ่านทางออนไลน์บนหน้าเว็บไซต์ของบริษัทตามลิงค์นี้ <https://app.hafele.co.th/warranty#/> หรือ สแกนผ่าน QR code ด้านล่างนี้ทันทีหลังจากที่ได้รับสินค้านี้ หากไม่ทำการลงทะเบียนการรับประกันสินค้า จะไม่อยู่ในข่ายของการรับประกันของทางบริษัททุกกรณี
3. การรับประกันสินค้าตามเงื่อนไขของบริษัทนั้น จะไม่ครอบคลุมในเรื่องการใช้งานผิดวิธีและนอกเหนือจากคำแนะนำ หรือความผิดพลาดจากผู้ใช้งาน
4. สินค้าจะต้องอยู่ในกล่องบรรจุภัณฑ์พร้อมอุปกรณ์เสริมต่างๆ ต้องอยู่ครบถ้วน




ใบรับประกันสินค้า

1. สินค้าที่ต้องการบริการหลังการขาย จำเป็นต้องใช้เอกสารประกอบ ดังนี้
 - ใบส่งของหรือหมายเลขคำสั่งซื้อ
 - ใบกำกับภาษีหรือใบเสร็จรับเงิน (ถ้ามี)
 - ใบรับประกัน (บริษัทจะนับจากกรณีที่ลูกค้าลงทะเบียนรับประกันเท่านั้น)
 2. อุปกรณ์เสริมหรืออะไหล่ต่างๆ และบรรจุภัณฑ์ที่เกิดความเสียหายจากการขนส่ง ไม่อยู่ในเงื่อนไขของการรับประกัน
- โปรดลงทะเบียนผลิตรถยนต์ภายใน 14 วันหลังจากวันที่ซื้อ
 (ต้องแนบใบเสร็จรับเงินต้นฉบับหรือใบเสร็จรับเงินอิเล็กทรอนิกส์ของการซื้อหรือหมายเลขคำสั่งซื้อที่ทำคำสั่งซื้อโดยตรงกับทางช่องทาง E-Commerce ของบริษัทฯ เท่านั้น)

HÄFELE

INSTRUCTION MANUAL AIR PURIFIER 70 SQ.M 495.38.952

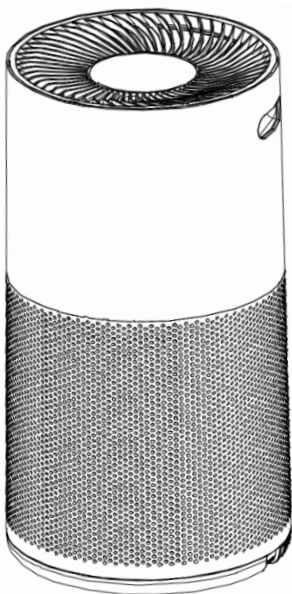

**Please read the manual carefully before using the product.
Remove the plastic packaging from the filter before first use.**

Häfele (Thailand) Co., Ltd.
57 Soi Sukhumvit 64, Sukhumvit Road, Prakanong Tai, Phrakanong,
Bangkok 10260, Phone: +66 (0) 2768 7171

READ AND SAVE THESE INSTRUCTIONS

WARNINGS Failure to comply with the warnings listed below may result in electric shock or serious injury.

 This product should be used only following the specifications outlined in this manual.

Usage other than what has been specified here may result in serious injury.


When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- To avoid fire or shock hazards, plug the appliance directly into the right AC electrical outlet.
- Keep the cord out of heavy traffic areas. To avoid fire hazards, NEVER put the cord under rugs, near heat registers, radiators, stoves, or heaters.
- To protect against electrical hazards, DO NOT immerse in water or other liquids. Do not use near water.
- Children cannot recognize the hazards associated with the usage of electrical appliances. For this reason, always supervise children when they are near the unit.
- Children should be supervised to ensure they do not play with the appliance.
- Always unplug the air purifier before moving it, opening the grill, changing filters, cleaning, or whenever the air purifier is not in use. Be sure to pull by the plug and not the cord.
- NEVER drop or insert any object into any openings.
- DO NOT run cord under carpeting.

- DO NOT cover the cord with throw rugs, runners, or similar coverings.
- DO NOT route cord under furniture or appliances. Arrange the cord away from the traffic area so that it will not be tripped over.
- DO NOT operate any appliance with a damaged cord or plug, if the motor fan fails to rotate, after the appliance malfunctions, or if it has been dropped or damaged in any manner. Send to Customer Service for assistance.
- Do not operate the appliance if it is visibly damaged.
- Use appliance only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- DO NOT use outdoors.
- DO NOT place anything on top of the unit.
- NEVER block the air openings, grills/outlets, or place on a soft surface such as a bed or sofa, as this could cause the unit to tip over, blocking the air intake or outtake opening.
- DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user- serviceable parts. All servicing should be performed by qualified personnel only.
- If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to avoid hazards.
- **WARNING:** To reduce the risk of fire or electric shock, do not use this device with any solid-state speed control device.

TECHNICAL DATA

- 220V, 50Hz, 38W
- Dimensions: 290 x 290 x 535 mm
- Noise level: $\leq 52\text{dB}$
- Applicable area: 465ft² / 70m²

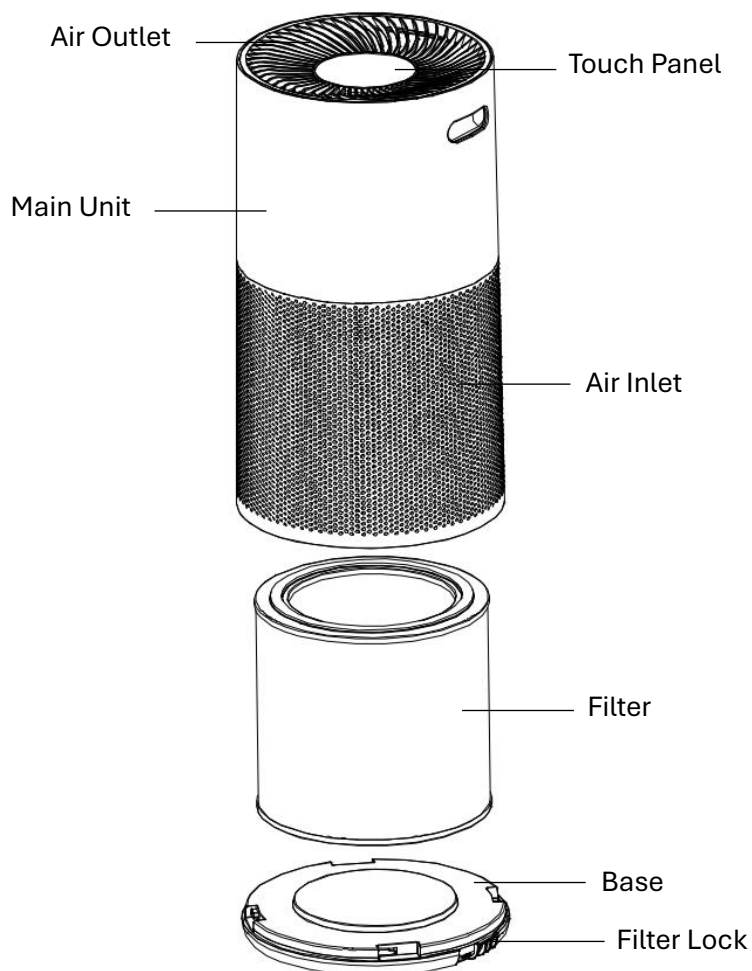

AIR CLEANING SYSTEM

Improve your indoor air quality with multiple Air Cleaning System.

1. **PRE-FILTER:** Captures initial large particles and dust.
2. **ANTIVIRAL HEPA FILTER:** Captures dust, smoke, pollen, and other allergens and virus reduction including SARS-CoV-2 viral particles and H1N1 & H3N2 particles.
3. **CARBON FILTER:** Eliminates odors and bad smells.

OPERATING INSTRUCTIONS


BEFORE OPERATING THE AIR PURIFIER:

1. Carefully lift your air purifier from the box and remove the two packed plastic bags from the unit and filter.
2. Select a firm, level, and flat location for the air purifier.
3. Plug the power cord into a right voltage AC outlet.

* For proper air flow, locate the unit at least 1 foot from any wall or furniture.

* Make sure none of the grills are blocked.

OPERATING THE AIR PURIFIER

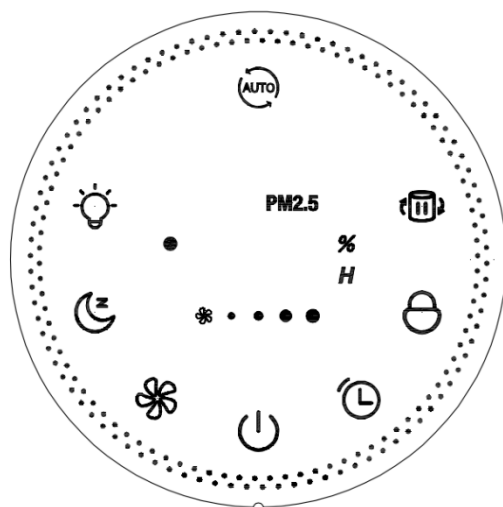

"POWER" BUTTON

Short press this button to turn on/off the unit.



"TIMER" BUTTON

Press this button to set working time for 1-12 hours.

Long press this button for 3-5s to cancel the time setting.



"CHILD LOCK" BUTTON

Long press this button for 3-5s to enter or exit the child lock mode. If any button is pressed when the child lock is activated, the icon will flash 3 times to remind the locked status.



"FILTER RESET" BUTTON

Short press this button to check the remaining life (%) of the filter, after approximately 5s, the display will revert to the PM display.

After operating 4320 hours, the "FILTER RESET" indicator will turn on, which means the filter needs to be replaced.

After replacing the filter, press and hold this button for 3-5 seconds to reset the indicator light and the filter timer restarts.



"AUTO" BUTTON

Press this button to enter Auto mode.

Under AUTO mode, the unit will automatically change the speed according to the air quality detected by the air quality sensor.

Air quality indication LED ring shows different colors in the below logic:

Heavily Polluted	Red
Lightly Polluted	Orange
Moderate	Yellow
Good	Blue



"LIGHT" BUTTON

Press this button to turn on/off the light.



"SLEEP" BUTTON

Press this button to turn on & off sleep mode. The sleep icon will flash for 5 seconds before the unit enters into sleep mode. Under SLEEP mode, all lights (except the sleep button) will turn off and the unit will work at sleep speed.

Press the sleep button again or any button to quit sleep mode.



"SPEED" BUTTON

Press this button to cycle through the speed settings for selecting the speed of I (Low), II (Medium), III (High), IV (Turbo).

Important note: When the unit is not in use, please switch it off and unplug it.


INSTALLING & REMOVING FILTERS

FILTER REPLACE INDICATOR

The FILTER icon lighting up indicates that it is time to replace the filter. Follow the instructions below to change the filter and reset the program.

Remark:

- * Remember to tear off the packing bag of the new filter before replacing it.
- * Combination Filter will last approximately 6 months.

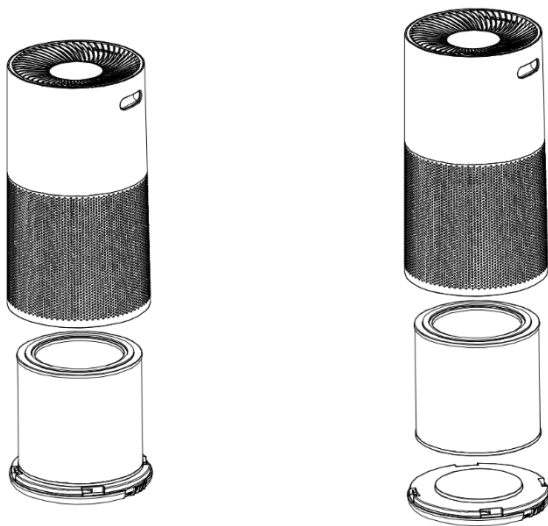

1. Find the lock on the base of the unit and move it to the left to unlock.
2. Lift up the housing.
3. Change the dirty filter to a new one, and then set the housing back, move the lock to the right.
4. Press and hold the filter button on the control panel for 3-5 seconds to reset the filter life.

CLEANING & MAINTAINING

The machine should be cleaned at least once every month with a clean, dry, soft cloth.

More frequent cleaning may be required depending on environmental conditions.

NOTE:

- DO NOT stick any foreign objects or your fingers inside the unit.
- DO NOT use gasoline, benzine, thinner, harsh cleaners, etc. on and/or in the unit while cleaning as they will damage the product.
- NEVER use alcohol or other solvents.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste.

Alternatively, in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection center for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

WARRANTY

EFFECTIVE DEFINITION OF PRODUCT WARRANTY

1. The date the warranty will start from the date that specify on receipt or invoice.
2. Customers must register for product warranty online on the Company's website at this link <https://app.hafele.co.th/warranty#/> or scan via QR code below immediately after receiving this product. If not registered, the product will not be covered by the company's warranty in all cases.
3. If misuse and in addition to any advice or error from the users, the warranty will not cover all cases.
4. The product must be in the package with all accessories complete.



PRODUCT WARRANTY CERTIFICATE

1. Product after-sales service valid warranty certificate such as
 - Delivery noted or various order numbers of purchase.
 - Invoice or receipt (if any).
 - Warranty card (the company will count from the case that the customer registers the warranty only).
2. Accessories or spare parts and packaging damaged in transportation not in terms of warranty.

Please register the product within 14 days after the date of purchased.

(The original receipt or e-receipt of the purchase or order number must be attached directly to the company's E-Commerce channel only).