

P20 Pro

Robot Vacuum cleaner with All-in-one clean station

Robot Vacuum Cleaner Instructions Manual

คู่มือการใช้งาน

โปรดอ่านรายละเอียดให้ถี่ถ้วน ก่อนใช้งานสินค้า

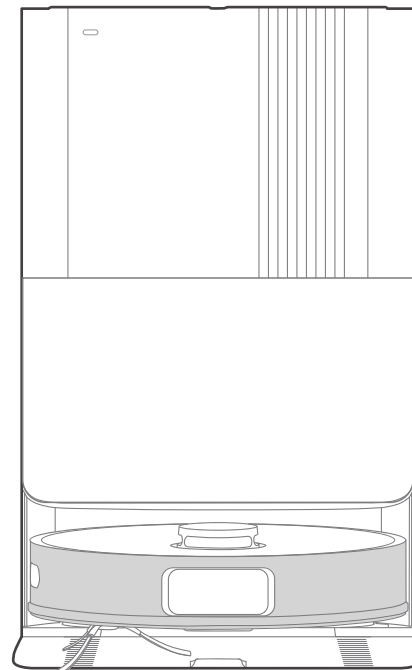


Table of Contents

Safety Tips	01	Maintenance and Care	14
Responsibility Statement and Safety Information	02	Component and Maintenance Instructions/Dust box and Filter Maintenance	14
Product Introduction	04	Roller Brush Maintenance	15
Component Introduction	04	Base Station Cleaning/Drive Wheel Cleaning/Side Brush Cleaning	16
Accessories Introduction	06	Replacing Dust Bags	17
		Frequently Asked Questions	18
Product Installation	07	Statement	21
Base Station Placement/Clean/Dirty water Tank	07	ROHS	21
Installing Side Brushes/Installing Mop pads holder	08	Product Specification	22
Smart Operations	09		
Power On and Charging/Environmental Preparation ..	09		
Networking	10		
Robot Usage	11		
App Usage	13		



Tips

1. The charging time may be extended in the following situations: a. When charging in a location where the room temperature exceeds 30 degrees Celsius; b. When charging immediately after stopping operation.
2. Regardless of the duration of use, please recharge after the cleaning is complete.
3. When not charging, it is recommended to unplug the power plug in a timely manner.
4. If your machine is not used for a long time (more than 2 months), please unplug the power plug. However, to ensure battery life, it needs to be fully charged once every 2 months.
5. During the charging process, the body or power adapter may generate heat, which is a normal phenomenon. Please feel free to use it.

- When the wireless network password used in your home changes or when you replace the router, the robot vacuum cleaner will appear offline on the app. However, you can reconnect it by reconfiguring the network without changing the Mi Home App account.
- If someone else wants to control the same robot vacuum cleaner using the app, the homeowner can invite them to join the household through the app. The invited member must have already downloaded the Mi Home App and registered a Mi account.
- If there is a change in the Mi Home App account, old users can delete the device on the mobile app. New users can then follow the network configuration guide to set up the device. If old users haven't deleted the device from the mobile app, it will be automatically removed when new users successfully set up the network.
- Please avoid placing the robot vacuum cleaner near heat sources, radiation, or burning cigarettes. It is strictly prohibited to suck in the following substances:
 1. All liquids such as water and solvents;
 2. Building dust and debris such as lime and cement dust;
 3. Heat-generating objects such as unextinguished carbon and cigarettes;
 4. Sharp fragments such as glass;
 5. Flammable and explosive materials such as gasoline or alcohol products.
- Only authorized technicians are allowed to dismantle this product; self-disassembly of this product is strictly prohibited.

When removing the battery, please follow these steps:

1. Turn off the robot vacuum cleaner;
2. Unscrew the screws of the battery cover plate;
3. Remove the battery cover plate;
4. Unplug the connector plug of the battery and remove the battery.

- It is strictly prohibited for children, individuals with disabilities, or those lacking common sense and experience in using household appliances to use this product without guidance from a designated person.
- This product is for indoor household use only; do not use it outdoors.
- Your robot vacuum cleaner is an electrical appliance and must be used under normal conditions. Do not touch the power cord, socket, or power adapter with wet hands.
- Empty the dustbin before use when it is full.
- Disconnect the power when cleaning, repairing, or temporarily not using the robot vacuum cleaner.
- Avoid submerging the robot vacuum cleaner in water, getting close to heating appliances, or exposing it to direct sunlight to prevent fire.
- Only use the power adapter provided in the original packaging; using other adapters may damage the product.
- Users are not allowed to arbitrarily replace the button batteries inside the machine. If battery replacement or disposal is required, do not dispose of it with household waste. Please contact the after-sales department for proper handling.
- Remove the battery from the machine before discarding it.
- Ensure that the product is not connected to power when removing the battery.
- Please recycle the discarded batteries safely.
- Do not touch conductors with the electrodes or plugs to prevent short circuits.
- Before using this product, remove all fragile items (such as glassware, lamps, etc.) from the floor and items that may entangle the side brush, air inlet, and drive wheel (such as wires, curtains, and various winding materials).
- Do not place the product in places where it may fall easily (such as on tables and chairs).
- The product may not function properly under strong light.
- Do not excessively bend the wires or place heavy or sharp objects on the machine.
- Do not add laundry powder, detergent, cleaner, disinfectant, hand sanitizer, unknown oily liquids, or alkaline substances to the base station water tank to avoid unknown damage.
- If the product needs to be drilled into walls or floors, and if there are concealed wires or pipes, or if the positions of wires, water pipes, gas pipes, etc., cannot be clearly identified, confirmation with the user is necessary. You can also use a sensing test pencil to detect whether there are power lines passing through the drilling position to avoid personal injury accidents caused by drilling damaging power lines.
- If the product is a waterproof product, discharge the water when it is not in use for a long time or when there is a power outage in low-temperature weather.

Responsibility Statement and Safety Information

Copyright Statement

Without the written consent of JONR, no unit or individual may copy, distribute, excerpt, or otherwise use all or part of the product manual and the content of "Responsibility Statement and Safety Information" in any way.

The products described in this manual may contain copyrighted software owned by JONR and its licensors. Without the permission of the relevant rights holders, no one may distribute, copy, modify, excerpt, decrypt, transfer, license, reverse engineer, reverse compile, or disassemble the aforementioned software in any form (except as prohibited by applicable laws).

Trademark Statement

JONR is a registered trademark of JONR Technology(Shenzhen) Co., Ltd company.

Explanation

Certain features and functionalities of this product depend on third-party software and hardware, as well as your network environment. Some features and functionalities may not fully correspond to the descriptions in this product manual or may not be achievable due to network or third-party software and hardware settings. Within a reasonable and controllable range, JONR provides the conditions necessary for the products described in this product manual to operate under normal conditions in the Xiaomi IoT product application system. However, product performance or availability issues caused by the following situations are not within a reasonable and controllable range:

1. Normal maintenance of the Xiaomi IoT system, including fault response, business migration, testing, or trial use.
2. Caused by you or third-party software, hardware (including but not limited to communication networks, third-party servers, etc.);
3. Other factors beyond the reasonable control of JONR;

The final interpretation of this product manual and the "Responsibility Statement and Safety Information" belongs to JONR. JONR reserves the right to modify this product manual and the "Responsibility Statement and Safety Information" at any time without notice or liability.

Limitation of Liability

JONR does not provide any express or implied warranties for all content in this product manual; all content is provided "as is" (except as required by applicable law).

To the extent permitted by applicable law, JONR's maximum liability for any loss suffered by you due to the use of the products described in this product manual is limited to the price you paid for the product (excluding damages compensation involving personal injury as stipulated by applicable law).

To the extent permitted by applicable law, JONR shall not be liable for any indirect, consequential, incidental, special damages arising from the use of the products described in this product manual, nor shall it be liable for any loss of profits, data, goodwill, etc.

Privacy Protection

"Please read our privacy policy to understand how we protect your personal information: <https://jonrtech.com/>"

Responsibility Statement and Safety Information

Safety Information

Before using the product described in this product manual, please read and adhere to the following precautions to avoid dangerous situations and ensure the normal operation of the product.

Operating Environment and Maintenance

- Only authorized technicians are allowed to dismantle this product. It is not recommended for users to disassemble the product themselves.
- This product should only be used with the factory-provided power adapter. The use of other adapters may result in damage to the product.
- Do not touch wires, sockets, or power adapters with wet hands.
- Do not allow curtains, various winding materials, or parts of the body to get caught in the product's drive wheel.
- Keep the product away from cigarettes, lighters, or other open flames.
- If cleaning is required, please clean the product after charging is complete.
- Do not excessively bend wires or place items or sharp objects on the machine.
- This product is for indoor household use only; do not use it outdoors.
- This product is prohibited from bearing weights (or people) of over 10kg.
- Do not use this product in damp environments (such as bathrooms).
- Before using this product, remove all fragile items from the floor (such as glassware, lamps) and items that may entangle the side brush and suction channel (such as wires, paper, curtains, etc.).
- Do not place the product in places where it may fall easily (such as on tables and chairs).
- If the power cord is damaged, for safety reasons, it must be replaced by a professional from the manufacturer, their repair department, or a similar department.

- During transportation or when not using the product for an extended period, please turn off the machine.
- Before charging, carefully check whether the power adapter is properly connected to the socket.
- To prevent tripping hazards, inform other occupants of the room when the product is in operation.
- Empty the dustbin before using the product if it is full.
- The operating environment temperature for this product ranges from 0°C to 40°C.
- Do not use this product in high-temperature environments.
- Before disposing of the product, please contact after-sales service personnel to remove the battery from the machine.
- Please ensure proper disposal of old batteries by recycling them safely.

Children's Health

The product described in this manual is not a toy for children. Children should use this product under adult supervision. The product may contain small parts and accessories, so please keep the product and accessories out of the reach of children to prevent them from unintentionally disassembling or damaging the product or accessories, or swallowing small parts, which could lead to choking or other dangers.

Charger Safety


When not charging or when not in use for an extended period, please unplug the charger from the power outlet and disconnect it from the product.

Do not use chargers that are already damaged or suspected of being damaged, or have been exposed to moisture, dampness, or rain to prevent electric shock or fire.


Product Introduction

Component Introduction


Robot Main View (Closed Cover)

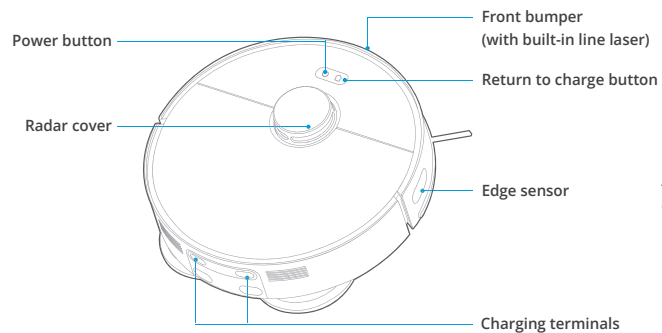

Robot Bottom View

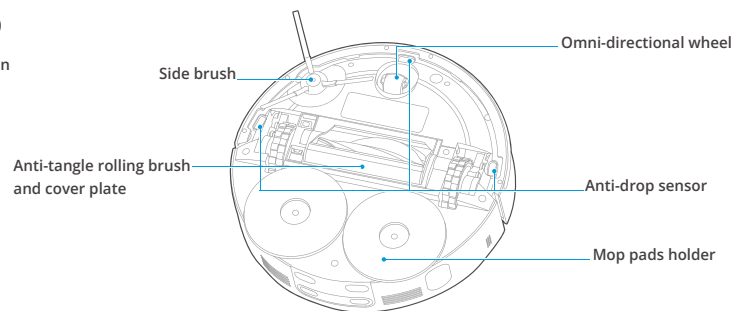


Robot Main View (Open Cover)

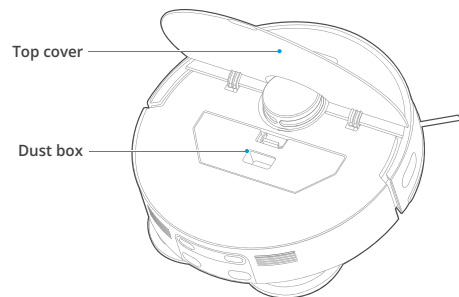


Product Introduction

Component Introduction


Main View of the Base Station

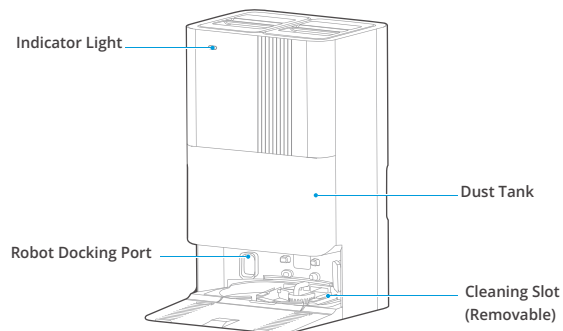


Back View of the Base Station

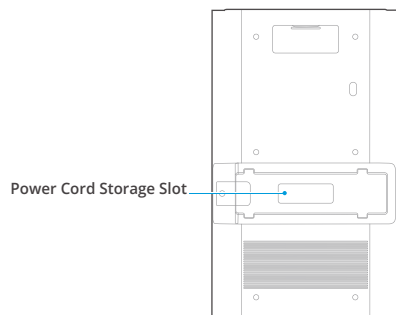

Top View of the Base Station

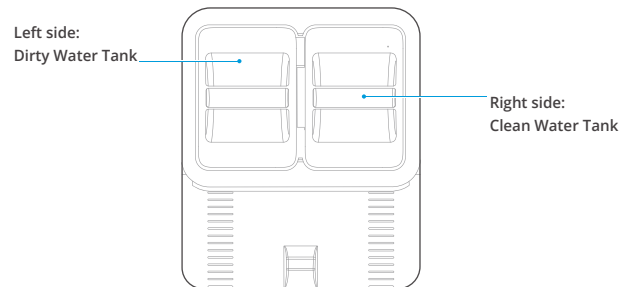


Docking Port

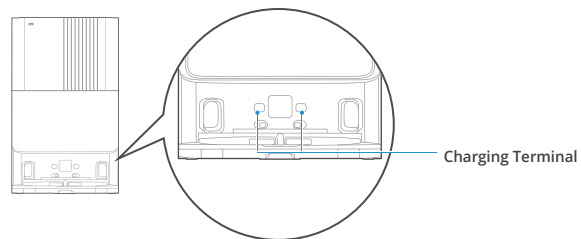

Accessories List


Side Brush x1

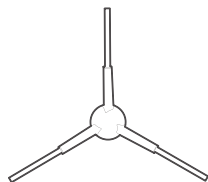


Base Ramp Extension Plate x1




Dust Bag x1
(already installed on the base station)

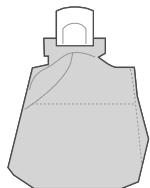

Mops x2

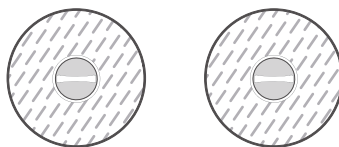


Mop pads holder X2

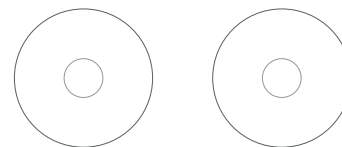

Product Installation


Placement of the Base Station

1. Please place the base station against the wall on a hard surface, ensuring there is at least 8cm of space on both sides and a clear area of at least 1.2m in front.
2. Plug the power cord into the socket, and neatly wrap any excess wire into the back wire groove of the base station to avoid interfering with the operation of the robot.

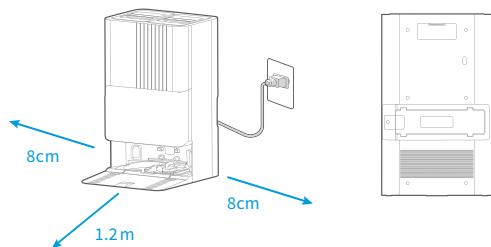


Note

1. Avoid direct sunlight.

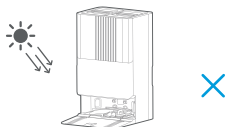


3. Do not place the base station on soft surfaces such as carpets.

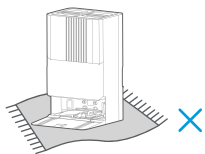

2. Do not use stickers or other objects to cover the signal transmission area of the base station.




4. Ensure that the charging area is dry.

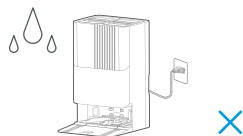

Preparing/Emptying


1. To add clean water, please remove the right-side clean water tank, open the top cover, add clean water, and then place it back into the base station.

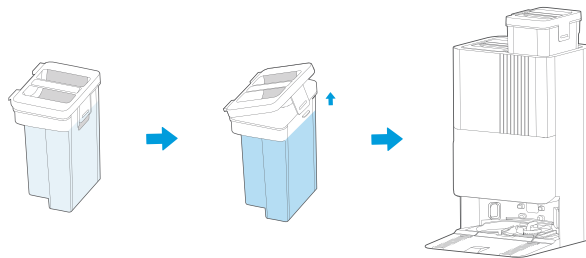

Note

Please do not add laundry detergent, laundry soap, non-official cleaning agents from JONR, disinfectants, hand soap, unknown oily liquids, or acidic or alkaline substances to the water tank to avoid causing unknown damage.


2. To empty the dirty water, please remove the left-side dirty water tank, open the lid latch, and then tilt the tank to pour out the dirty water.

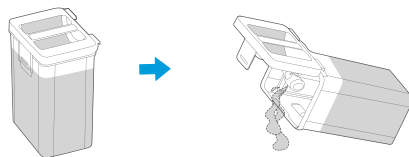


Product Installation

Installing the Side Brush

1. Press the side brush firmly into the slot until you hear a "click" sound, indicating that the installation is complete.

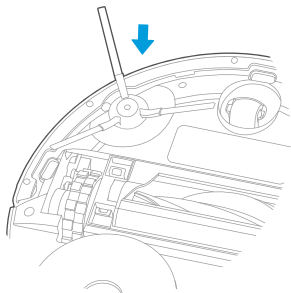

2. To remove the side brush, turn the robot vacuum cleaner upside down, grip the rubber-coated legs of the side brush with both hands (be careful not to forcefully pull or tug on the bristles), and pull it out.

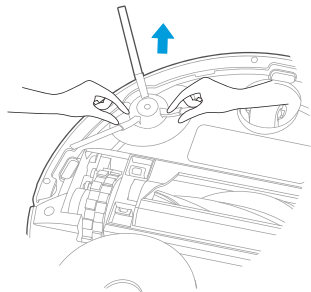


Installing the Mop pads

1. First, smoothly attach the mop pads to the mop pads holder.



2. Align the center of the holder with the installed mop cloth and mount it onto the main unit.

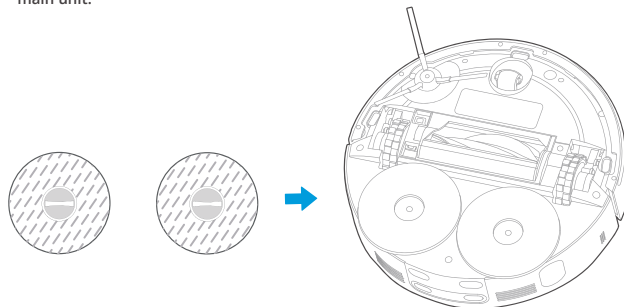


Friendly Reminder

The mop pads are already installed on the mop pads holder for the first-time use.

Smart Operation

Power On and Charging Instructions

Connect the power supply to the base station, press and hold the  button on the robot for three seconds to turn it on, wait for the power indicator light to stay on steadily, then place the robot on the base station for charging as shown in the diagram. Keep the robot in a charged state for convenient daily use.

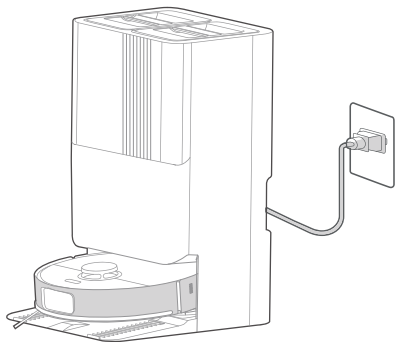

Note


1. When manually inserting, ensure that the charging terminals are facing inward.
2. Before the initial cleaning, please ensure that the robot's battery is fully charged to 100%.

Friendly Reminder

For the initial use, it is recommended to manually place the robot into the base station. The robot will automatically power on.

Environment Preparation

Before starting the cleaning process, clear the floor of any scattered wires, hard objects, sharp items (such as nails, glass), and other debris. Also, move away any items that are easily tipped over, fragile, valuable, or potentially hazardous. This helps to avoid entanglement, obstruction, dragging, or collision by the robot, which could lead to personal or property damage.

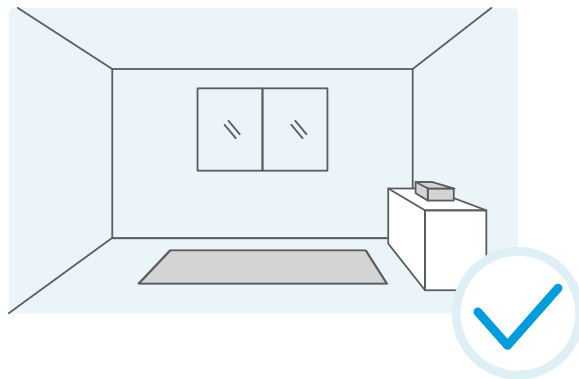


Smart Operation

Networking

1. Downloading the App:

Search for "Mi Home" in the app store or scan the QR code below to download and install the Mi Home App.

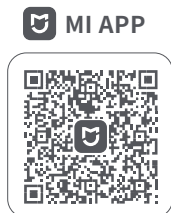


Download the app & activate product

2. Adding the device according to the App prompts:

1) Ensure that your smartphone is connected to your home Wi-Fi network and that the Bluetooth on your phone is turned on. Ensure that your phone is connected to your home Wi-Fi network. Click the "+" icon in the upper right corner of the APP homepage, then click "Add Device" or "Scan."



2) Scan the QR code on the device.

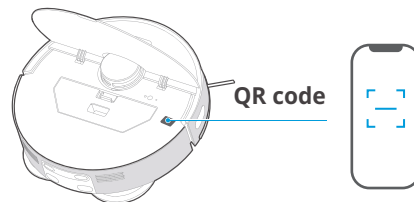

3) Follow the instructions provided by the App until the App prompts that the connection is successful.

Note

1. The Mi Home App supports iOS 13.0 and above, as well as Android 8.0 and above mobile operating system versions. You can check the mobile system version in "Settings - About Phone" on your phone.
2. This model does not support routers with WEP encryption.
3. The home wireless network name and password cannot contain Chinese characters or space symbols.
4. When configuring the robot vacuum cleaner network, follow the prompts on the App. This product only supports 2.4GHz Wi-Fi communication. When selecting the current home Wi-Fi network, make sure to choose the 2.4GHz network. (For more details, refer to the manual.)
5. The robot vacuum cleaner must use a wireless network during setup. After setup is successful, you can operate the Mi Home App in the wireless network/mobile network environment to remotely control the robot vacuum cleaner.

Friendly Reminder

This operation guide is based on testing with Mi Home App version 8.17.1. Software and products are continuously updated, and other versions may have differences in the interface compared to the current version. Please refer to the operation prompts of the latest version for accurate guidance.

Smart Operations

Robot Usage

Start Working

When the robot is powered on, briefly press the "" button on the robot to begin operation.

Pause Operation

While the robot is working, briefly press any button on the robot's body to pause its operation.

Resume Operation

If the robot is paused, briefly press the "" button on the robot to continue its operation.

Power Off

While the robot is powered on, press and hold the "" button on the robot for 3 seconds to turn it off.

Return to charge

While the robot is powered on, briefly press the "" button on the robot to make it return to the base station from its current position for recharging.

Child Lock(Button Lock)

Users can activate the child lock function by pressing and holding the "" button on the robot's body for 3 seconds or by using the app. When the child lock is enabled, the buttons on the robot and base station will be disabled, and operation can only be done through the app to prevent pets or children from accidentally pressing buttons. To deactivate the child lock, press and hold the "" button for 3 seconds or use the app to disable it in the "More" settings. After deactivation, the robot will emit a voice prompt indicating that the child lock has been turned off.

Restore Factory Settings

Hold down both the power button and the return to charge button for 7 seconds to reset to factory settings.

Note

1. This product is designed for indoor use only. Do not use it for outdoor cleaning.
2. Do not immerse the robot in water, as it may cause short circuits or electrical damage.

Button Operations for the Robot

Button	Operation	Function
	Long press for 3 seconds	Power on/off
	Short press once	Start cleaning
	When the robot is on standby outside the clean station, short press once	Return to charge
	When the robot is inside the clean station, short press once	Start dust collection
	When the robot is inside the clean station, short press twice consecutively	Start mop cleaning
	When the robot is on standby outside the clean station, short press twice consecutively	Start spot cleaning
	Long press for 3 seconds	Enable/disable child lock
	Long press for 15 seconds	Force hardware power off
	Long press simultaneously for 3 seconds	Enter network configuration mode
	Long press simultaneously for 7 seconds	Restore factory settings

Smart Operations

Robot Usage

Robot Light Effects Explanation

Indicator Light	Light Effects	Meanings
 Indicator Light	Off	Power Off/Sleep/Do Not Disturb
	White Gradual Brightening	Powering On
	Solid White	Normal Status
	White Breathing	Repositioning/Charging/Drying
	Solid Red	Low Battery
	Red Flashing	Fault
	White Flashing	Networking
Networking indicator light	Off	Power Off/Sleep/Do Not Disturb
	White Gradual Brightening	Powering On
	Solid White	Normal Status
	Red Flashing	Fault



This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Base Usage

Cleaning Mop

To ensure effective mopping, the robot defaults to returning to the base station to clean the mop every 10 minutes of cleaning. Alternatively, users can manually adjust the mop cleaning frequency in the app according to their needs. After completing a mopping task and returning to the base station, the robot will also automatically clean the mop (which takes a little longer).

Drying

After completing a mopping task and returning to the base station, the mop will undergo an automatic drying process (by default using hot air, but can be changed in the app settings). Users can manually control the start/stop of the mop drying in the app.

Dust Collection

During or after the cleaning task, the robot will return to the base station for automatic dust collection. Users can manually initiate a dust collection task in the app, or adjust the dust collection frequency in the base station settings. Ensure that the dust bag in the base station is properly installed and not full.



Note

1. Do not forcibly remove the robot during the mop cleaning process.
2. Do not move the base station while the robot is cleaning.

Tip

For optimal cleaning performance, it's recommended to let the robot start from the base station during the initial use.

App Usage

For more robot functions, please access the device settings in the Mi Home app.

Friendly Reminder

The software and product features are continuously updated, and the interface may vary in different versions. Please refer to the latest version of the app for actual functions.

App Feature List	
Basic Functions	Whole-House Cleaning
	Room Cleaning
	Area Cleaning
	Return to Charging
Cleaning Preferences	Suction Power
	Cleaning Frequency
	Mop Dampness
Cleaning Modes	Vac Only
	Mop Only
	Vac & Mop Combined
	Vac First, Mop Later

Base Station Settings	Wash Interval
	Dust Collection Frequency
Floor Cleaning Settings	Carpet Cleaning Mode
	Carpet Boost
	Extra Coverage for Corners
Base Station Operations	Dust Collection
	Mop Cleaning
	Drying Mop
Map Functionality	Customized No-go Zones
	Room Editing
	Map Management
More Function Settings	Cleaning Records
	Scheduled Cleaning
	Voice Settings
	Consumable Status
	Child Lock
	Call Robot

Smart Operation


Parts and Maintenance Instructions

To keep the main unit in good condition, it is recommended to follow the daily maintenance steps outlined in the table below


Parts	Cleaning Frequency	Replacement Frequency
Base station cleaning trough	Once every 1-2 weeks	/
Anti-tangle main brush	Once every 2 weeks	Every 6-12 months
Side brush	Once every 2 weeks	Every 3-6 months
Dustbox	As needed	/
Dustbox filter	Once every 2 weeks	Every 3-6 months
Mop	/	Every 1-3 months
Drive wheel	Once a month	/
Sensors		
Dust bag	/	Approximately every 2.5 months or as needed

Dustbox and Filter Maintenance

1. Open the cover on the robot and press the dustbox release button to remove the dustbox. Detach the dustbox filter from the latch and empty the dust from the dustbox.

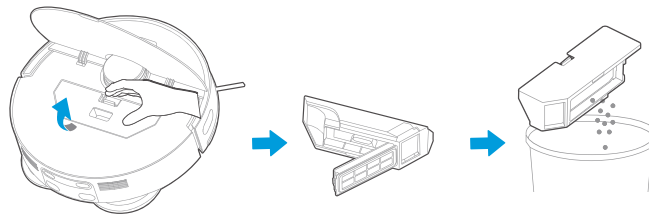

2. The dustbox filter can be washed with water. After washing, allow it to air dry before placing it back into the dustbox.

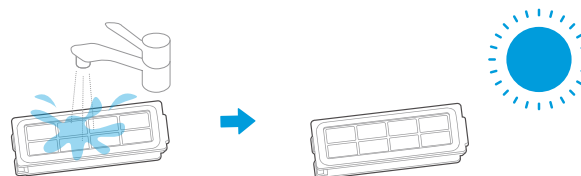


Reminder


To ensure the effectiveness of the filter, it is recommended to regularly clean and replace the filter.

Roller Brush Maintenance


1. Press the release button on the left side cover and lift it to remove the anti-tangle rolling brush and cover.

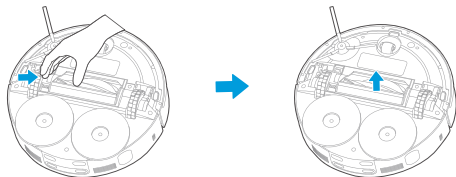

2. Use a suitable tool to clean the hair or threads tangled on the rolling brush, then use a soft cloth to clean the rolling brush and cover.

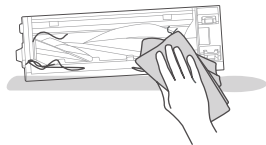


3. Rinse the rolling brush with water and let it dry. After cleaning, reinstall the anti-tangle rolling brush onto the robot for use.

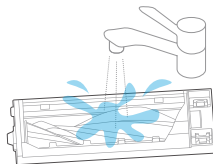


Sensor maintenance


1. Wipe the transmissive window of the line laser.

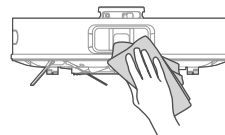

2. Wipe the anti-fall sensor.

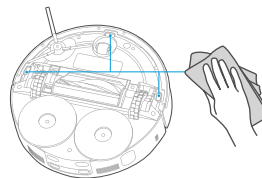


3. Wipe the edge sensor.

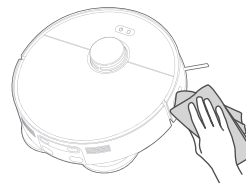


Maintenance and Care

Base cleaning

1. Gently press the central latch on the base of the station and pull up to remove the cleaning tray.

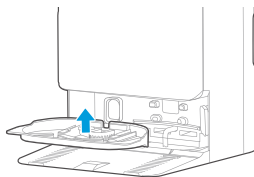


2. Rinse the cleaning tray with clean water, allow it to dry, then place it back into the base and reattach the station.

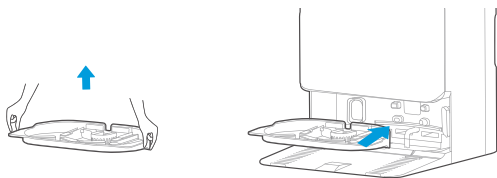


Cleaning the drive wheel

Rotate the drive wheel back and forth to remove any foreign objects, then clean it with a soft cloth.

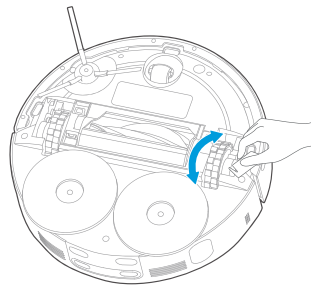

Cleaning the side brush

Remove the side brush; use an appropriate tool to clean off the dust.

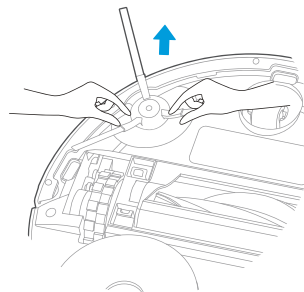


Maintenance and Care


EN

Replacing Dust Bags

1. Remove the Dust Tank cover.

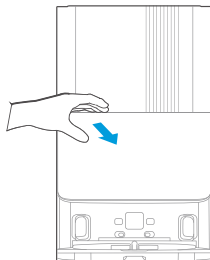


2. Pull outward to remove the dust bag.

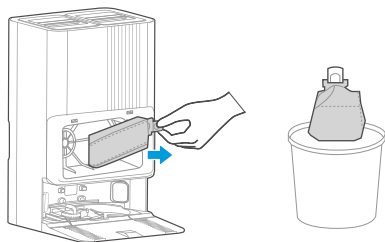


Friendly reminder: The black cotton on the left side of the Dust Bag is the filter cotton. Please do not remove or discard it.

3. Use a soft dry cloth to wipe the dust bin area.

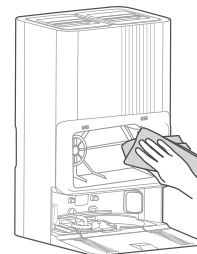

4. Install the new dust bag and replace the Dust Tank cover.

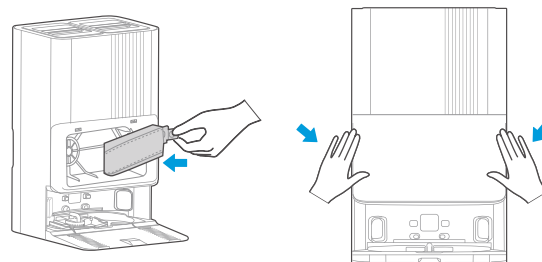

Maintenance and Care

Frequently Asked Question

Description of problems	Possible Reason	Solution
The robot cannot charge	The robot is not in contact with the charging terminal	- Place the robot directly in front of the base station and press the "Return to charge" button - Manually push the robot backward into the charging dock and confirm hearing the announcement "Charging started"
The robot cannot return to charging	The placement of the base station is unreasonable	For more details, refer to the "Placement of the base station" section in the user manual
The robot is trapped	- The robot is entangled or stuck with wires or debris on the ground. - The side brush or main brush is stuck, preventing the robot from moving normally. - The robot is stuck by obstacles.	- Clear any scattered wires or debris on the floor - Remove any debris jamming the main brush/side brush, then restart the robot on a level surface - Clear obstacles or set up custom no-go zones in the App
Stopped working or returned to charging before completing cleaning	The robot has low battery	- Instruct the robot to return to its base station - Enable the resume cleaning feature in the App, and the robot will automatically continue cleaning once it has sufficient battery power
Not cleaning according to the scheduled time	- The cleaning schedule in the App has been turned off. - The robot is in "Do Not Disturb" mode	- Reschedule the cleaning appointment in the App - Turn off the "Do Not Disturb" mode or adjust its time settings
The robot is hanging	The left or right wheels are suspended	Restart the robot on a level surface.
The robot moves backward	The protective cover of the navigation module is stuck. - There are obstacles in front of the robot's path. - The bumper is stuck. - The anti-drop sensor is dusty	- Gently tap the protective cover to remove any foreign objects. - Promptly clear any obstacles. - After clearing obstacles or foreign objects, gently tap the bumper. - Clean any dust or dirt from the anti-drop sensor lens promptly.

Frequently Asked Question

Description of problems	Possible Reason	Solution
Robot has no voice	Voice settings set to mute or low volume	Increase the volume in the app
Delayed response in App operation	- Network congestion - Poor wireless network signal reception on the phone - Insufficient network bandwidth	- Restart the router to reduce the number of connected users - Check the settings on the phone itself - Increase network bandwidth
App displays device offline	Please check the following: - Phone not properly connected to the network - Router not functioning properly - Wireless network configuration on the device cleared - Wireless network password changed or network replaced - Robot automatically shuts down due to low battery	Please try the following solutions: - Reconnect the phone to the network - Restart the router - Add a new appliance in the app - Hold down both the power button and the return to charge button for 3 seconds to enter network configuration mode. - Follow the instructions on the phone to re-add the device - Dock the robot to the base station and listen for the prompt "Start charging"
App cannot scan robot's QR code	Robot's QR code is unclear or damaged	Access the MiHome app — Add device Method 1: Select "Add by model" and find the corresponding device Method 2: Select "Nearby devices" and search for nearby devices to add

For further troubleshooting guidance, please refer to the push notifications in the app.

Maintenance and Care

Frequently Asked Question

Description of problems	Possible Reason	Solution
Robot unresponsive	Child lock activated	- Long press the main unit's  button for 3 seconds to disable child lock, the robot will announce "Child lock disabled" after deactivation. - In the App's "More Settings," tap the child lock toggle button to deactivate it. After deactivation, the robot will announce "Child lock disabled."
Unable to clean mop - 1	- Clean Water Tank empty - Dirty Water Tank full	- Refill the water tank by removing it. - Empty the dirty water tank.
Unable to clean mop - 2	The fresh water tank of the automatic up-and-down water module (optional) is abnormal.	Check if the fresh water pipe is connected smoothly. Confirm that the three-way valve switch of the fresh water is opened.
Unable to clean mop - 3	The sewage tank filter box of the automatic up-and-down water module (optional) is improperly installed; or the sewage tank of the automatic up-and-down water module (optional) is abnormal.	Check whether the sewage tank filter box of the automatic up-and-down water module is installed properly; Check if the sewage pipe is connected smoothly; Remove the sewage tank filter box of the automatic up-and-down water module, clean the filter box, and install it in place.
Robot leaks dust during operation	object obstructing the dust box inlet	Remove any objects from the dust box outlet.

Statement

ROHS



Parts Name	Hazardous substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Electronic circuit	×	○	○	○	○	○
Switch	○	○	○	○	○	○
Power adapter	×	○	○	○	○	○
Battery module	○	○	○	○	○	○
Vacuum motor module	○	○	○	○	○	○
Side brush motor module	○	○	○	○	○	○
Big wheel module	○	○	○	○	○	○
Water tank module	○	○	○	○	○	○

Parts Name	Hazardous substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Filter Assembly	○	○	○	○	○	○
Side Brush Assembly	○	○	○	○	○	○
Front Wheel Assembly	○	○	○	○	○	○
Dust Cup Assembly	○	○	○	○	○	○
Main Body Assembly	○	○	○	○	○	○
Top Cover Assembly	○	○	○	○	○	○
Charging Dock Assembly	○	○	○	○	○	○

Note

1. This table is compiled in accordance with the requirements of SJ/T 11364.
2. O: Indicates that the content of the harmful substance in all homogeneous materials of the component is below the limit requirements specified in GB/T 26572.
3. X: Indicates that the content of the harmful substance exceeds the limit requirements specified in GB/T 26572 in at least one homogeneous material of the component.
4. All components marked with 'x' in this table comply with the European Union's RoHS Directive, Directive 2011/65/EU of the European Parliament and of the Council on the restriction of the use of certain hazardous substances in electrical and electronic equipment, and its amendments.

Declaration

Product Parameters

Item	Parameters
Base Size	340 × 400 × 560 mm
Overall Size	325 × 325 × 99 mm
Rated Voltage	14.4 V 
Battery Capacity	Lithium-ion 5200 mAh
Dust Box Capacity	0.27 L
Overall Weight	Approximately 14.5 kg

Item	Parameters
Charging Type	Automatic Charging
Cleaning Mode	Whole House, Area, Custom, Scheduled
Charging Time	Approximately 6.5 hours
Cleaning Time	Sweeping and Mopping Combined: 150min
Main Button Type	One-Key Start
Noise Level	65dBA (Sweeping and Mopping), 83dBA (Dust Collection)

AUTOBOT[®]



LINE@ | @autobot

Call Center : 1475

Facebook : Robotmaker

<https://www.autobotofficial.com>


P20 Pro

Robot Vacuum cleaner with All-in-one clean station

Robot Vacuum Cleaner Instructions Manual

คู่มือการใช้งาน

โปรดอ่านรายละเอียดให้ถี่ถ้วน ก่อนใช้งานสินค้า

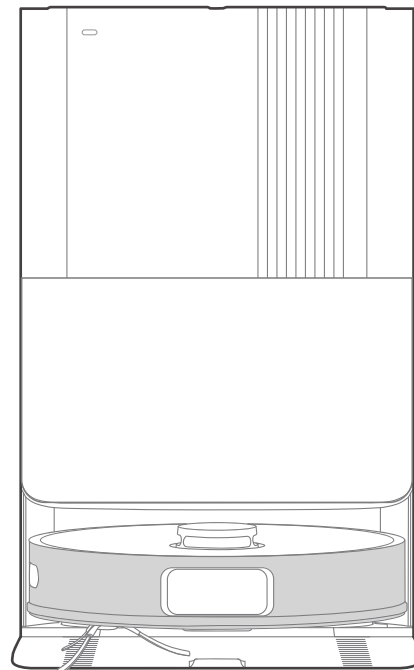

Please read this manual carefully before use and keep it properly.

สารบัญ

คำแนะนำด้านความปลอดภัย.....	24
คำอธิบายความรับผิดชอบและข้อมูลความปลอดภัย.....	25
ส่วนประกอบ.....	26
ส่วนประกอบ.....	26
อุปกรณ์เสริม.....	28

วิธีติดตั้งผลิตภัณฑ์.....	29
แท่นชาร์จ/ถังน้ำสะอาด/น้ำสกรปรก.....	29
วิธีติดตั้งแท่นชาร์จ/ที่ใส่แผ่นมือ.....	30

ระบบปฏิบัติการอัจฉริยะ.....	31
เปิดเครื่องและชาร์จ/การเตรียมสภาพแวดล้อม.....	31
เชื่อมต่อเครือข่าย.....	32
วิธีงานหุ่นยนต์.....	33
วิธีงานแอป.....	35

วิธีดูแลรักษา.....	36
คำแนะนำการดูแลรักษาส่วนประกอบ/กล่องเก็บฝุ่น	
และการบำรุงรักษาตัวกรอง.....	36
การบำรุงรักษาแท่นชาร์จ.....	37
ทำความสะอาดแท่นชาร์จ/ล้อ/แท่นชาร์จข้าง.....	38
การเปลี่ยนถุงเก็บฝุ่น.....	39
คำถามที่พบบ่อย.....	40

รายละเอียด.....	43
ROHS.....	43
ข้อมูลจำเพาะผลิตภัณฑ์.....	44

คำแนะนำด้านความปลอดภัย

เคล็ดลับ

- 1. เวลาในการชาร์จอาจยืดออกไปในสถานการณ์ต่อไปนี้: ก. เมื่อชาร์จในสถานที่ที่อุณหภูมิห้องเกิน 30 องศาเซลเซียส; ข. เมื่อหยุดการทำงานทันทีหลังจากการใช้งาน
 - 2. ไม่ควรใช้งานนานเกินไป หลังจากการทำความสะอาดเสร็จสิ้น
 - 3. เมื่อไม่ได้ชาร์จ แนะนำให้ถอดปลั๊กพ่วงออกในลักษณะที่เหมาะสม
 - 4. หากไม่ได้ใช้เครื่องเป็นเวลานาน (มากกว่า 2 เดือน) โปรดถอดปลั๊กไฟ อย่างไรก็ตาม เพื่อให้แน่ใจว่าแบตเตอรี่มีอายุการใช้งานยาวนาน จำเป็นต้องชาร์จไฟขึ้นทุก 2 เดือน
 - 5. ในระหว่างกระบวนการชาร์จ ตัวเครื่องหรืออะแดปเตอร์ไฟอาจเกิดความร้อน ซึ่งเป็นปรากฏการณ์ปกติ โปรดใช้งานได้อย่างสบายใจ
- เมื่อรหัสผ่านหรือข้อผิดพลาดที่ใช้ในนามของคุณเปลี่ยนแปลงเมื่อคุณเปลี่ยนเราเตอร์ หุ่นยนต์ดูดฝุ่นจะปรากฏเป็นออฟไลน์บนแอป อย่างไรก็ตาม คุณสามารถเชื่อมต่อใหม่ได้โดยการตั้งค่าเครือข่ายใหม่โดยไม่ต้องเปลี่ยนบัญชี Mi Home ของคุณ
 - หากมีคนต้องการควบคุมหุ่นยนต์ดูดฝุ่นเครื่องเดียวกันผ่านแอป เจ้าของบ้านสามารถเชิญพวกเขาให้เข้าร่วมเครือข่ายผ่านแอปได้ สมาชิกที่ได้รับเชิญต้องดาวน์โหลดแอป Mi Home และลงทะเบียนบัญชีแล้ว
 - หากมีการเปลี่ยนแปลงในบัญชีแอป Mi Home ผู้ใช้สามารถลบอุปกรณ์ออกจากแอปมือถือได้ ผู้ใช้ไม่สามารถปฏิบัติตามคู่มือการตั้งค่าเครือข่ายเพื่อตั้งค่าอุปกรณ์ หากผู้ใช้ไม่ได้ลบอุปกรณ์ออกจากแอปมือถือ อุปกรณ์จะถูกลบโดยอัตโนมัติเมื่อผู้ใช้ใหม่ตั้งค่าเครือข่ายสำเร็จ
 - โปรดหลีกเลี่ยงการใช้หุ่นยนต์ดูดฝุ่นใกล้แหล่งความร้อน การเพิ่มฟริช หรือบุหรี่ที่กำลังติดไฟ
ห้ามดูดสารต่อไปนี้โดยตรง:
 - 1. ของเหลวทั้งหมด เช่น น้ำและตัวทำละลาย
 - 2. ฝุ่นก่อร่างและเศษวัสดุ เช่น ปูนขาวและซีเมนต์
 - 3. วัตถุที่ก่อให้เกิดความร้อน เช่น ถ่านที่ยังไม่ดับและบุหรี่
 - 4. เศษแก้วแหลมคม;
 - 5. วัสดุไวไฟและระเบิดได้ เช่น น้ำมันเบนซินหรือผลิตภัณฑ์แอลกอฮอล์
 - เฉพาะช่างเทคนิคที่ได้รับอนุญาตเท่านั้นที่สามารถถอดแยกชิ้นส่วนผลิตภัณฑ์ได้ ห้ามถอดแยกชิ้นส่วนผลิตภัณฑ์ด้วยตนเองอย่างเด็ดขาด
 - เมื่อถอดแบตเตอรี่ โปรดปฏิบัติตามขั้นตอนต่อไปนี้:
 - 1. ปิดเครื่องหุ่นยนต์ดูดฝุ่น
 - 2. คลายสกรูของฟาร์มแบตเตอรี่
 - 3. ถอดฟาร์มแบตเตอรี่ออก
 - 4. ถอดปลั๊กขั้วต่อของแบตเตอรี่และนำแบตเตอรี่ออก



- ห้ามไม่ให้เด็ก บุคคลที่มีความบกพร่องทางร่างกาย หรือผู้ที่ขาดสติปัญญาและประสบการณ์ในการใช้เครื่องใช้ไฟฟ้าในครัวเรือน ใช้ผลิตภัณฑ์นี้โดยไม่มีคำแนะนำจากผู้ได้รับมอบหมาย
- ผลิตภัณฑ์นี้ใช้สำหรับการใช้งานในครัวเรือนเท่านั้น ห้ามใช้กลางแจ้ง
- หุ่นยนต์ดูดฝุ่นของคุณเป็นเครื่องใช้ไฟฟ้าและต้องรักษาได้ทันท่วงที อย่าสัมผัสสายไฟ ฉ่าสาย หรืออะแดปเตอร์ด้วยมือเปียก
- ถอดปลั๊กก่อนใช้งานเมื่อถึงต้น
- ถอดปลั๊กไฟเมื่อทำความสะอาด ช่อมเขน หรือไม่ได้ใช้งานหุ่นยนต์ดูดฝุ่นชั่วคราว
- หลีกเลี่ยงการจับหุ่นยนต์ดูดฝุ่นลงในน้ำ เข้าใกล้เครื่องใช้ไฟฟ้าที่ให้ความร้อน หรือสัมผัสกับแสงแดดโดยตรงเพื่อป้องกันไฟไหม้
- ใช้เฉพาะอะแดปเตอร์ไฟที่เสียบในบรรจุภัณฑ์เท่านั้น การใช้อะแดปเตอร์อื่นอาจทำให้ผลิตภัณฑ์เสียหายได้
- ผู้ใช้ไม่ได้รับอนุญาตให้เปลี่ยนแบตเตอรี่ในเครื่องตามอำเภอใจ หากจำเป็นต้องเปลี่ยนหรือจัดแบตเตอรี่อย่างพร้อมกันขณะในครัวเรือน โปรดติดต่อฝ่ายบริการหลังการขายเพื่อรับคำแนะนำการจัดการที่เหมาะสม
- ถอดแบตเตอรี่ออกจากเครื่องก่อนทิ้ง
- ตรวจสอบให้แน่ใจว่าผลิตภัณฑ์ไม่ได้เชื่อมต่อกับแหล่งจ่ายไฟเมื่อถอดแบตเตอรี่
- โปรดใช้เคเบิลแบตเตอรี่ที่ใช้แล้วอย่างปลอดภัย
- อย่าสัมผัสตัวนำไฟฟ้าที่มีขั้วไฟฟ้าหรือปลั๊กเพื่อป้องกันไฟฟ้าช็อตวงจร
- ก่อนใช้ผลิตภัณฑ์นี้ โปรดเก็บสิ่งของที่แตกหักง่าย (เช่น แก้ว โคมไฟ ฯลฯ) จากพื้นและสิ่งของที่อาจพันกับแปรงด้านข้างของดูดอากาศ และล้อขับเคลื่อน (เช่น สายไฟ ผ่านผ้า และวัสดุพรมต่างๆ)
- อย่าวางผลิตภัณฑ์ในที่ที่อาจตกได้ง่าย (เช่น บนโต๊ะและเก้าอี้)
- ผลิตภัณฑ์อาจทำงานได้ถูกต้องภายใต้แสงจ้า
- อย่าดึงหรือวางสิ่งของหนักหรือวัตถุแข็งบนเครื่อง
- อย่าเดินเหยียบพ่วง น้ำยาทำความสะอาด น้ำยาฆ่าเชื้อ น้ำยาทำความสะอาด หรือสารที่ไม่ทราบชนิดหรือสารละลายต่างลงในถังขยะของสถานีฐานเพื่อหลีกเลี่ยงความเสียหาย
- หากผลิตภัณฑ์จำเป็นต้องเจาะเข้าไปในผนังหรือพื้น และมีสายไฟหรือท่อที่ซ่อนอยู่ หรือตำแหน่งของท่อ ก่อนที่จะเจาะ อย่าใช้ขดลวด จำเป็นต้องขยับกับผู้ใช้ คุณสามารถใช้เครื่องตรวจจับโลหะเพื่อตรวจสอบว่ามีสายไฟผ่านตำแหน่งที่จะเจาะหรือไม่ เพื่อหลีกเลี่ยงอุบัติเหตุส่วนบุคคลที่เกิดจากการเจาะทำลายสายไฟ
- หากผลิตภัณฑ์เป็นแบบกันน้ำ ไร้สาย นำออกเมื่อไม่ได้ใช้งานเป็นเวลานานหรือเมื่อไฟดับในสภาพอากาศที่มีอุณหภูมิต่ำ

คำอธิบายความรับผิดชอบและข้อมูลความปลอดภัย

ข้อความลิขสิทธิ์

ห้ามคัดลอก จัดจำหน่าย ทำซ้ำ หรือใช้ส่วนใดส่วนหนึ่งของคู่มือผลิตภัณฑ์นี้และเนื้อหาของ "ถ้อยแถลงความรับผิดชอบและข้อมูลความปลอดภัย" โดยไม่ได้รับอนุญาตเป็นลายลักษณ์อักษรจาก JONR ผลิตภัณฑ์ที่อธิบายในคู่มือนี้อาจมีซอฟต์แวร์ที่มีลิขสิทธิ์ซึ่งเป็นของ JONR และ/หรืออนุญาตให้ใช้สิทธิ์ ห้ามแจกจ่าย คัดลอก แก้ไข ถอดรหัส ถ่ายโอน ให้อำนาจ ท้าวจรรยาบรรณย้อนกลับ แยกส่วน ประกอบซอฟต์แวร์ดังกล่าวโดยไม่ได้รับอนุญาตจากเจ้าของลิขสิทธิ์ที่เกี่ยวข้อง (ยกเว้นตามที่กฎหมายที่เกี่ยวข้องอนุญาต)

ข้อความเครื่องหมายการค้า

JONR เป็นเครื่องหมายการค้าจดทะเบียนของบริษัท JONR Technology (Shenzhen) Co., Ltd

คำอธิบาย

คุณสมบัติและฟังก์ชันการทำงานบางอย่างของผลิตภัณฑ์นี้ขึ้นอยู่กับซอฟต์แวร์และฮาร์ดแวร์ของบุคคลที่สาม รวมถึงสภาพแวดล้อมเครือข่ายของคุณ คุณสมบัติและฟังก์ชันบางอย่างอาจไม่ตรงกับคำอธิบายในคู่มือผลิตภัณฑ์นี้ หรืออาจไม่สามารถทำได้เนื่องจากการตั้งค่าซอฟต์แวร์และฮาร์ดแวร์ของเครือข่ายหรือบุคคลที่สาม ภายในขอบเขตที่สมเหตุสมผลและควบคุมได้ JONR จัดเตรียมเงื่อนไขที่จำเป็นสำหรับผลิตภัณฑ์ที่อธิบายในคู่มือผลิตภัณฑ์นี้เพื่อให้ทำงานภายใต้เงื่อนไขปกติในระบบแอปพลิเคชัน IoT ของ Xiaomi อย่างไรก็ตาม ปัญหาประสิทธิภาพหรือความพร้อมใช้งานของผลิตภัณฑ์ที่เกิดจากสถานการณ์ต่อไปนี้ไม่อยู่ในขอบเขตที่สมเหตุสมผลและควบคุมได้:

1. การบำรุงรักษาตามปกติของระบบ IoT ของ Xiaomi รวมถึงการตอบสนองต่อข้อผิดพลาด การโยกย้ายธุรกิจ การทดสอบ หรือการใช้งานทดลอง
2. เกิดจากคุณหรือซอฟต์แวร์หรือฮาร์ดแวร์ของบุคคลที่สาม (รวมถึงแต่ไม่จำกัดเพียงเครือข่ายการสื่อสาร เซิร์ฟเวอร์ของบุคคลที่สาม ฯลฯ)
3. ปัจจัยอื่น ๆ ที่อยู่นอกเหนือการควบคุมที่สมเหตุสมผลของ JONR

การตีความขั้นสุดท้ายของผู้ผลิตผลิตภัณฑ์นี้และ

"ถ้อยแถลงความรับผิดชอบและข้อมูลความปลอดภัย" เป็นของ JONR JONR ขอสงวนสิทธิ์ในการแก้ไขคู่มือผลิตภัณฑ์นี้และ "ถ้อยแถลงความรับผิดชอบและข้อมูลความปลอดภัย" ได้ทุกเมื่อโดยไม่ต้องแจ้งให้ทราบล่วงหน้า

ข้อจำกัดความรับผิด

JONR ไม่ให้การรับประกันโดยชัดแจ้งหรือโดยนัยสำหรับเนื้อหาทั้งหมดในคู่มือผลิตภัณฑ์นี้ เนื้อหาทั้งหมดจัดเตรียมให้ "ตามสภาพ" (ยกเว้นตามที่กฎหมายที่เกี่ยวข้องกำหนด) ภายในขอบเขตที่กฎหมายที่เกี่ยวข้องอนุญาต ความรับผิดสูงสุดของ JONR สำหรับความสูญเสียใด ๆ ที่คุณได้รับอันเนื่องมาจากการใช้ผลิตภัณฑ์ที่อธิบายในคู่มือผลิตภัณฑ์นี้จำกัดเฉพาะราคาที่จ่ายสำหรับผลิตภัณฑ์ (ไม่รวมค่าชดเชยความเสียหายส่วนบุคคลตามที่กฎหมายที่เกี่ยวข้องกำหนด) ภายในขอบเขตที่กฎหมายที่เกี่ยวข้องอนุญาต JONR จะไม่รับผิดชอบต่อความเสียหายทางอ้อมที่เป็นผลสืบเนื่อง โดยบังเอิญ หรือพิเศษ ที่เกิดจากการใช้ผลิตภัณฑ์ที่อธิบายในคู่มือผลิตภัณฑ์นี้ และจะไม่รับผิดชอบต่อการสูญเสียผลกำไร ข้อมูล ค่าความนิยม ฯลฯ

การคุ้มครองความเป็นส่วนตัว

JONR ไม่ให้การรับประกันโดยชัดแจ้งหรือโดยนัยสำหรับเนื้อหาทั้งหมดในคู่มือผลิตภัณฑ์นี้ เนื้อหา "โปรดอ่านนโยบายความเป็นส่วนตัวของเราเพื่อทำความเข้าใจว่าเราปกป้องข้อมูลส่วนบุคคลของคุณอย่างไร: <https://jonrtech.com/>"

คำอธิบายความรับผิดชอบและข้อมูลความปลอดภัย

ข้อมูลด้านความปลอดภัย

ก่อนใช้ผลิตภัณฑ์ที่อธิบายในคู่มือผลิตภัณฑ์นี้ โปรดอ่านและปฏิบัติตามข้อควรระวังต่อไปนี้เพื่อหลีกเลี่ยงสถานการณ์อันตรายและรับรองการทำงานปกติของผลิตภัณฑ์

- ระหว่างการขนส่งหรือเมื่อไม่ได้ใช้ผลิตภัณฑ์เป็นระยะเวลานาน โปรดปิดเครื่อง
- ก่อนชาร์จ ตรวจสอบอย่างระมัดระวังว่าจะเสียบปลั๊กไฟฟ้ายึดติดกับเต้าเสียบอย่างถูกต้อง
- เพื่อป้องกันอันตรายจากการเสียดสี แจ้งผู้อยู่อาศัยคนอื่นในห้องเมื่อผลิตภัณฑ์กำลังทำงาน
- เทฝุ่นออกจากถังเก็บฝุ่นก่อนใช้ผลิตภัณฑ์หากเต็ม
- อุณหภูมิสภาพแวดล้อมการทำงานสำหรับผลิตภัณฑ์นี้อยู่ในช่วง 0°C ถึง 40°C
- ห้ามใช้ผลิตภัณฑ์นี้ในสภาพแวดล้อมที่มีอุณหภูมิสูง
- ก่อนกำจัดผลิตภัณฑ์ โปรดติดต่อเจ้าหน้าที่บริการหลังการขายเพื่อนำแบตเตอรี่ออกจากเครื่อง
- โปรดรับรองการทำงานแบตเตอรี่อย่างเหมาะสมโดยการรีไซเคิล

สภาพแวดล้อมการทำงานและการบำรุงรักษา

- เจาะทางเทคนิคที่ได้รับอนุญาตเท่านั้นที่สามารถถอดชิ้นส่วนผลิตภัณฑ์นี้ได้ ไม่แนะนำให้ผู้ใช้ถอดชิ้นส่วนผลิตภัณฑ์ด้วยตนเอง
- ผลิตภัณฑ์นี้ควรใช้กับอะแดปเตอร์ไฟฟ้าที่นำมาจากโรงงานเท่านั้น การใช้อะแดปเตอร์อื่นอาจทำให้ผลิตภัณฑ์เสียหายได้
- ห้ามสัมผัสสายไฟ เต้าเสียบ หรืออะแดปเตอร์ไฟฟ้าด้วยมือเปียก
- ห้ามให้พรม วัสดุพื้นรอบต่างๆ หรือส่วนของร่างกายติดเข้าไปในล้อขับเคลื่อนของผลิตภัณฑ์
- เก็บผลิตภัณฑ์ให้ห่างจากนุรี ไฟแช็ก หรือเปลวไฟอื่นๆ
- หากต้องทำความสะอาด โปรดทำความสะอาดผลิตภัณฑ์หลังจากชาร์จเสร็จสมบูรณ์แล้ว
- ห้ามจอสายไฟมาเกินไปหรือวางสิ่งของหรือวัตถุมีคมบนเครื่อง
- ผลิตภัณฑ์นี้ใช้สำหรับใช้งานภายในบ้านเท่านั้น ห้ามใช้กลางแจ้ง
- ห้ามใช้ผลิตภัณฑ์นี้รับน้ำหนัก (หรือคน) ที่มีน้ำหนักเกิน 10 กก.
- ห้ามใช้ผลิตภัณฑ์นี้ในสภาพแวดล้อมที่ชื้น (เช่น ห้องน้ำ)

- ก่อนใช้ผลิตภัณฑ์นี้ ให้นำสิ่งของที่แตกหักงอกจากพื้น (เช่น แก้ว โคมไฟ) และสิ่งของที่อาจพ่นเข้ากับแปรงด้านข้างและช่องดูด (เช่น สายไฟ กระดาษ ผ้า่าน ฯลฯ)
- ห้ามวางผลิตภัณฑ์ไว้ในที่ที่อาจตกได้ง่าย (เช่น บนโต๊ะและเก้าอี้)
- หากสายไฟชำรุด เพื่อความปลอดภัย ต้องเปลี่ยนโดยผู้เชี่ยวชาญจากผู้ผลิต แผนกซ่อมบำรุง หรือแผนกที่คล้ายกัน

สุขภาพของเด็ก

ผลิตภัณฑ์ที่อธิบายในคู่มือนี้ไม่ใช่ของเล่นสำหรับเด็ก เด็กควรใช้ผลิตภัณฑ์นี้ภายใต้การดูแลของผู้ใหญ่ ผลิตภัณฑ์นี้อาจมีชิ้นส่วนและอุปกรณ์เสริมขนาดเล็ก ดังนั้นโปรดเก็บผลิตภัณฑ์และอุปกรณ์เสริมให้พ้นมือเด็กเพื่อป้องกันไม่ให้พวกเขาถอดชิ้นส่วนหรือทำความเสียหายต่อผลิตภัณฑ์หรืออุปกรณ์เสริมโดยไม่ตั้งใจ หรือกลืนชิ้นส่วนเล็กๆ ซึ่งอาจนำไปสู่การสำลักหรืออันตรายอื่นๆ


ความปลอดภัยของที่ชาร์จ

เมื่อไม่ได้ชาร์จหรือไม่ได้ใช้งานเป็นเวลานาน โปรดถอดปลั๊กที่ชาร์จออกจากเต้าเสียบไฟฟ้าและถอดออกจากผลิตภัณฑ์
ห้ามใช้ที่ชาร์จที่ชำรุดเสียหายแล้วหรือสงสัยว่าจะชำรุด หรือได้รับความชื้น ความเปียก หรือฝน เพื่อป้องกันไฟฟ้าช็อตหรือเพลิงไหม้


ผลิตภัณฑ์

แนะนำส่วนประกอบ


มุมมองหลักของหุ่นยนต์ (ฝาปิด)

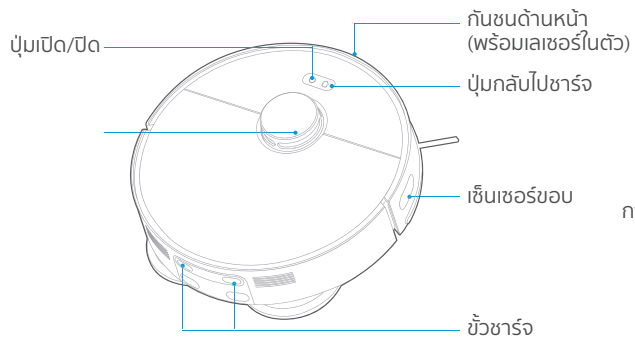

มุมมองด้านล่างของหุ่นยนต์

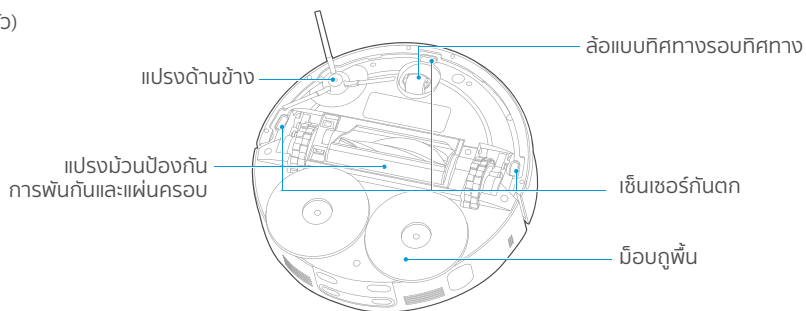


มุมมองหลักของหุ่นยนต์ (เปิดฝา)

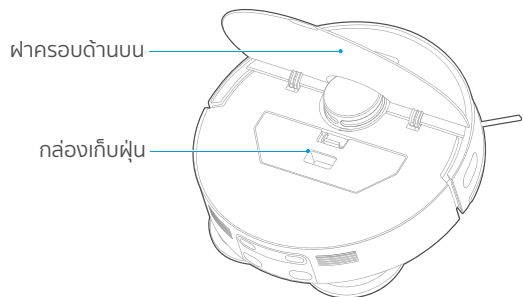


แนะนำผลิตภัณฑ์

แนะนำส่วนประกอบ


มุมมองหลักของสถานีฐาน

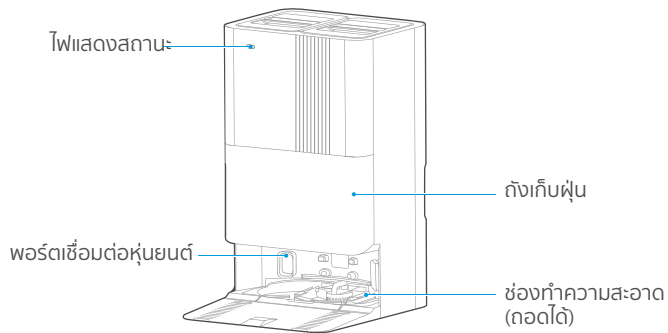


มุมมองด้านหลังของแท่นชาร์จ

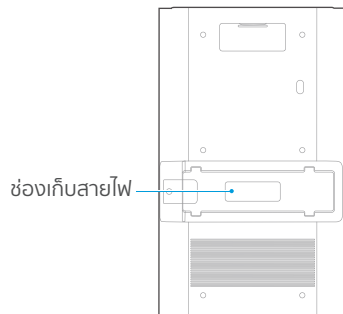

มุมมองด้านบนของแท่นชาร์จ

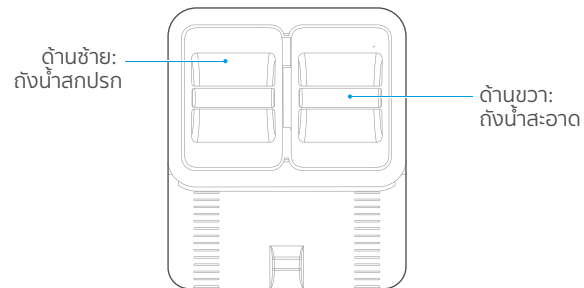


พอร์ตเชื่อมต่อ

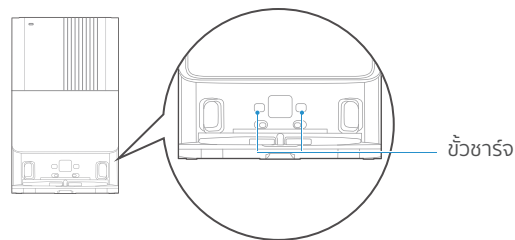


แนะนำผลิตภัณฑ์

รายการอุปกรณ์เสริม


แปรงด้านข้าง x1

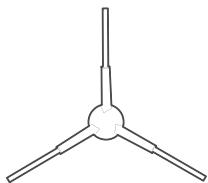


แผ่นต่อขยายฐานลาด x1

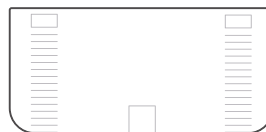


ถุงเก็บฝุ่น x1

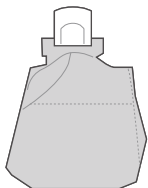

มือป x2

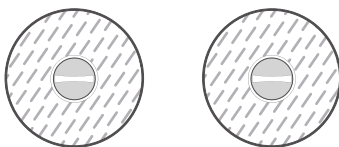


ที่ยึดฟ้ามือป X2

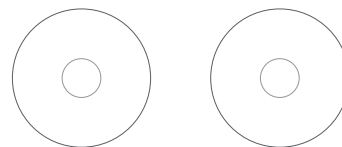

แนะนำผลิตภัณฑ์


การวางแท่นชาร์จ

1. กรุณาวางแท่นชาร์จชิดผนังบนพื้นผิวแข็ง โดยเว้นระยะห่างอย่างน้อย 8 ซม. ทั้งสองด้าน และมีพื้นที่ว่างด้านหน้าอย่างน้อย 1.2 เมตร
2. เสียบสายไฟเข้ากับตัวรับ และพ่วงสายไฟส่วนเกินเก็บเข้าไปในช่องด้านหลังของสถานีฐานเพื่อป้องกันการรบกวนการทำงานของหุ่นยนต์

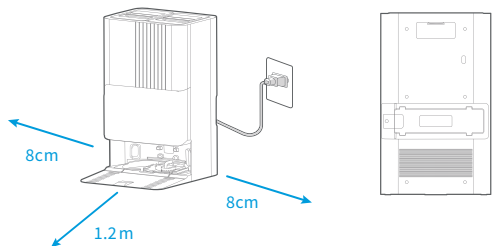


⚠ ข้อควรระวัง

1. ห้ามใช้สติกเกอร์หรือวัตถุอื่นปิดบริเวณส่งสัญญาณของแท่นชาร์จ

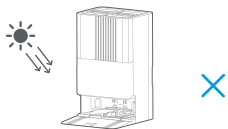


3. ห้ามวางแท่นชาร์จบนพื้นผิวนุ่ม เช่น พรม

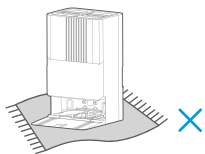

2. ห้ามใช้สติกเกอร์หรือวัตถุอื่นปิดบริเวณส่งสัญญาณของแท่นชาร์จ




4. ตรวจสอบให้แน่ใจว่าบริเวณชาร์จแห้งสนิท

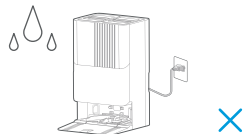

การเตรียมน้ำ / การเทน้ำ


ในการเติมน้ำสะอาด โปรดถอดถังน้ำสะอาดด้านขวาออก เปิดฝาด้านบน เติมน้ำสะอาด แล้วใส่กลับเข้าไปในสถานีฐาน

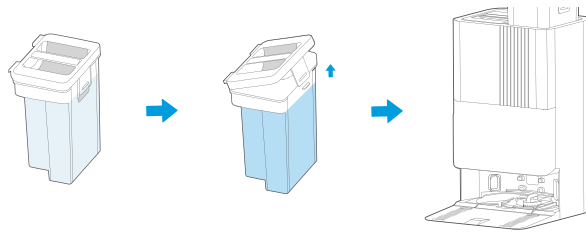

⚠ ข้อควรระวัง

โปรดอย่าใส่ผงซักฟอก สบู่ซักผ้า น้ำยาทำความสะอาดที่ไม่เป็นทางการจาก JONR น้ำยาฆ่าเชื้อโรค สบู่ล้างมือ ของเหลวที่มีน้ำมันไม่ทราบชนิด หรือสารที่มีฤทธิ์เป็นกรดหรือด่างลงในถังน้ำ เพื่อหลีกเลี่ยงความเสี่ยงความเสียหายที่ไม่ทราบสาเหตุ


ในการเทน้ำสกปรกทิ้ง โปรดถอดถังน้ำสกปรกด้านซ้ายออก เปิดตัวล็อคฝา แล้วเอียงถังเพื่อเทน้ำสกปรกออก

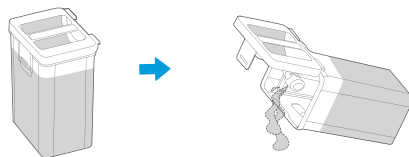


ติดตั้งผลิตภัณฑ์

ติดตั้งแปรงด้านข้าง

1. กดแปรงด้านข้างเข้าไปในช่องให้แน่นจนกว่าคุณจะได้ยินเสียง "คลิก" ซึ่งแสดงว่าการติดตั้งเสร็จสมบูรณ์

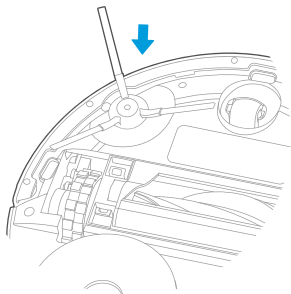

2. วิธีถอดแปรงด้านข้าง ให้พลิกหุ่นตัวดูดฝุ่นคว่ำลง จับขาที่เคลือบยางของแปรงด้านข้างด้วยมือทั้งสองข้าง (ระวังอย่าดึงหรือกระชากขนแปรงแรงเกินไป) แล้วดึงออกมา

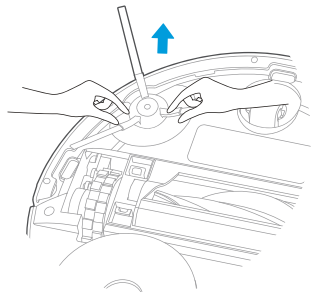


ติดตั้งแผ่นมือ

1. ก่อนอื่น ติดแผ่นมือเข้ากับที่ยึดแผ่นมืออย่างราบเรียบ



2. จัดให้ตรงกลางของที่ยึดตรงกับฝ่ามือที่ติดตั้งแล้ว และประกอบเข้ากับตัวเครื่องหลัก

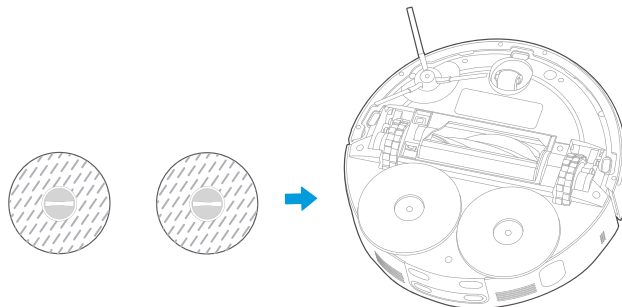

ข้อแนะนำที่เป็นประโยชน์


แผ่นมือได้รับการติดตั้งบนที่ยึดแผ่นมือไว้แล้วสำหรับการใช้งานครั้งแรก

ระบบปฏิบัติการอัจฉริยะ

TH

คำแนะนำการเปิดเครื่องและการชาร์จ

เชื่อมต่อแหล่งจ่ายไฟเข้ากับแท่นชาร์จ กดปุ่ม  บนหุ่นยนต์ค้ำจุนไว้สามวินาทีเพื่อเปิดเครื่อง รอจนกระทั่งไฟแสดงสถานะการทำงานติดสว่างคงที่ จากนั้นวางหุ่นยนต์บนแท่นชาร์จเพื่อชาร์จไฟตามที่แสดงในแผนภาพ เก็บหุ่นยนต์ไว้ในสถานะชาร์จไฟเพื่อความสะดวกในการใช้งานประจำวัน

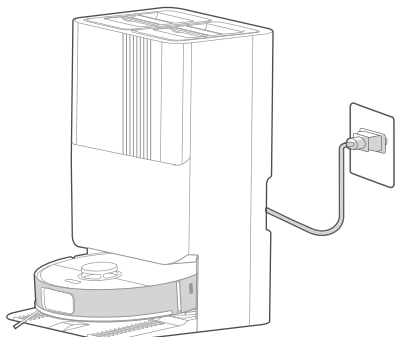

หมายเหตุ


1. เบื้องหน้าด้วยมือ ตรวจสอบให้แน่ใจว่าขั้วชาร์จหันเข้าด้านใน
2. ก่อนการทำความสะอาดครั้งแรก โปรดตรวจสอบให้แน่ใจว่าแบตเตอรี่ของหุ่นยนต์ชาร์จเต็ม 100%

คำแนะนำ

สำหรับการใช้งานครั้งแรก แนะนำให้วางหุ่นยนต์ลงบนแท่นชาร์จด้วยตนเอง หุ่นยนต์จะเปิดเครื่องโดยอัตโนมัติ

การเตรียมสภาพแวดล้อม


ก่อนเริ่มกระบวนการทำความสะอาด ให้เก็บกวาดสายไฟ วัตถุแข็ง สิ่งของมีคม (เช่น ตะปู แก้ว) และเศษขยะอื่นๆ ออกจากพื้น นอกจากนี้ ให้เคลื่อนย้ายสิ่งของที่ล้มได้ง่าย แดงหักง่าย มีค่า หรืออาจเป็นอันตราย เพื่อหลีกเลี่ยงการพินกัน การกีดขวาง การลาก หรือการชนกับหุ่นยนต์ ซึ่งอาจนำไปสู่การบาดเจ็บส่วนบุคคลหรือความเสียหายต่อทรัพย์สิน

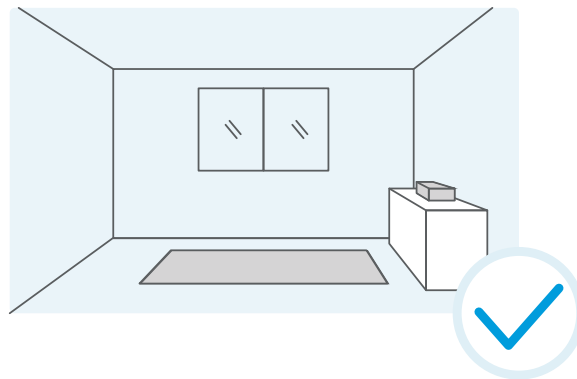

ระบบปฏิบัติการอัจฉริยะ

การเชื่อมต่อเครือข่าย

1. การดาวน์โหลดแอป: ค้นหา "Mi Home" ในร้านค้าแอปหรือสแกนรหัส QR ด้านล่างเพื่อดาวน์โหลดและติดตั้งแอป Mi Home

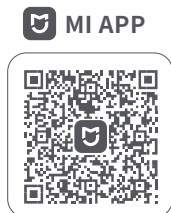


Download the app & activate product

2. การเพิ่มอุปกรณ์ตามคำแนะนำในแอป:

ตรวจสอบให้แน่ใจว่าสามารถโฟกัสของคุณเชื่อมต่อกับเครือข่าย Wi-Fi ในบ้านของคุณและเปิดลูกจูนบนโทรศัพท์ของคุณ ตรวจสอบให้แน่ใจว่าโทรศัพท์ของคุณเชื่อมต่อกับเครือข่าย Wi-Fi ในบ้านของคุณ คลิกไอคอน "+" ที่มุมขวาบนของหน้าแรกของแอป จากนั้นคลิก "เพิ่มอุปกรณ์" หรือ "สแกน"



สแกนรหัส QR บนอุปกรณ์

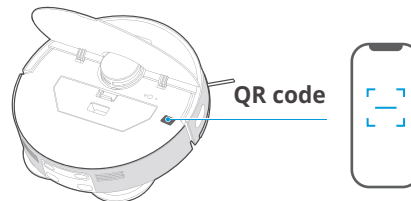

3. ทำตามคำแนะนำที่แอปให้ไว้จนกว่าแอปจะแจ้งว่าการเชื่อมต่อสำเร็จ

⚠️ หมายเหตุ

1. แอป Mi Home รองรับ iOS 13.0 ขึ้นไป รวมถึง Android 8.0 ขึ้นไป คุณสามารถตรวจสอบเวอร์ชันระบบปฏิบัติการมือถือได้ที่ "การตั้งค่า - เกี่ยวกับโทรศัพท์" บนโทรศัพท์ของคุณ
2. รุ่นนี้ไม่รองรับเราเตอร์ที่ใช้การเข้ารหัสแบบ WEP
3. ชื่อเครือข่ายไร้สายในบ้านและรหัสผ่านไม่สามารถมีอักขระภาษาจีนหรือสัญลักษณ์เว้นวรรค
4. เมื่อกำหนดค่าเครือข่ายหุ่นยนต์ดูดฝุ่น ให้ทำตามคำแนะนำในแอป ผลิตภัณฑ์นี้รองรับเฉพาะการสื่อสาร Wi-Fi 2.4GHz เมื่อเลือกเครือข่าย Wi-Fi ในบ้านปัจจุบัน ตรวจสอบให้แน่ใจว่าเลือกเครือข่าย 2.4GHz (สำหรับรายละเอียดเพิ่มเติม โปรดดูที่คู่มือ)
5. หุ่นยนต์ดูดฝุ่นต้องใช้เครือข่ายไร้สายในระหว่างการตั้งค่า หลังจากตั้งค่าสำเร็จ คุณสามารถใช้งานแอป Mi Home ในสภาพแวดล้อมเครือข่ายไร้สาย/เครือข่ายมือถือเพื่อควบคุมหุ่นยนต์ดูดฝุ่นจากระยะไกลได้

คำแนะนำ

คู่มือการใช้งานนี้อ้างอิงจากการทดสอบกับแอป Mi Home เวอร์ชัน 8.17.1 ซอฟต์แวร์และผลิตภัณฑ์มีการอัปเดตอย่างต่อเนื่อง และเวอร์ชันอื่นๆ อาจมีความแตกต่างในส่วนติดต่อผู้ใช้เมื่อเทียบกับเวอร์ชันปัจจุบัน โปรดอ้างอิงคำแนะนำการใช้งานของเวอร์ชันล่าสุดสำหรับคำแนะนำที่ถูกต้อง

การใช้งานหุ่นยนต์

เริ่มการทำงาน

เมื่อเปิดเครื่องหุ่นยนต์แล้ว ให้กดปุ่ม "  " บนหุ่นยนต์สั้นๆ เพื่อเริ่มการทำงาน

หยุดการทำงานชั่วคราว

ขณะที่หุ่นยนต์กำลังทำงาน ให้กดปุ่มใดก็ได้บนตัวหุ่นยนต์สั้นๆ เพื่อหยุดการทำงานชั่วคราว

กลับมาทำงานต่อ

หากหุ่นยนต์หยุดการทำงานชั่วคราว ให้กดปุ่ม "  " บนหุ่นยนต์สั้นๆ เพื่อให้ทำงานต่อ

กลับมาทำงานต่อ

ขณะที่หุ่นยนต์เปิดอยู่ ให้กดปุ่ม "  " บนหุ่นยนต์ค้างไว้ 3 วินาทีเพื่อปิดเครื่อง

กลัปไปชาร์จ

ขณะที่หุ่นยนต์เปิดอยู่ ให้กดปุ่ม "  " บนหุ่นยนต์สั้นๆ เพื่อให้กลับไปยังแท่นชาร์จจากตำแหน่งปัจจุบันเพื่อชาร์จไฟ

ล็อคสำหรับเด็ก (ล็อคปุ่ม)

ผู้ใช้งานสามารถเปิดใช้งานฟังก์ชันล็อคสำหรับเด็กได้โดยกดปุ่ม "  " บนหุ่นยนต์ค้างไว้ 3 วินาทีหรือใช้แอป เมื่อเปิดใช้งานล็อคสำหรับเด็ก ปุ่มบนหุ่นยนต์และฐานชาร์จจะถูกปิดใช้งาน และการทำงานจะทำได้ผ่านแอปเท่านั้นเพื่อป้องกันไม่ให้สัตว์เลี้ยงหรือเด็กกดปุ่มโดยบังเอิญ

ในการปิดใช้งานล็อคสำหรับเด็ก ให้กดปุ่ม "  " ค้างไว้ 3 วินาทีหรือใช้แอปเพื่อปิดการใช้งานในการตั้งค่า "อื่นๆ" หลังจากปิดการใช้งาน หุ่นยนต์จะส่งเสียงแจ้งเตือนว่าล็อคสำหรับเด็กถูกปิดแล้ว

คืนค่าการตั้งค่าจากโรงงาน

กดปุ่มเปิด/ปิดและปุ่มกลับไปชาร์จค้างไว้พร้อมกัน 7 วินาทีเพื่อริเซตเป็นการตั้งค่าจากโรงงาน

หมายเหตุ

1. กดผลิตภัณฑ์นี้ออกแบบมาสำหรับใช้งานภายในอาคารเท่านั้น ห้ามใช้สำหรับท่าความสะอาดภายนอก
2. ห้ามจุ่มหุ่นยนต์ลงในน้ำ เพราะอาจทำให้เกิดไฟฟ้าลัดวงจรหรือความเสียหายทางไฟฟ้าได้

การทำงานของปุ่มสำหรับหุ่นยนต์

ปุ่ม	การใช้งาน	ฟังก์ชัน
	กดค้างไว้ 3 วินาที	เปิด/ปิดเครื่อง
	กดสั้นๆ หนึ่งครั้ง	เริ่มทำความสะอาด
	เมื่อหุ่นยนต์อยู่ในโหมดสถานะภายนอกแท่นชาร์จทำความสะอาด กดสั้นๆ หนึ่งครั้ง	กลับไปชาร์จ
	เมื่อหุ่นยนต์อยู่ในสถานะทำความสะอาด กดสั้นๆ หนึ่งครั้ง	เริ่มเก็บฝุ่น
	เมื่อหุ่นยนต์อยู่ในสถานะทำความสะอาด กดสั้นๆ สองครั้งติดกัน	เริ่มทำความสะอาดด้วยมือถูพื้น
	เมื่อหุ่นยนต์อยู่ในโหมดสถานะภายนอกแท่นชาร์จทำความสะอาด กดสั้นๆ สองครั้งติดกัน	เริ่มทำความสะอาดเฉพาะจุด
	กดค้างไว้ 3 วินาที	เปิด/ปิดการล็อคป้องกันเด็ก
	กดค้างพร้อมกันเป็นเวลา 3 วินาที	ปิดเครื่องแบบบังคับ
	กดค้างพร้อมกันเป็นเวลา 7 วินาที	คืนค่าการตั้งค่าจากโรงงาน

ระบบปฏิบัติการอัจฉริยะ

การใช้งานหุ่นยนต์

คำอธิบายไฟแสดงสถานะของหุ่นยนต์

ไฟแสดงสถานะ	ลักษณะของไฟ	ความหมาย
 ไฟแสดงสถานะ:	ดับ	ปิดเครื่อง/โหมดสลับ/ห้ามรบกวน
	ไฟสีขาวค่อยๆ สว่างขึ้น	กำลังเปิดเครื่อง
	ไฟสีขาวสว่างนิ่ง	สถานะปกติ
	ไฟสีขาวสว่างไฟสีขาวกะพริบเป็นจังหวะหายอิง	กำลังปรับตำแหน่ง/ชาร์จ/อบแห้ง
	ไฟสีแดงสว่างนิ่ง	แบตเตอรี่ต่ำ
	ไฟสีแดงกะพริบ	ข้อผิดพลาด
	ไฟสีขาวกะพริบ	กำลังเชื่อมต่อเครือข่าย
ไฟแสดงสถานะ: เครือข่าย	ดับ	ปิดเครื่อง/โหมดสลับ/ห้ามรบกวน
	ไฟสีขาวค่อยๆ สว่างขึ้น	กำลังเปิดเครื่อง
	ไฟสีขาวสว่างนิ่ง	สถานะปกติ
	ไฟสีแดงกะพริบ	ข้อผิดพลาด



เครื่องใช้ไฟฟ้านี้สามารถใช้งานได้โดยเด็กอายุ 8 ปีขึ้นไปและบุคคลที่มีความสามารถทางร่างกาย ประสาทสัมผัส หรือจิตใจที่ลดลง หรือขาดประสบการณ์และความรู้ หากได้รับการควบคุมดูแล หรือคำแนะนำเกี่ยวกับการใช้งานเครื่องใช้ไฟฟ้าอย่างปลอดภัยและเข้าใจอันตรายที่เกี่ยวข้อง เด็กไม่ควรเล่นกับเครื่องใช้ไฟฟ้า การทำความสะอาดและการบำรุงรักษาโดยผู้ใช้งานต้องไม่ให้เกิดการปรัปรากจากการควบคุมดูแล

การใช้งานแท่นชาร์จ

การทำความสะอาดไม้ถูพื้น

เพื่อให้การถูพื้นมีประสิทธิภาพ หุ่นยนต์จะกลับไปแท่นชาร์จเพื่อทำความสะอาดไม้ถูพื้น ทุกๆ 10 นาทีของการทำความสะอาดโดยอัตโนมัติ หรือผู้ใช้สามารถปรับความถี่ในการทำความสะอาดไม้ถูพื้นได้ด้วยตนเองในแอปตามความต้องการ หลังจากเสร็จสิ้นงานถูพื้น และกลับสู่แท่นชาร์จ หุ่นยนต์จะทำความสะอาดไม้ถูพื้นโดยอัตโนมัติ

การอบแห้ง

หลังจากเสร็จสิ้นงานถูพื้นและกลับสู่แท่นชาร์จ ไม้ถูพื้นจะเข้าสู่กระบวนการอบแห้ง โดยอัตโนมัติ (โดยค่าเริ่มต้นจะใช้ลมร้อน แต่สามารถเปลี่ยนได้ในการตั้งค่าแอป) ผู้ใช้สามารถควบคุมการเริ่ม/หยุดการอบแห้งไม้ถูพื้นได้ด้วยตนเองในแอป (ซึ่งจะใช้เวลาเพิ่มขึ้นเล็กน้อย)

การเก็บฝุ่น

ระหว่างหรือหลังจากการทำความสะอาด หุ่นยนต์จะกลับไปแท่นชาร์จเพื่อเก็บฝุ่น โดยอัตโนมัติ ผู้ใช้สามารถเริ่มงานเก็บฝุ่นด้วยตนเองในแอป หรือปรับความถี่ในการเก็บฝุ่นในการตั้งค่าแท่นชาร์จ ตรวจสอบให้แน่ใจว่าถุงเก็บฝุ่นในแท่นชาร์จติดตั้งอย่างถูกต้องและไม่ได้เต็ม

หมายเหตุ

- อย่าถอดหุ่นยนต์ออกโดยใช้แรงระหว่างกระบวนการทำความสะอาดไม้ถูพื้น
- อย่าเคลื่อนย้ายแท่นชาร์จในขณะที่หุ่นยนต์กำลังทำความสะอาด

เคล็ดลับ

เพื่อประสิทธิภาพการทำความสะอาดที่ดีที่สุด แนะนำให้ปล่อยให้หุ่นยนต์เริ่มทำงานจากแท่นชาร์จในการใช้งานครั้งแรก

ระบบปฏิบัติการอัจฉริยะ

การใช้งานแอป

สำหรับฟังก์ชันเพิ่มเติมของหุ่นยนต์ โปรดเข้าถึงการตั้งค่าอุปกรณ์ในแอป Mi Home (ซึ่งจะใช้เวลาเพิ่มขึ้นเล็กน้อย)

คำเตือน

ซอฟต์แวร์และคุณสมบัติของผลิตภัณฑ์ที่ได้รับการอัปเดตอย่างต่อเนื่อง และอินเทอร์เน็ตความเร็วสูงแตกต่างกันในเวอร์ชันต่างๆ โปรดอ้างอิงเวอร์ชันล่าสุดของแอปสำหรับฟังก์ชันที่แท้จริง

รายการคุณสมบัติของแอป	
ฟังก์ชันพื้นฐาน	ทำความสะอาดทั้งบ้าน
	ทำความสะอาดห้อง
	ทำความสะอาดพื้นที่
	กลับไปยังชาร์จ
ตั้งค่าการทำความสะอาด	พลังการดูด
	ความถี่ในการทำความสะอาด
	ความชื้นของน้ำ
ตั้งค่าการทำความสะอาด	เฉพาะดูดฝุ่น
	เฉพาะน้ำ
	ดูดฝุ่นและน้ำรวมกัน
	ดูดฝุ่นก่อน น้ำที่หลัง

ตั้งค่าแท่นชาร์จ	ช่วงเวลาการล้าง
	ความถี่ในการเก็บฝุ่น
ตั้งค่าทำความสะอาดพื้น	โหมดทำความสะอาดพรม
	เพิ่มประสิทธิภาพสำหรับพรม
	ทำความสะอาดนุ่มเพิ่มเติม
การทำงานของแท่นชาร์จ	เก็บฝุ่น
	ทำความสะอาดน้ำ
	ทำให้มือแห้ง
ฟังก์ชันการกำหนดที่	โซนห้ามเข้า
	แก้ไขห้อง
	จัดการแผนที่
ตั้งค่าฟังก์ชันเพิ่มเติม	บันทึกการทำความสะอาด
	ทำความสะอาดตามกำหนดเวลา
	ตั้งค่าเสียง
	สถานะวัสดุสิ้นเปลือง
	ล็อกสำหรับเด็ก
	เรียกหุ่นยนต์

ระบบปฏิบัติการอัจฉริยะ


คำแนะนำการดูแลรักษาและชิ้นส่วน

เพื่อรักษาตัวเครื่องหลักให้อยู่ในสภาพดี แนะนำให้ปฏิบัติตามขั้นตอนการบำรุงรักษาประจำวันตามตารางด้านล่าง


ชิ้นส่วน	ความถี่ในการทำความสะอาด	ความถี่ในการเปลี่ยน
ถาดทำความสะอาดฐานแท่นชาร์จ	ทุก 1-2 สัปดาห์	/
แปรงหลักป้องกันการพันกัน	ทุก 2 สัปดาห์	ทุก 6-12 เดือน
แปรงด้านข้าง	ทุก 2 สัปดาห์	ทุก 3-6 เดือน
กล่องเก็บฝุ่น	ตามความจำเป็น	/
ตัวกรองกล่องเก็บฝุ่น	ทุก 2 สัปดาห์	ทุก 3-6 เดือน
ผ้าถูพื้น	/	ทุก 1-3 เดือน
ล้อขับเคลื่อน	ทุกเดือน	/
เซ็นเซอร์		
ถุงเก็บฝุ่น	/	ประมาณทุก 2.5 เดือน หรือตามความจำเป็น

การบำรุงรักษากล่องเก็บฝุ่นและตัวกรอง

1. เปิดฝาคอบบนหุ่นยนต์และกดปุ่มปลดล็อกกล่องเก็บฝุ่นเพื่อถอดกล่องเก็บฝุ่นออก
ปลดตัวกรองออกจากตัวล้อและเทฝุ่นออกจากกล่องเก็บฝุ่น

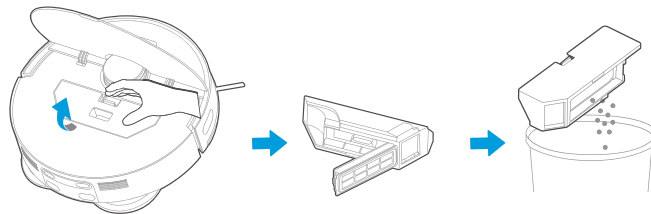

2. สามารถล้างตัวกรองกล่องเก็บฝุ่นด้วยน้ำได้ หลังจากล้างแล้ว ปล่อยให้แห้งในอากาศ
ก่อนใส่กลับเข้าไปในกล่องเก็บฝุ่น

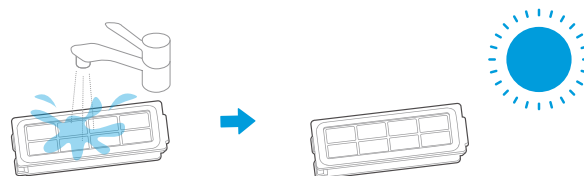


ข้อควรปฏิบัติ

เพื่อให้แน่ใจว่าตัวกรองทำงานได้อย่างมีประสิทธิภาพ แนะนำให้ทำความสะอาดและเปลี่ยนตัวกรองเป็นประจำ


การดูแลรักษา

การบำรุงรักษาแปรงลูกกลิ้ง


1. กดปุ่มปลดล็อคที่ฝาครอบด้านซ้ายและยกขึ้นเพื่อถอดแปรงลูกกลิ้งป้องกันการพันกันและฝาครอบออก

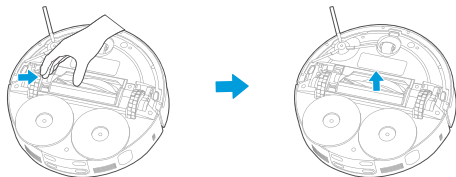

2. ใช้เครื่องมือที่เหมาะสมทำความสะอาดเส้นผมหรือเส้นด้ายที่พันกันบนแปรงลูกกลิ้ง จากนั้นใช้ฟ้านุ่มเช็ดทำความสะอาดแปรงลูกกลิ้งและฝาครอบ

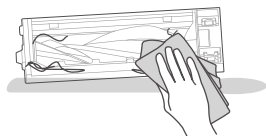


3. ล้างแปรงลูกกลิ้งด้วยน้ำและปล่อยให้แห้ง หลังจากทำความสะอาดแล้ว ให้ติดตั้งแปรงลูกกลิ้งป้องกันการพันกันกลับเข้าไปที่หุ่นยนต์เพื่อใช้งาน

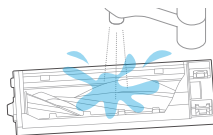


การบำรุงรักษาเซ็นเซอร์


1. เช็ดหน้าต่างส่งสัญญาณของเลเซอร์เส้น

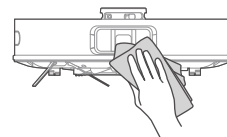

2. เช็ดเซ็นเซอร์ป้องกันการตกหล่น

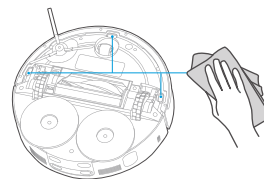


3. เช็ดเซ็นเซอร์ขอบ

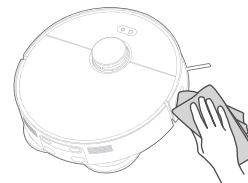


การดูแลรักษา

การทำความสะอาดฐาน

1. ค่อยๆ กดตัวล็อคตรงกลางที่ฐานของสถานีและดึงขึ้นเพื่อถอดถาดทำความสะอาดออก

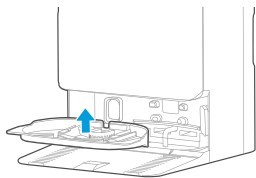


2. ล้างถาดทำความสะอาดด้วยน้ำสะอาด ปล่อยให้แห้ง แล้วใส่กลับเข้าไปในฐานและติดตั้งแท่นชาร์จใหม่

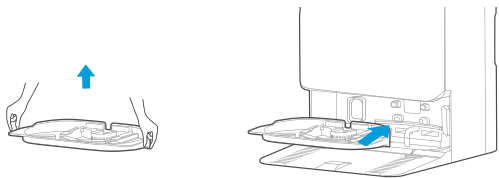


การทำความสะอาดล้อขับเคลื่อน

หมุนล้อขับเคลื่อนไปมาเพื่อขจัดสิ่งแปลกปลอม จากนั้นเช็ดทำความสะอาดด้วยผ้านุ่ม

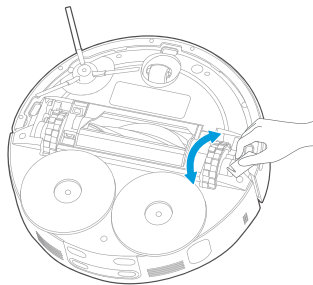

การทำความสะอาดแปรงด้านข้าง


ถอดแปรงด้านข้างออก ใช้เครื่องมือที่เหมาะสมในการทำความสะอาดฝุ่นออก

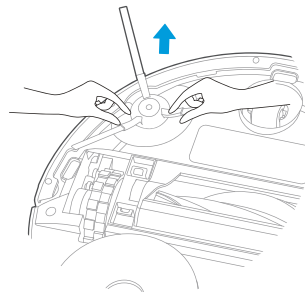


การดูแลรักษา

การเปลี่ยนถุงเก็บฝุ่น

1. นำฝาครอบถังเก็บฝุ่นออก

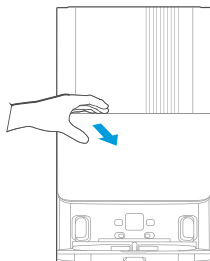


2. ดึงออกมาเพื่อนำถุงเก็บฝุ่นออก

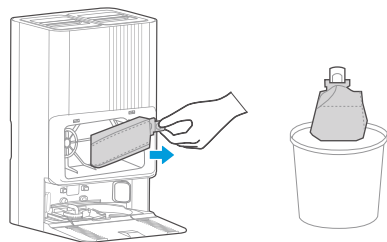


คำแนะนำ: ฝ้ายาสีดำที่อยู่ด้านซ้ายของถุงเก็บฝุ่นคือฝากรองโปรดย่านำออกหรือทิ้ง

3. ใช้ผ้าแห้งนุ่มๆ เช็ดทำความสะอาดบริเวณช่องเก็บฝุ่น

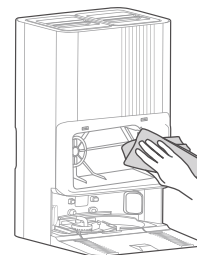

4. ติดตั้งถุงเก็บฝุ่นใหม่และใส่ฝาครอบถังเก็บฝุ่นกลับเข้าที่

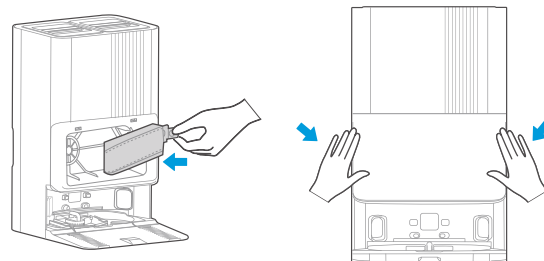

การดูแลรักษา

คำถามที่พบบ่อย

รายละเอียดปัญหา	สาเหตุที่เป็นไปได้	วิธีแก้ไข
หุ่นยนต์ไม่สามารถชาร์จได้	หุ่นยนต์ไม่ได้สัมผัสกับขั้วชาร์จ	- วางหุ่นยนต์ไว้ตรงหน้าแท่นชาร์จแล้วกดปุ่ม "กลับสู่การชาร์จ" - ถัดหุ่นยนต์เข้าแท่นชาร์จด้วยตนเองและรอนได้ยินเสียงประกาศ "เริ่มการชาร์จ"
หุ่นยนต์ไม่สามารถกลับไปชาร์จได้	ตำแหน่งของแท่นชาร์จไม่เหมาะสม	ดูรายละเอียดเพิ่มเติมในหัวข้อ "การวางตำแหน่งแท่นชาร์จ" ในคู่มือการใช้งาน
หุ่นยนต์ติดอยู่กับที่	- หุ่นยนต์พันกับสายไฟหรือติดเศษขยะบนพื้น - แปรงด้านข้างหรือแปรงหลักติดขัด ทำให้หุ่นยนต์เคลื่อนที่ไม่ได้ - หุ่นยนต์ติดสิ่งกีดขวาง	- เก็บสายไฟหรือเศษขยะที่กระจายอยู่บนพื้น - นำสิ่งกีดขวางในแปรงหลัก/แปรงด้านข้างออก แล้วรีสตาร์ทหุ่นยนต์บนพื้นผิวที่เรียบ - นำสิ่งกีดขวางออกหรือตั้งกำแพงที่ห้ามเข้าในแอป
หยุดทำงานหรือกลับไปชาร์จก่อนทำความสะอาดเสร็จ	แบตเตอรี่ต่ำ	- ส่งให้หุ่นยนต์กลับไปแท่นชาร์จ - เปิดใช้งานฟีเจอร์ทำความสะอาดต่อในแอป หุ่นยนต์จะกลับมาทำความสะอาดต่อโดยอัตโนมัติเมื่อชาร์จเพียงพอ
ไม่ทำความสะอาดตามเวลาที่กำหนด	- ตารางทำความสะอาดในแอปถูกปิด - หุ่นยนต์อยู่ในโหมด "ห้ามรบกวน"	- ตั้งเวลาทำความสะอาดใหม่ในแอป - ปิดโหมด "ห้ามรบกวน" หรือปรับการตั้งค่าเวลา
หุ่นยนต์ค้าง	ล้อยางหรือขวาลอย	รีสตาร์ทหุ่นยนต์บนพื้นผิวที่เรียบ
หุ่นยนต์ถอยหลัง	- ฝาครอบโบลุนำทางติด - มีสิ่งกีดขวางด้านหน้าหุ่นยนต์ - กันชนติด - เซ็นเซอร์กันตกฝุ่นเกาะ	- แตะฝาครอบเบาๆ เพื่อนำสิ่งแปลกปลอมออก - นำสิ่งกีดขวางออก - หลังจากนำสิ่งกีดขวางออก ให้แตะกันชนเบาๆ - ทำความสะอาดฝุ่นหรือสิ่งสกปรกออกจากเลนส์เซ็นเซอร์กันตกทันที

การดูแลรักษา

คำถามที่พบบ่อย

รายละเอียดปัญหา	สาเหตุที่เป็นไปได้	วิธีแก้ไข
หุ่นยนต์ไม่มีเสียง	ตั้งค่าเสียงเป็นปิดเสียงหรือเสียงต่ำ	เพิ่มระดับเสียงในแอป
การตอบสนองในแอปล่าช้า	- เครือข่ายมีการใช้งานหนาแน่น - สัญญาณเครือข่ายไร้สายของโทรศัพท์ไม่ดี - แบนด์วิดธ์เครือข่ายไม่เพียงพอ	- รีเซ็ตการเราเตอร์เพื่อลดจำนวนอุปกรณ์ที่เชื่อมต่อ - ตรวจสอบการตั้งค่าบนตัวโทรศัพท์ - เพิ่มแบนด์วิดธ์เครือข่าย
แอปแสดงว่าอุปกรณ์ออฟไลน์	โปรดตรวจสอบสิ่งต่อไปนี้: - โทรศัพท์เชื่อมต่อกับเครือข่ายไม่ถูกต้อง - เราเตอร์ทำงานไม่ถูกต้อง - การตั้งค่าเครือข่ายไร้สายบนอุปกรณ์ถูกล้าง - รหัสผ่านเครือข่ายไร้สายเปลี่ยนหรือเครือข่ายถูกเปลี่ยน - หุ่นยนต์ปิดตัวเองอัตโนมัติเนื่องจากแบตเตอรี่ต่ำ	โปรดลองวิธีแก้ไขต่อไปนี้: - เชื่อมต่อโทรศัพท์กับเครือข่ายใหม่ - รีเซ็ตการเราเตอร์ - เพิ่มอุปกรณ์ใหม่ในแอป - กดปุ่มเปิดและปุ่มชาร์จค้างไว้ 3 วินาทีเพื่อเข้าสู่โหมดตั้งค่าเครือข่าย - ทำตามคำแนะนำบนโทรศัพท์เพื่อเชื่อมต่ออุปกรณ์ใหม่ - เชื่อมต่อหุ่นยนต์กับแท่นชาร์จและรอฟังเสียงแจ้ง "เริ่มชาร์จ"
แอปไม่สามารถสแกน QR code ของหุ่นยนต์	QR code ของหุ่นยนต์ไม่ชัดเจนหรือเสียหาย	เข้าถึงแอป MiHome — เพิ่มอุปกรณ์ วิธีที่ 1: เลือก "เพิ่มโดยรุ่น" และค้นหาอุปกรณ์ที่ตรงกัน วิธีที่ 2: เลือก "อุปกรณ์ใกล้เคียง" และค้นหาอุปกรณ์ที่อยู่ใกล้เคียงเพื่อเพิ่ม

สำหรับคำแนะนำการแก้ไขปัญหาเพิ่มเติม โปรดดูการแจ้งเตือนแบบพุชในแอป

การดูแลรักษา

คำถามที่พบบ่อย

รายละเอียดปัญหา	สาเหตุที่เป็นไปได้	วิธีแก้ไข
หุ่นยนต์ไม่ตอบสนอง	ระบบล็อกป้องกันเด็กทำงาน	- กดปุ่ม "บ้าน" บนตัวเครื่องค้างไว้ 3 วินาทีเพื่อปิดระบบล็อกป้องกันเด็ก หุ่นยนต์จะประกาศว่า "ปิดระบบล็อกป้องกันเด็กแล้ว" - ในแอป ไปที่ "การตั้งค่าเพิ่มเติม" และปุ่มสลับล็อกป้องกันเด็กเพื่อปิดใช้งาน หลังจากปิดใช้งาน หุ่นยนต์จะประกาศว่า "ปิดระบบล็อกป้องกันเด็กแล้ว"
ไม่สามารถทำความสะอาดได้ - 1	- ถังน้ำสะอาดว่างเปล่า - ถังน้ำเสียเต็ม	- เติมน้ำในถังน้ำสะอาด - เทน้ำในถังน้ำเสียทิ้ง
ไม่สามารถทำความสะอาดได้ - 2	ถังน้ำสะอาดของโมดูลยกขึ้น-ลงอัตโนมัติ (อุปกรณ์เสริม) ผิดปกติ	ตรวจสอบว่าถังก่อน้ำสะอาดเชื่อมต่อถูกต้อง ยืนยันว่าวาล์วสามทางของน้ำสะอาดเปิดอยู่
ไม่สามารถทำความสะอาดได้ - 3	กล่องกรองถังน้ำเสียของโมดูลยกขึ้น -ลงอัตโนมัติติดตั้งไม่ถูกต้อง หรือถังน้ำเสียของโมดูลยกขึ้น -ลงอัตโนมัติ (อุปกรณ์เสริม) ผิดปกติ	- ตรวจสอบว่ากล่องกรองถังน้ำเสียของโมดูลยกขึ้น-ลงอัตโนมัติติดตั้งถูกต้อง - ตรวจสอบว่าถังก่อน้ำเสียเชื่อมต่อเรียบร้อยแล้ว - ถอดกล่องกรองถังน้ำเสียของโมดูลยกขึ้น-ลงอัตโนมัติออก ทำความสะอาดกล่องกรอง และติดตั้งกลับเข้าที่
หุ่นยนต์มีฝุ่นรบกวนขณะทำงาน	มีสิ่งกีดขวางช่องเก็บฝุ่น	นำสิ่งกีดขวางออกจากช่องเก็บฝุ่น

ROHS

(มาตรฐานการจำกัดการใช้สารอันตราย)



ชื่อชิ้นส่วน	สารอันตราย					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
วงจรอิเล็กทรอนิกส์	*	□	○	□	□	□
สวิตช์	□	□	○	□	□	□
อะแดปเตอร์ไฟฟ้า	*	□	○	□	□	□
โมดูลแบตเตอรี่	□	□	○	□	□	□
โมดูลมอเตอร์ดูดฝุ่น	□	□	○	□	□	□
โมดูลมอเตอร์เปรงข้าง	□	□	○	□	□	□
โมดูลสไลด์ใหญ่	□	□	○	□	□	□
โมดูลถังน้ำ	□	□	○	□	□	□

ชื่อชิ้นส่วน	สารอันตราย					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
ชุดประกอบตัวกรอง	□	□	○	□	□	□
ชุดประกอบแปรงด้านข้าง	□	□	○	□	□	□
ชุดประกอบล้อหน้า	□	□	○	□	□	□
ชุดประกอบถ้วยเก็บฝุ่น	□	□	○	□	□	□
ชุดประกอบตัวเครื่องหลัก	□	□	○	□	□	□
ชุดประกอบฟลักซ์ด้านหลัง	□	□	○	□	□	□
ชุดประกอบแท่นชาร์จ	□	□	○	□	□	□

หมายเหตุ:

1. ตารางนี้จัดทำขึ้นตามข้อกำหนดของ SJ/T 11364
2. O: แสดงว่าปริมาณสารอันตรายในวัสดุที่เป็นเนื้อเดียวกันทั้งหมดของชิ้นส่วนนั้นน้อยกว่าข้อกำหนดขีดจำกัดที่ระบุใน GB/T 26572
3. X: แสดงว่าปริมาณสารอันตรายในวัสดุที่เป็นเนื้อเดียวกันอย่างน้อยหนึ่งชนิดของชิ้นส่วนนั้นเกินข้อกำหนดขีดจำกัดที่ระบุใน GB/T 26572
4. ชิ้นส่วนทั้งหมดที่ทำเครื่องหมาย 'x' ในตารางนี้เป็นไปตามข้อกำหนด RoHS ของสหภาพยุโรป, ระเบียบ 2011/65/EU ของรัฐสภายุโรปและสภาแห่งสหภาพยุโรปว่าด้วยการจำกัดการใช้สารอันตรายบางชนิดในอุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์ และการแก้ไขเพิ่มเติม

ข้อมูลจำเพาะผลิตภัณฑ์

ขนาดและน้ำหนัก	รายละเอียด
ขนาดฐาน	340 × 400 × 560 มม.
ขนาดโดยรวม	325 × 325 × 99 มม.
แรงดันไฟฟ้า	14.4V
ความจุแบตเตอรี่	ลิเธียมไอออน 5200 mAh
ความจุถังเก็บฝุ่น	0.27 ลิตร
น้ำหนักรวม	ประมาณ 14.5 กก.

การทำงาน	รายละเอียด
ประเภทการชาร์จ	ชาร์จอัตโนมัติ
โหมดทำความสะอาด	ทั้งบ้าน, พื้นที่เฉพาะ, กำหนดเอง, ตั้งเวลา
เวลาในการชาร์จ	ประมาณ 6.5 ชั่วโมง
เวลาทำความสะอาด	ดูดฝุ่นและถูพื้นรวม 150 นาที
ปุ่มควบคุมหลัก	ปุ่มกดครั้งเดียว
ระดับเสียง	65dBA (ขณะดูดฝุ่นและถูพื้น), 83dBA (ขณะเก็บฝุ่น)

AUTOBOT[®]



LINE@ | @autobot

Call Center : 1475

Facebook : Robotmaker

<https://www.autobotofficial.com>