ekono

EK-PTB06

พัดลมพกพา

คู่มือการใช้งาน
กรุณาอ่านคู่มือการใช้งานอย่างละเอียดก่อนการใช้งานอุปกรณ์นี้

ส่วนประกอบ

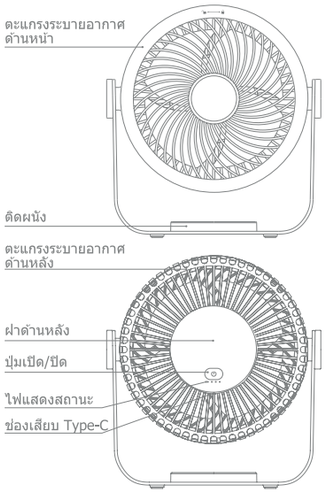

คำอธิบายส่วนประกอบสำคัญ

1.กดสั้น ๆ เพื่อเปิด ปิด
2.ความเร็วลมทั้งหมด 3 ระดับ กดสั้น ๆ เพื่อเปลี่ยน

คำอธิบายตัวบ่งชี้

ไฟแสดงสถานะที่ 1	ไฟแสดงสถานะที่ 2	ไฟแสดงสถานะที่ 3	ไฟแสดงสถานะการชาร์จ

1.ตัวบ่งชี้ที่ 1, 2, 3 คือความเร็วลมระดับที่ 1, 2, และ 3
2.ตัวบ่งชี้ที่ 4 คือตัวบ่งชี้การชาร์จ จะสว่างเป็นเวาลานานขณะที่กำลังชาร์จแบตเตอรี่และไฟจะดับลงเมื่อแบตเตอรี่เต็ม
3.เมื่อแบตเตอรี่ไม่เพียงพอ ไฟสีแดงจะกระพริบ

การปรับมุมองศา

พัดลมสามารถปรับหมุนได้ในระดับ 0°-90° องศา

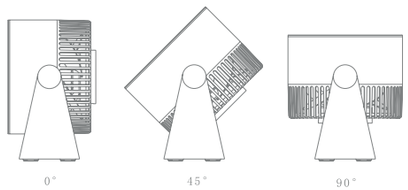

สเปคสินค้า

รุ่นผลิตภัณฑ์: EK-PTB06 (รุ่นชาร์จได้)
ชื่อผลิตภัณฑ์: พัดลมพกพา EKONO
กำลังไฟที่กำหนด: 5v ⎓ 2.0A
ความจุแบตเตอรี่: 4000mAh
น้ำหนักของผลิตภัณฑ์: 556g
ขนาดของผลิตภัณฑ์: 205 x 189 x 128 (mm)
มาตรฐานด้านการนำไปใช้ปฏิบัติ:
GB4706.1-2005 GB4706.27-2008

รุ่นผลิตภัณฑ์: EK-PTB06 (รุ่นเสียบปลั๊ก)
ชื่อผลิตภัณฑ์: พัดลมพกพา EKONO
กำลังไฟที่กำหนด: 5v⎓ 2.0A
ความจุแบตเตอรี่: 4000mAh
น้ำหนักของผลิตภัณฑ์: 466g
ขนาดของผลิตภัณฑ์: 205 x 189 x 128 (mm)
มาตรฐานด้านการนำไปใช้ปฏิบัติ:
GB4706.1-2005 GB4706.27-2008

ข้อควรระวัง

1.อุปกรณ์นี้ใช้แบตเตอรี่ลิเธียม การชาร์จแบตเตอรี่ที่นานเกินไป หรือการจ่ายไฟมากเกินไป จะมีผลต่ออายุการใช้งานของสินค้า กรุณาชาร์จแบตเตอรี่ให้ทันเวลาและถอดปลั๊กออกเมื่อแบตเตอรี่เต็มแล้ว
2.ในขณะที่พัดลมทำงานอยู่ ใบพัดจะหมุนด้วยความเร็วระดับสูง ห้ามนำนิ้วใส่เข้าไปในพัดลมเพื่อหลีกเลี่ยงการเกิดอันตราย
3.อุปกรณ์นี้ไม่ใช่ของเล่นเด็ก เด็กที่อายุต่ำกว่า 10 ปี ควรได้การดูแลจากผู้ปกครอง
4.กรุณาใช้อะแดปเตอร์ที่ตรงกับมาตรฐาน เพื่อเปิดการใช้งาน และกระแสไฟฟ้าจะต้องมากกว่า 1A

การถอดแบตเตอรี่

จำเป็นต้องถอดแบตเตอรี่ออกจากตัวผลิตภัณฑ์ก่อนทิ้งอุปกรณ์นี้
1.คลายเกลียวฝาแบตเตอรี่เพื่อเปิด
2.นำแบตเตอรี่ออกจากเมนบอร์ด
3.นำแบตเตอรี่ที่ถูกทิ้งไปไว้ที่จุดรีไซเคิล

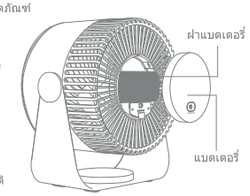

ใบรับรองการรับประกัน

1.เก็บใบรับประกันเพื่อเป็นหลักฐานสำหรับการซ่อมแซม
2.ระยะเวลาการรับประกันคือ 6 เดือนจากวันที่ซื้อสินค้า
3.ในระหว่างระยะเวลาการรับประกัน หากอุปกรณ์นี้มีปัญหาจากการใช้งานปกติ ทางบริษัทจะทำการตรวจสอบและซ่อมแซมให้โดยไม่มีค่าใช้จ่าย

การรับประกันจะไม่ครอบคลุม ตามเงื่อนไขดังต่อไปนี้

สินค้าของบริษัทที่อยู่ในระยะเวลารับประกันของการรับประกันแบบจำกัด การชำรุดหรือเสียหายของอุปกรณ์ซึ่งไม่อยู่ในระยะเวลารับประกันแบบจำกัด บริษัทจะไม่รับผิดชอบภาระผูกพันการรับประกันแบบไม่มีค่าใช้จ่าย

1.อุปกรณ์หรือส่วนประกอบใดเกินระยะเวลาการรับประกันกำหนด
2.อุปกรณ์ขัดข้องเนื่องจากการติดตั้ง การจัดเก็บ และการใช้งานที่ผิดพลาดโดยลูกค้า ไม่เป็นไปตามคู่มือการใช้งานหรือเกิดความเสียหาย
3.อุปกรณ์ขัดข้องหรือเกิดความเสียหาย เนื่องจากการถอดประกอบโดยบุคคลที่ไม่ได้รับอนุญาตจากทางบริษัท

ekono

EK-PTB06

PORTABLE FAN

Instruction
Please read this manual carefully before using the product

Product Introduction

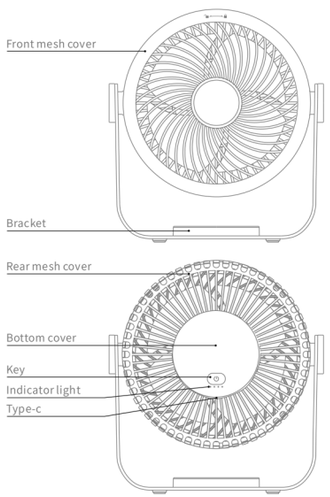

Key Description

1.Short press on/off;
2.Three gears in total, short press to switch.

ndicator Description

First gear Indicator light	Second gear Indicator light	Three gear Indicator light	Charge Indicator light

1. The first, second, third and third lights are the first, second and third gears respectively.
2. The fourth one is the charging indicator light, which is on for a long time while charging, and the full light is off.
3. The power is low and the red light flashes.

Adjustment of Angle

The air outlet can rotate freely in the range of 0 °~90 °.

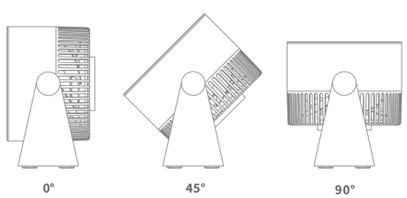

Product parameters

Product model: M55 (Charging model)
Product Name: Cycline Fan
Input rating: 5 V⎓2 A
Battery capacity: 4000mAh
Total product quantity: 556g
Product size: 205×189×128 (mm)
Implementation standard:
GB4706.1-2005
GB4706.27-2008

Product model: M55 (Plug in money)
Product Name: Cycline Fan
Input rating: 5 V⎓1 A
Total product quantity: 466g
Product size: 205×189×128 (mm))
Implementation standard:
GB4706.1-2005
GB4706.27-2008

Precautions

1. This product uses lithium battery and has no memory function. Over-indulgence or over-indulgence will affect the service life of the product When charging and fully charged, disconnect the power supply.
2. Do not put your fingers into the fan when the fan is rotating at a high speed to avoid danger.
3. This product is not a children's toy, children under the age of 10, please use it under the care of the guardian.
4. Please use the adapter that meets the national standard to power on, the power quantity is more than 1A.

Take out the battery

The battery must be removed from the appliance before it is discarded

1. Unscrew the bottom cover to open the bottom cover;
2. Remove the battery from the mainboard.
3. Place the discarded batteries at a fixed recycling point.

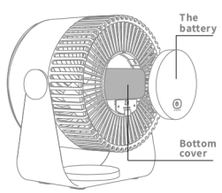

Three packets of prooves

1. Keep the warranty card as proof of repair
2. The warranty period is half a year from the date of purchase.
3. During the warranty period, the product will be exempted from failure if it occurs under normal useThe fee provides maintenance.

No free repair will be provided for the following conditions

The company's products within the warranty period of limited warranty. Failure or damage of equipment which falls underNot in the limited warranty, the company does not undertake free warranty obligations;

1. The equipment or parts have exceeded the valid warranty period.
2. Equipment failure caused by wrong installation, storage and use by the customer not in accordance with the requirements of the manualOr damage.
3. Equipment failure or damage caused by disassembly by institutions or personnel not authorized by the company.
4. Due to accident or human reasons (including but not limited to operation error, scratch, handling, bump,Improper input voltage and current, etc.) caused by equipment failure or damage.
5. Equipment failure or damage caused by force majeure such as natural disaster (earthquake, fire, etc.).

M55/ Draft2/ 28/2/2025