
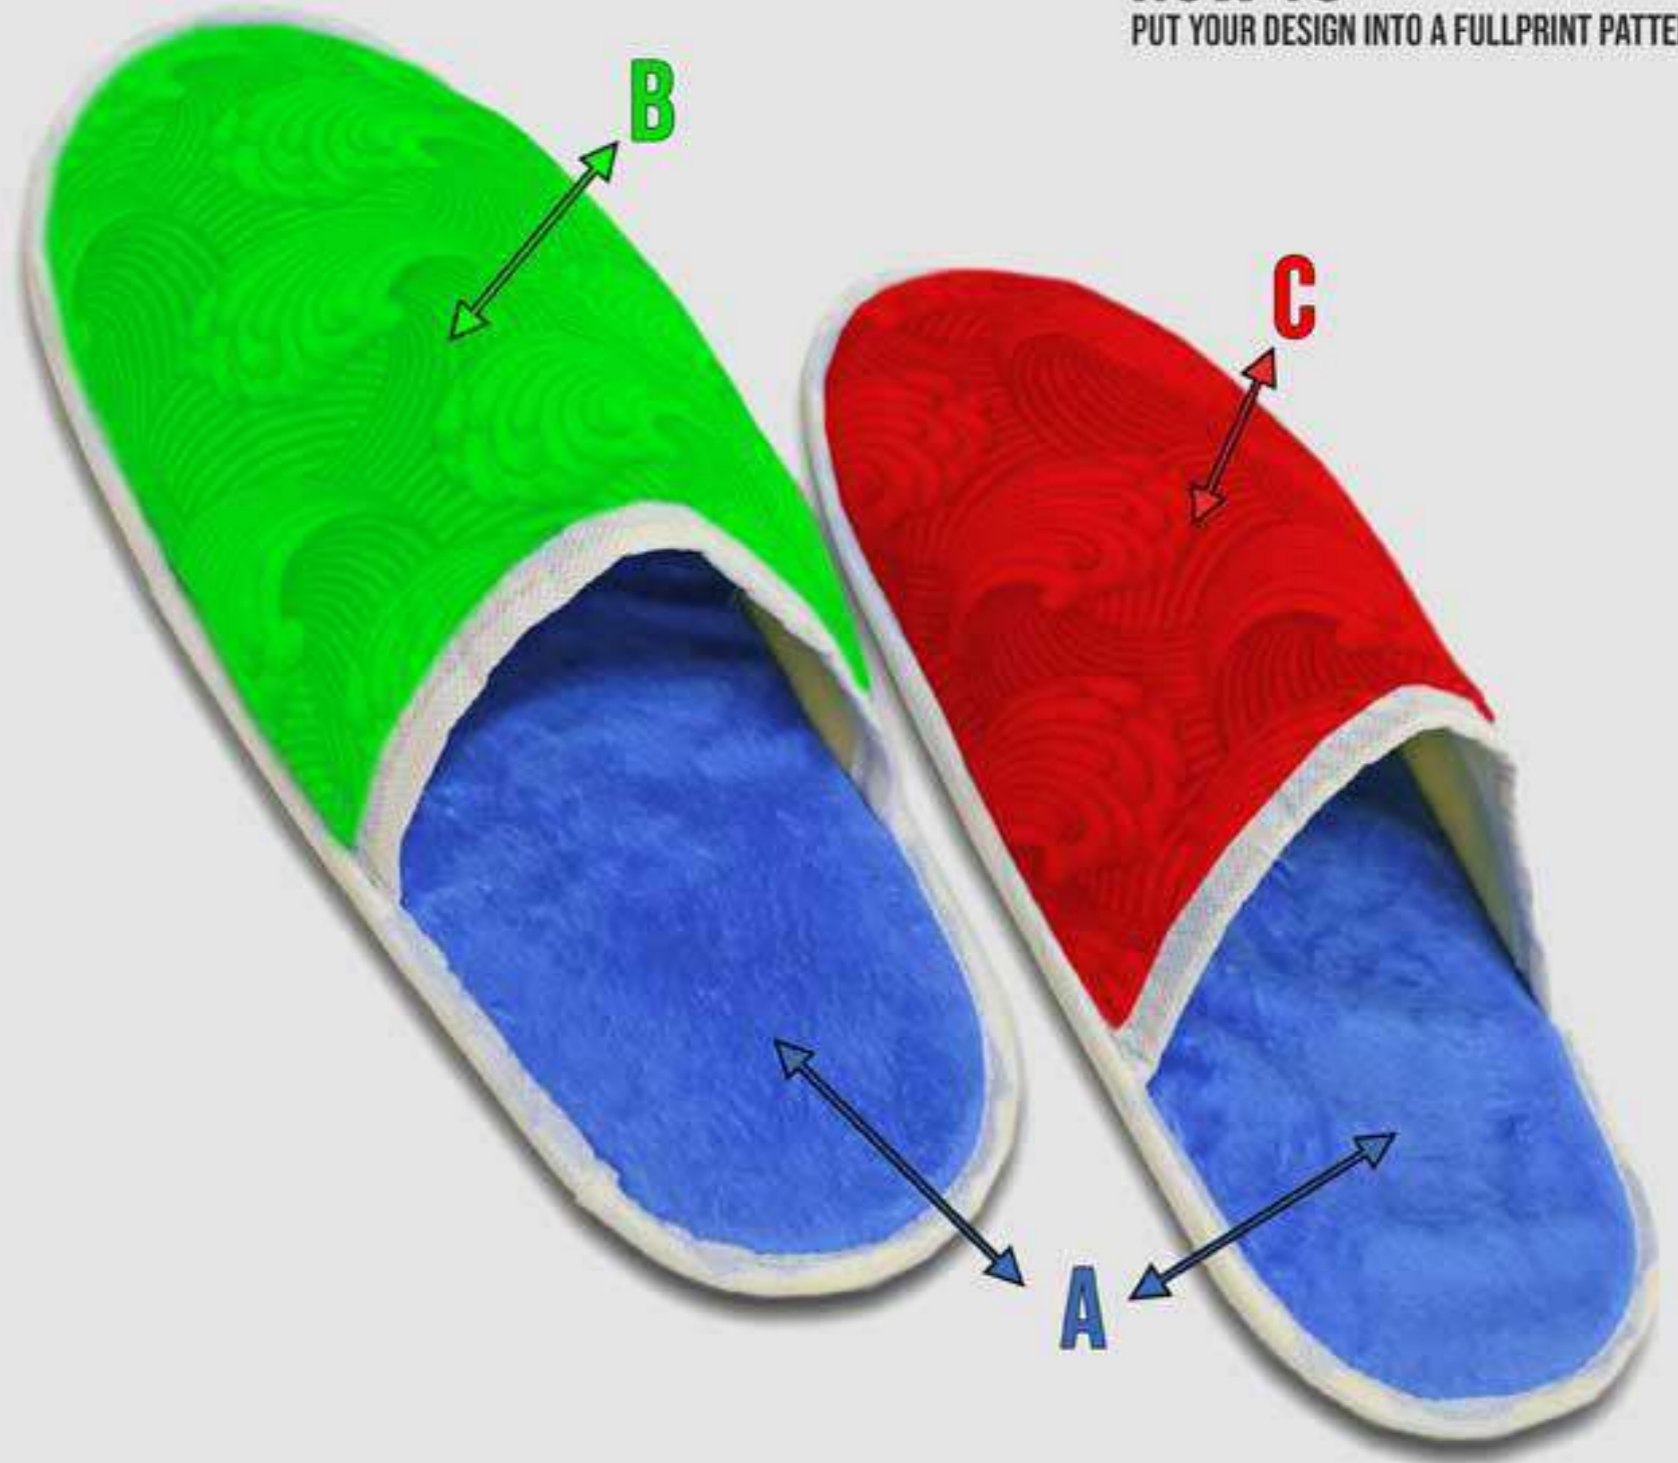
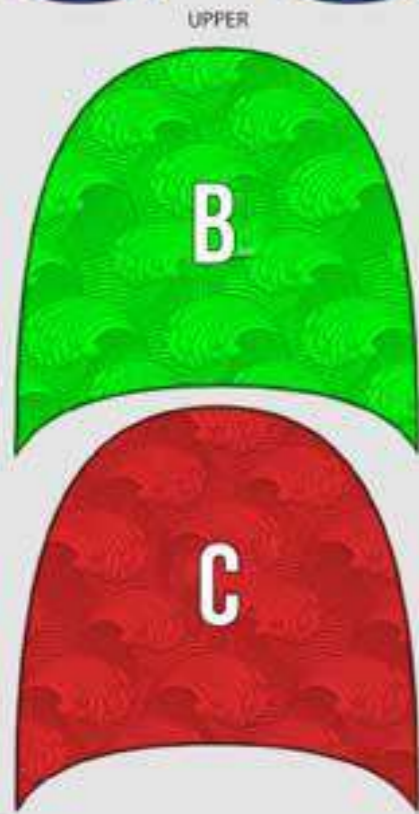


SLIPPER PATTERN AND GUIDANCE

HOW TO
PUT YOUR DESIGN INTO A FULLPRINT PATTERN

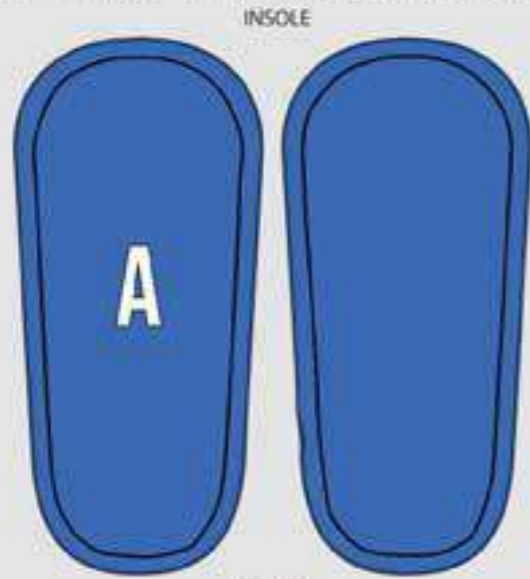


ILLUSTRATED

HOW TO
PUT your design into a fullprint pattern

HOW TO CREATE WOMAN SMALL SLING BAG WITH YOUR OWN DESIGN





Need your attention:

1. Please pay attention to pattern part position.
2. Black line is fabric/pattern cutting line. 
3. Red mark on every corner is a sewing/ folding line



ESTIMATED SEWING PART
IS ABOUT 1 - 2 Cm AFTER
PATTERN LINE

MAKE SURE YOUR DESIGN
NOT BE CUTED

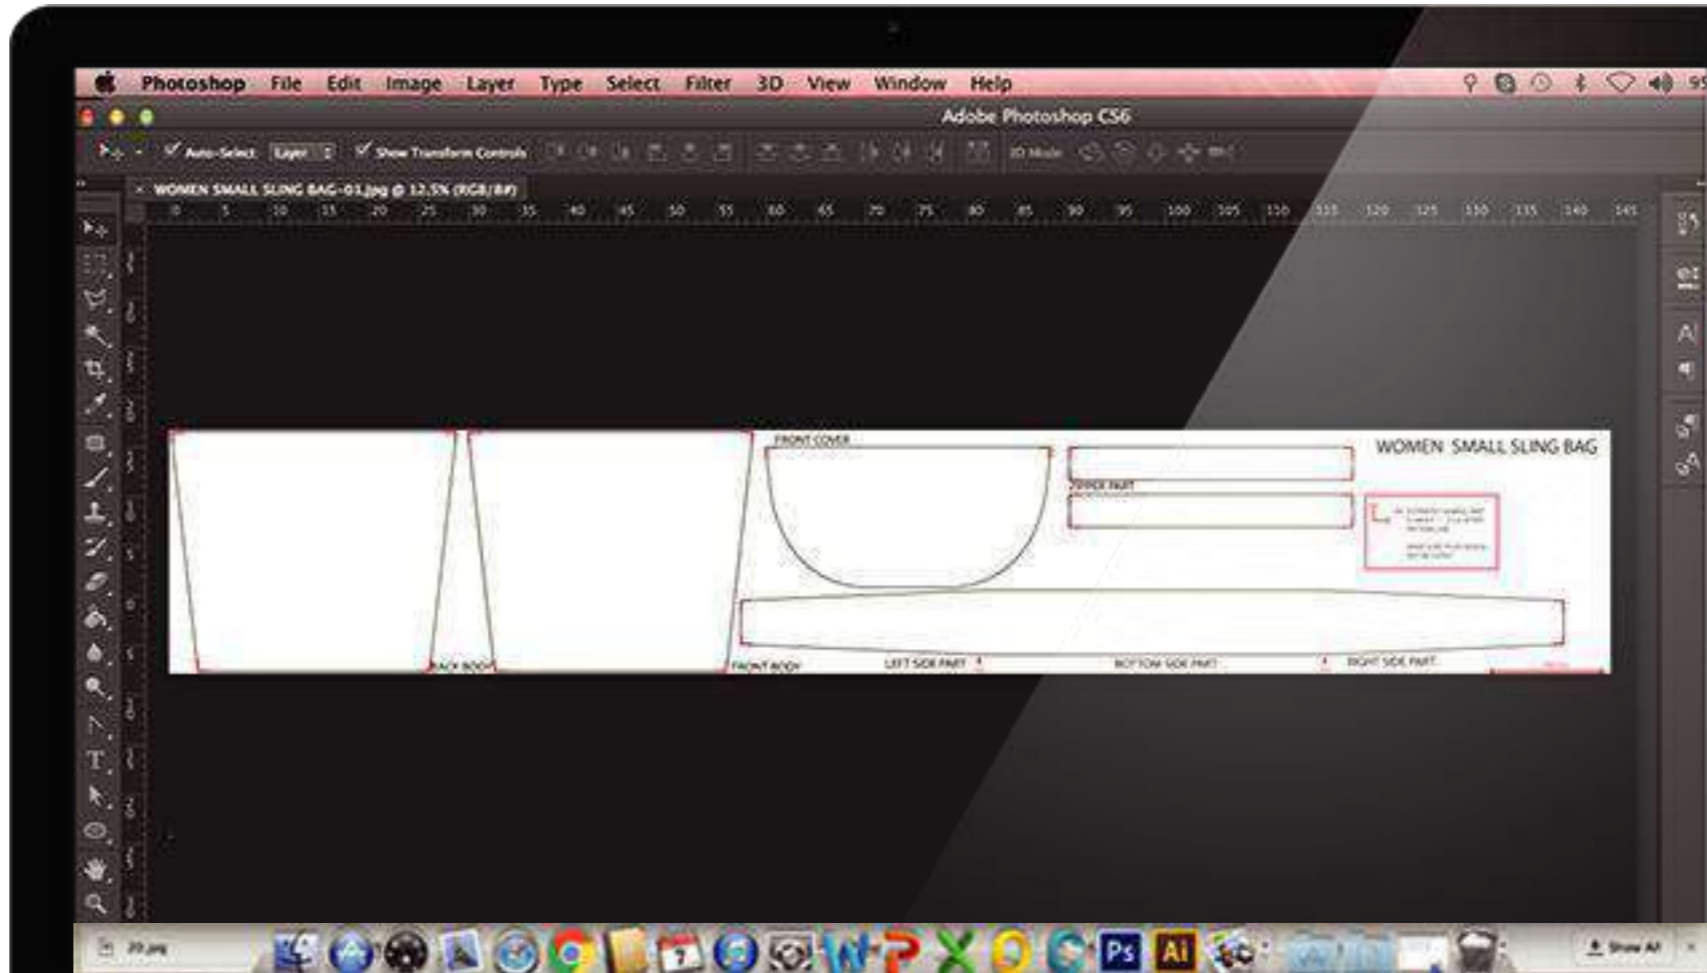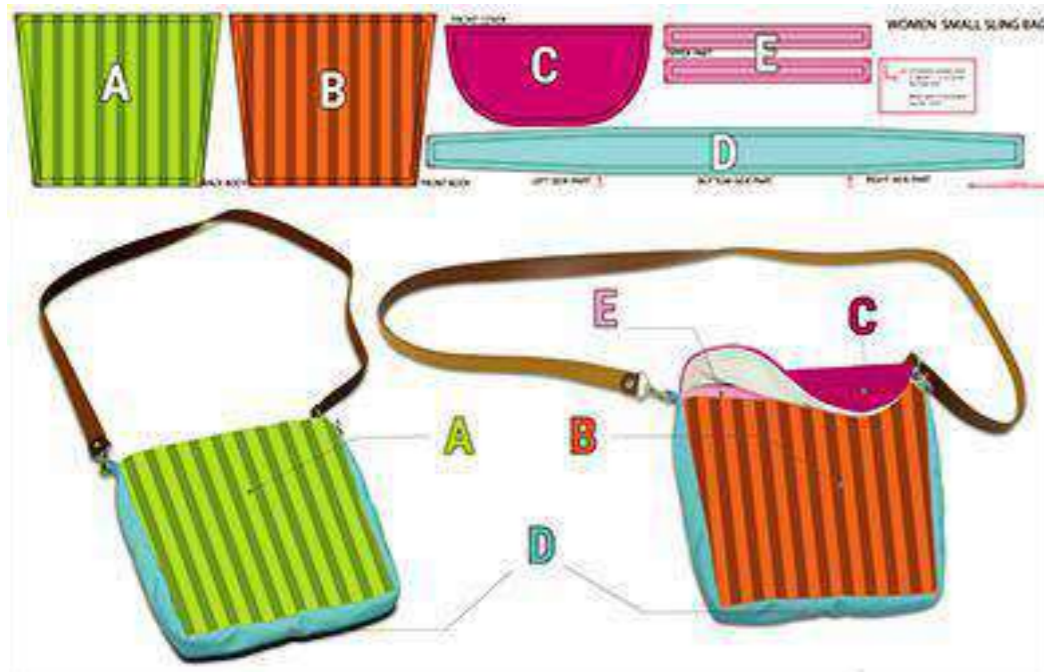

HOW TO

PUT your design into a fullprint pattern




ESTIMATED SEWING PART
IS ABOUT 1 - 2 Cm AFTER
PATTERN LINE

MAKE SURE YOUR DESIGN
NOT BE CUTED

To avoid your design is being cutted/ distructed, follow these steps.

1. Enlarge the area using **Zoom tool** [Q]- at left side so you can see the red at the corner.

2. Connect the red mark and you may see the **Red Area** as an estimated **sewing area** and **Green Area** is the estimated **your design area**.


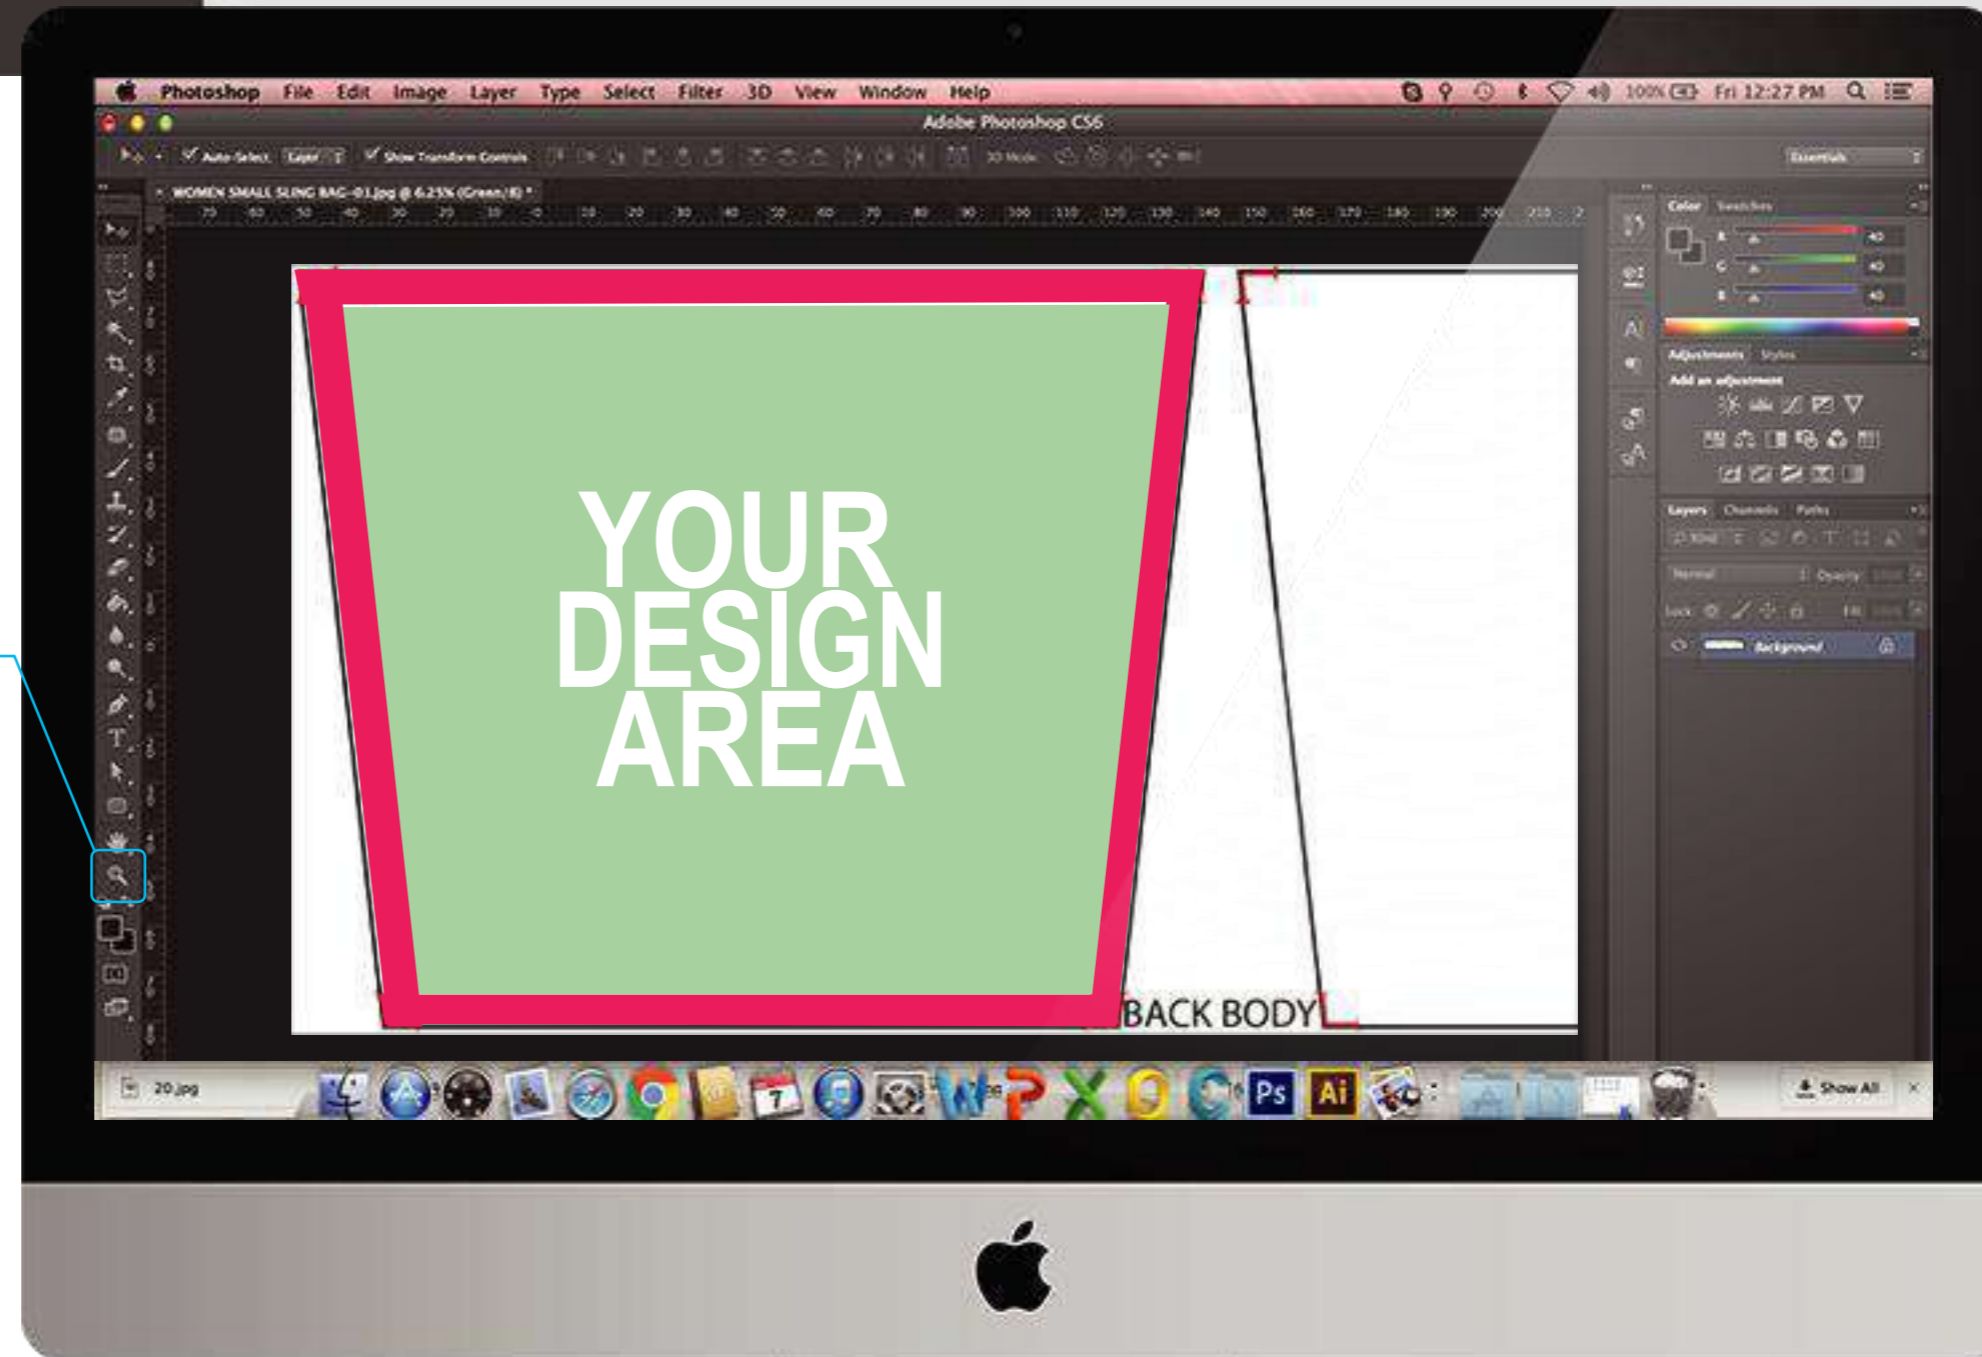


HOW TO

PUT your design into a fullprint pattern

Open the pattern file and your design file on Adobe Photoshop.


1. Go to **Window** menu on the menu bar, select **Arrange** then **Title All Vertically** (**Window > Arrange > Title All Vertically**)

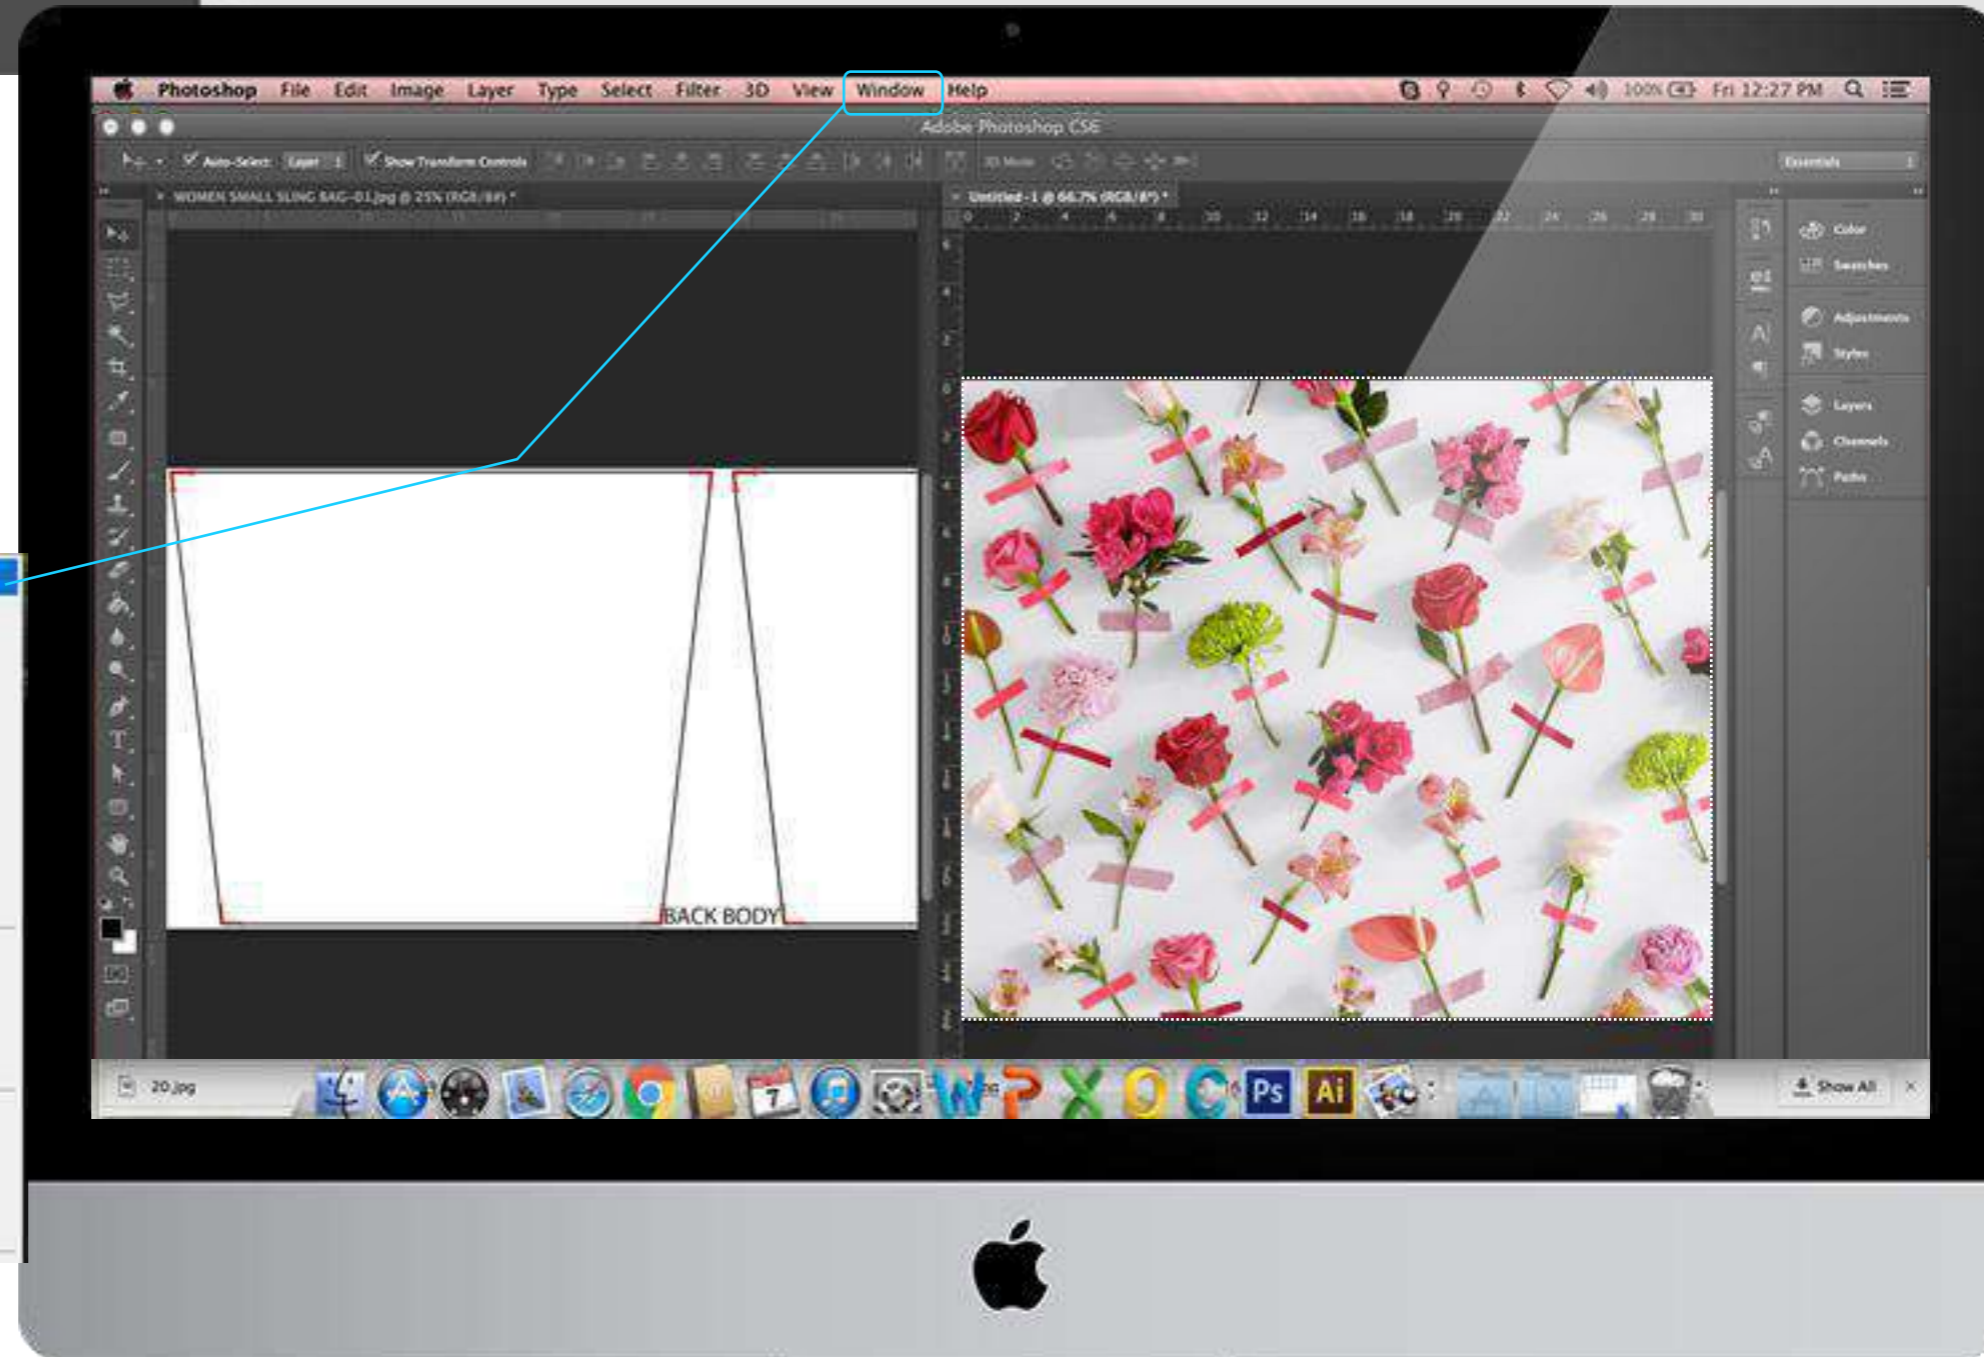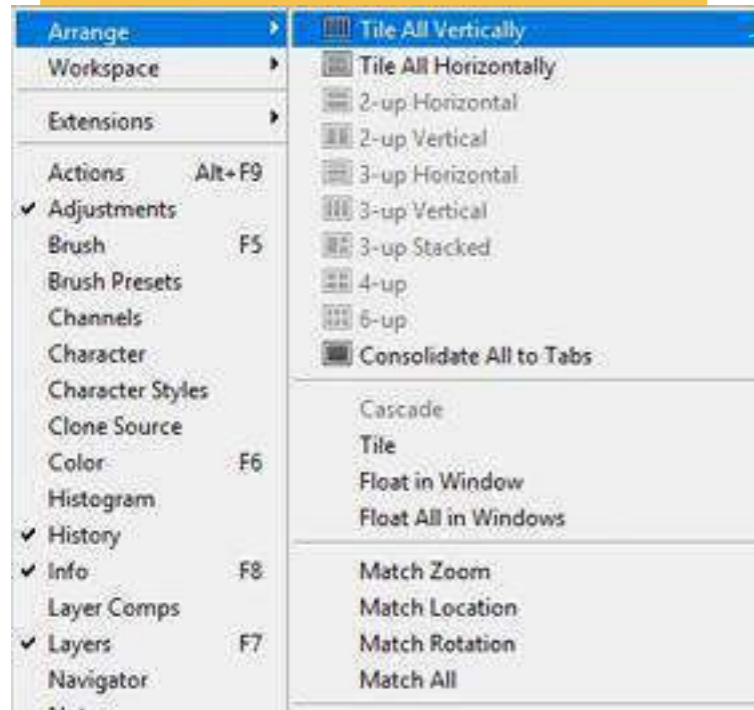

HOW TO

PUT your design into a fullprint pattern

2. From your Design file, go to **Select** menu on menu bar then choose All (**Select > All**)

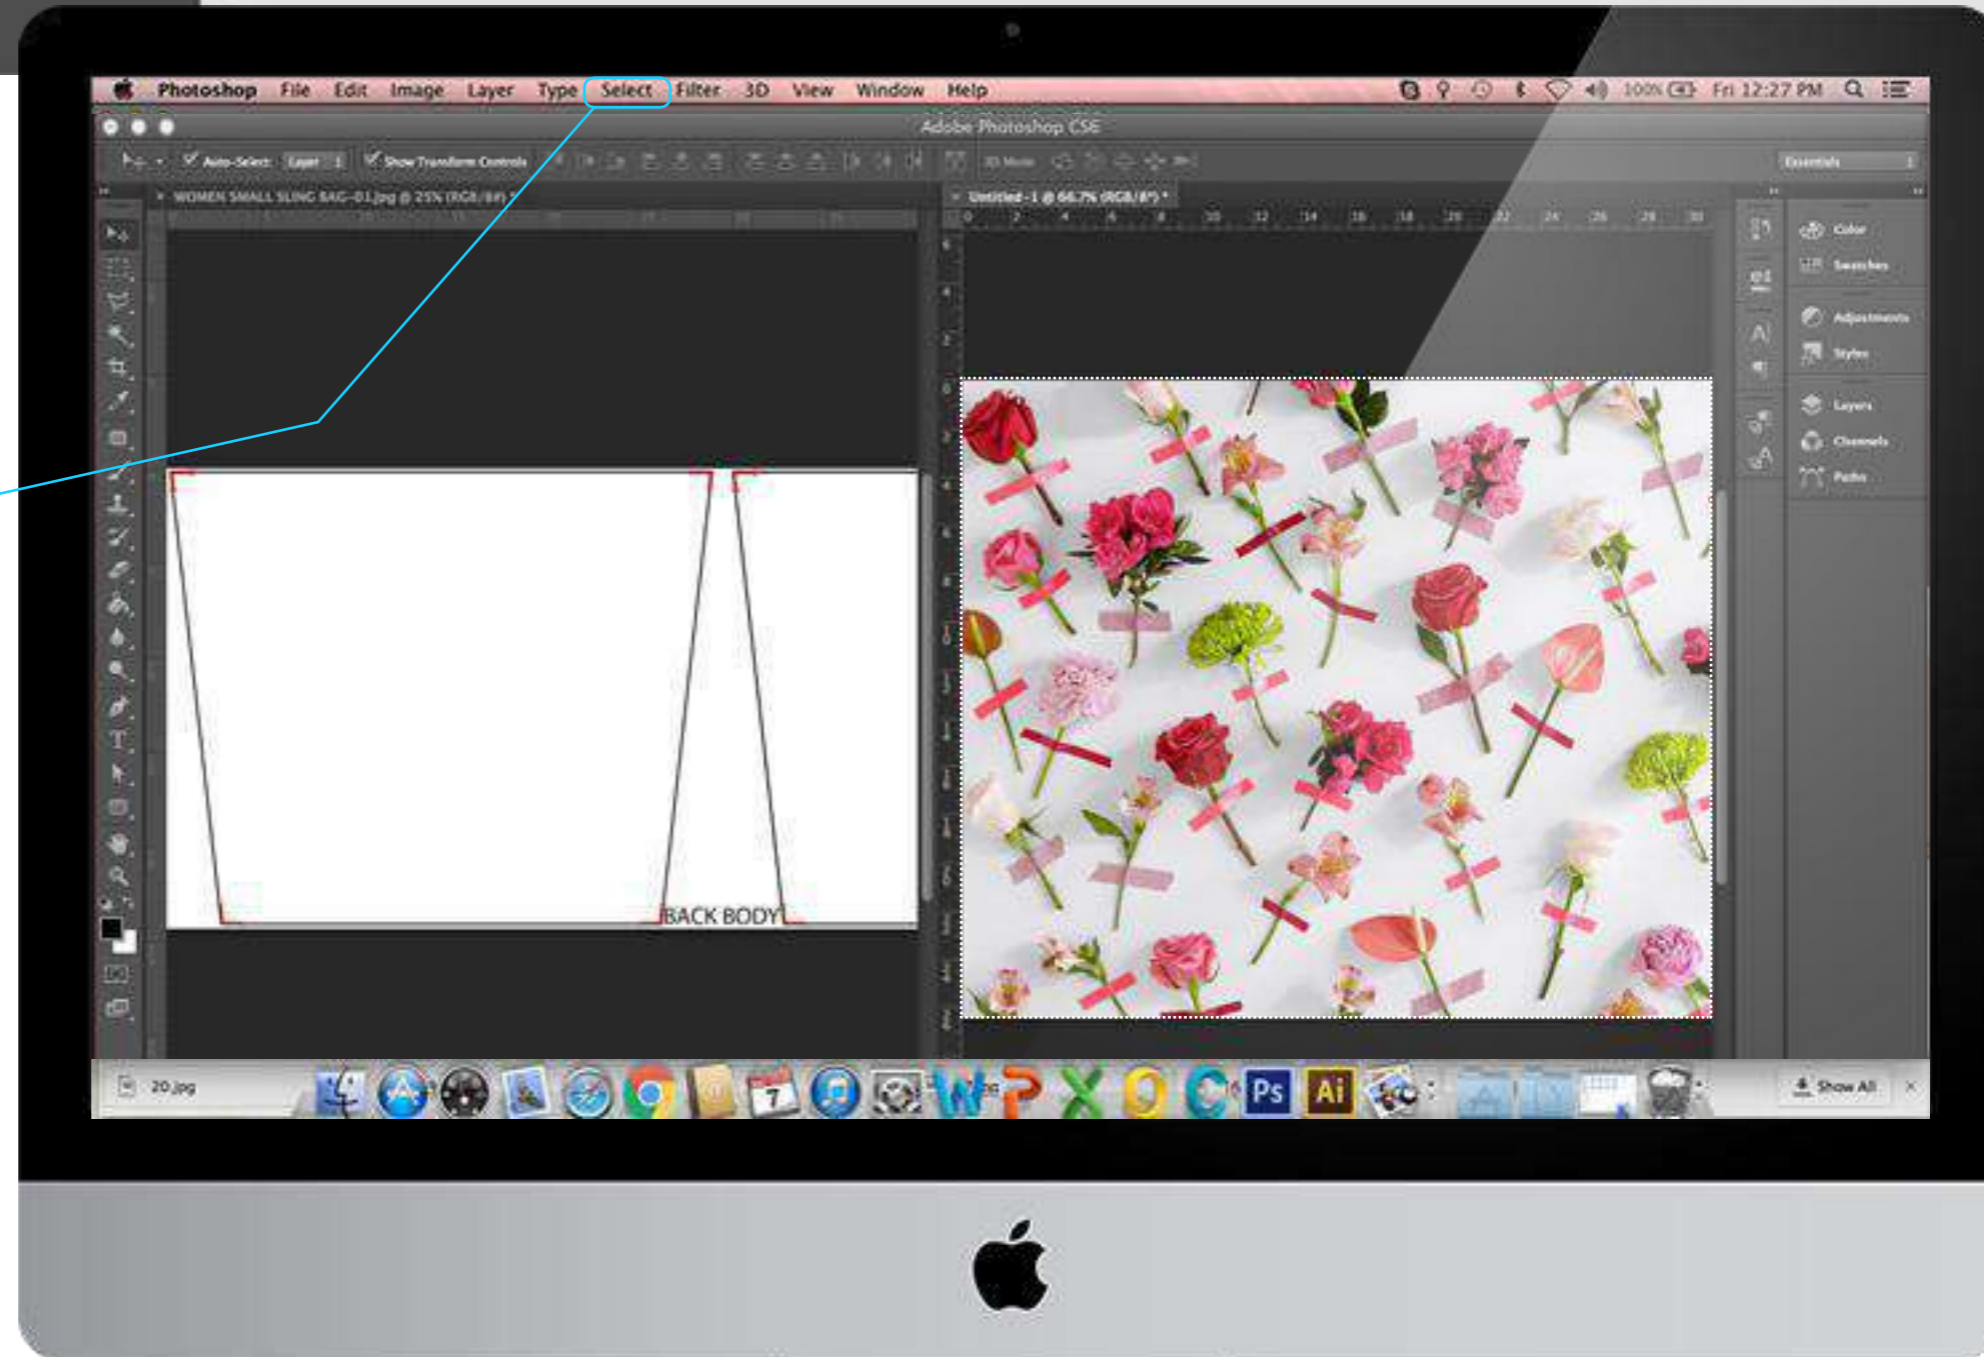


HOW TO

PUT your design into a fullprint pattern

3. Goto Edit than Copy (Edit > Copy)



Undo Copy Pixels	Ctrl+Z
Step Forward	Shift+Ctrl+Z
Step Backward	Alt+Ctrl+Z
Fade...	Shift+Ctrl+F
Cut	Ctrl+X
Copy	Ctrl+C
Copy Merged	Shift+Ctrl+C
Paste	Ctrl+V
Paste Special	
Clear	
Check Spelling...	
Find and Replace Text...	
Fill...	Shift+F5
Stroke...	
Content-Aware Scale	Alt+Shift+Ctrl+C
Puppet Warp	
Free Transform	Ctrl+T

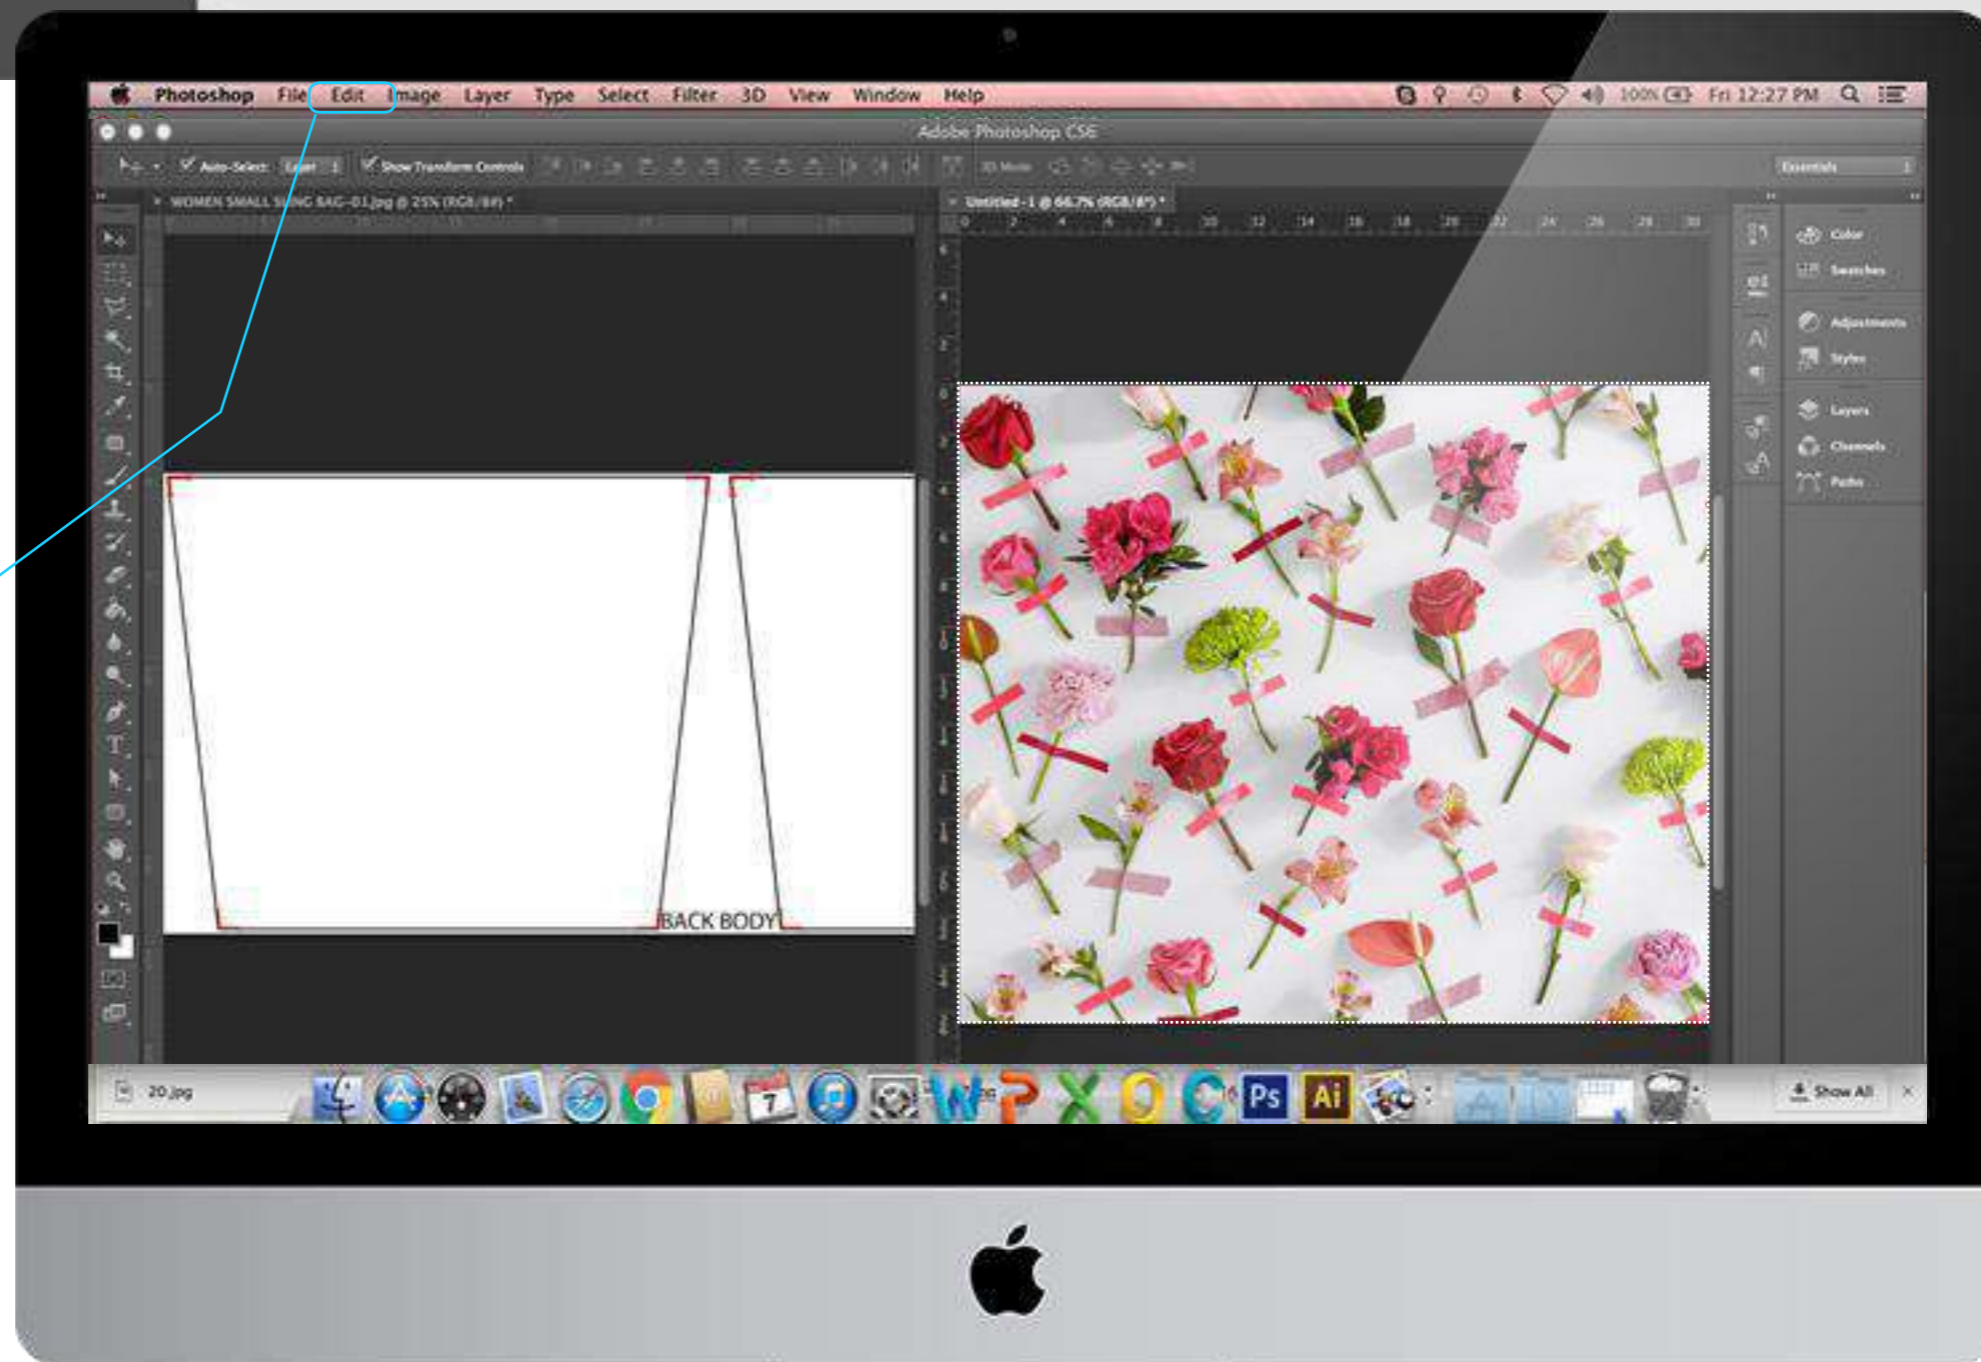

HOW TO

PUT your design into a fullprint pattern



4. On the pattern file window, use the **Magic Wand Tool** (at tool bar on the left side) then left-click inside the part you want to work with

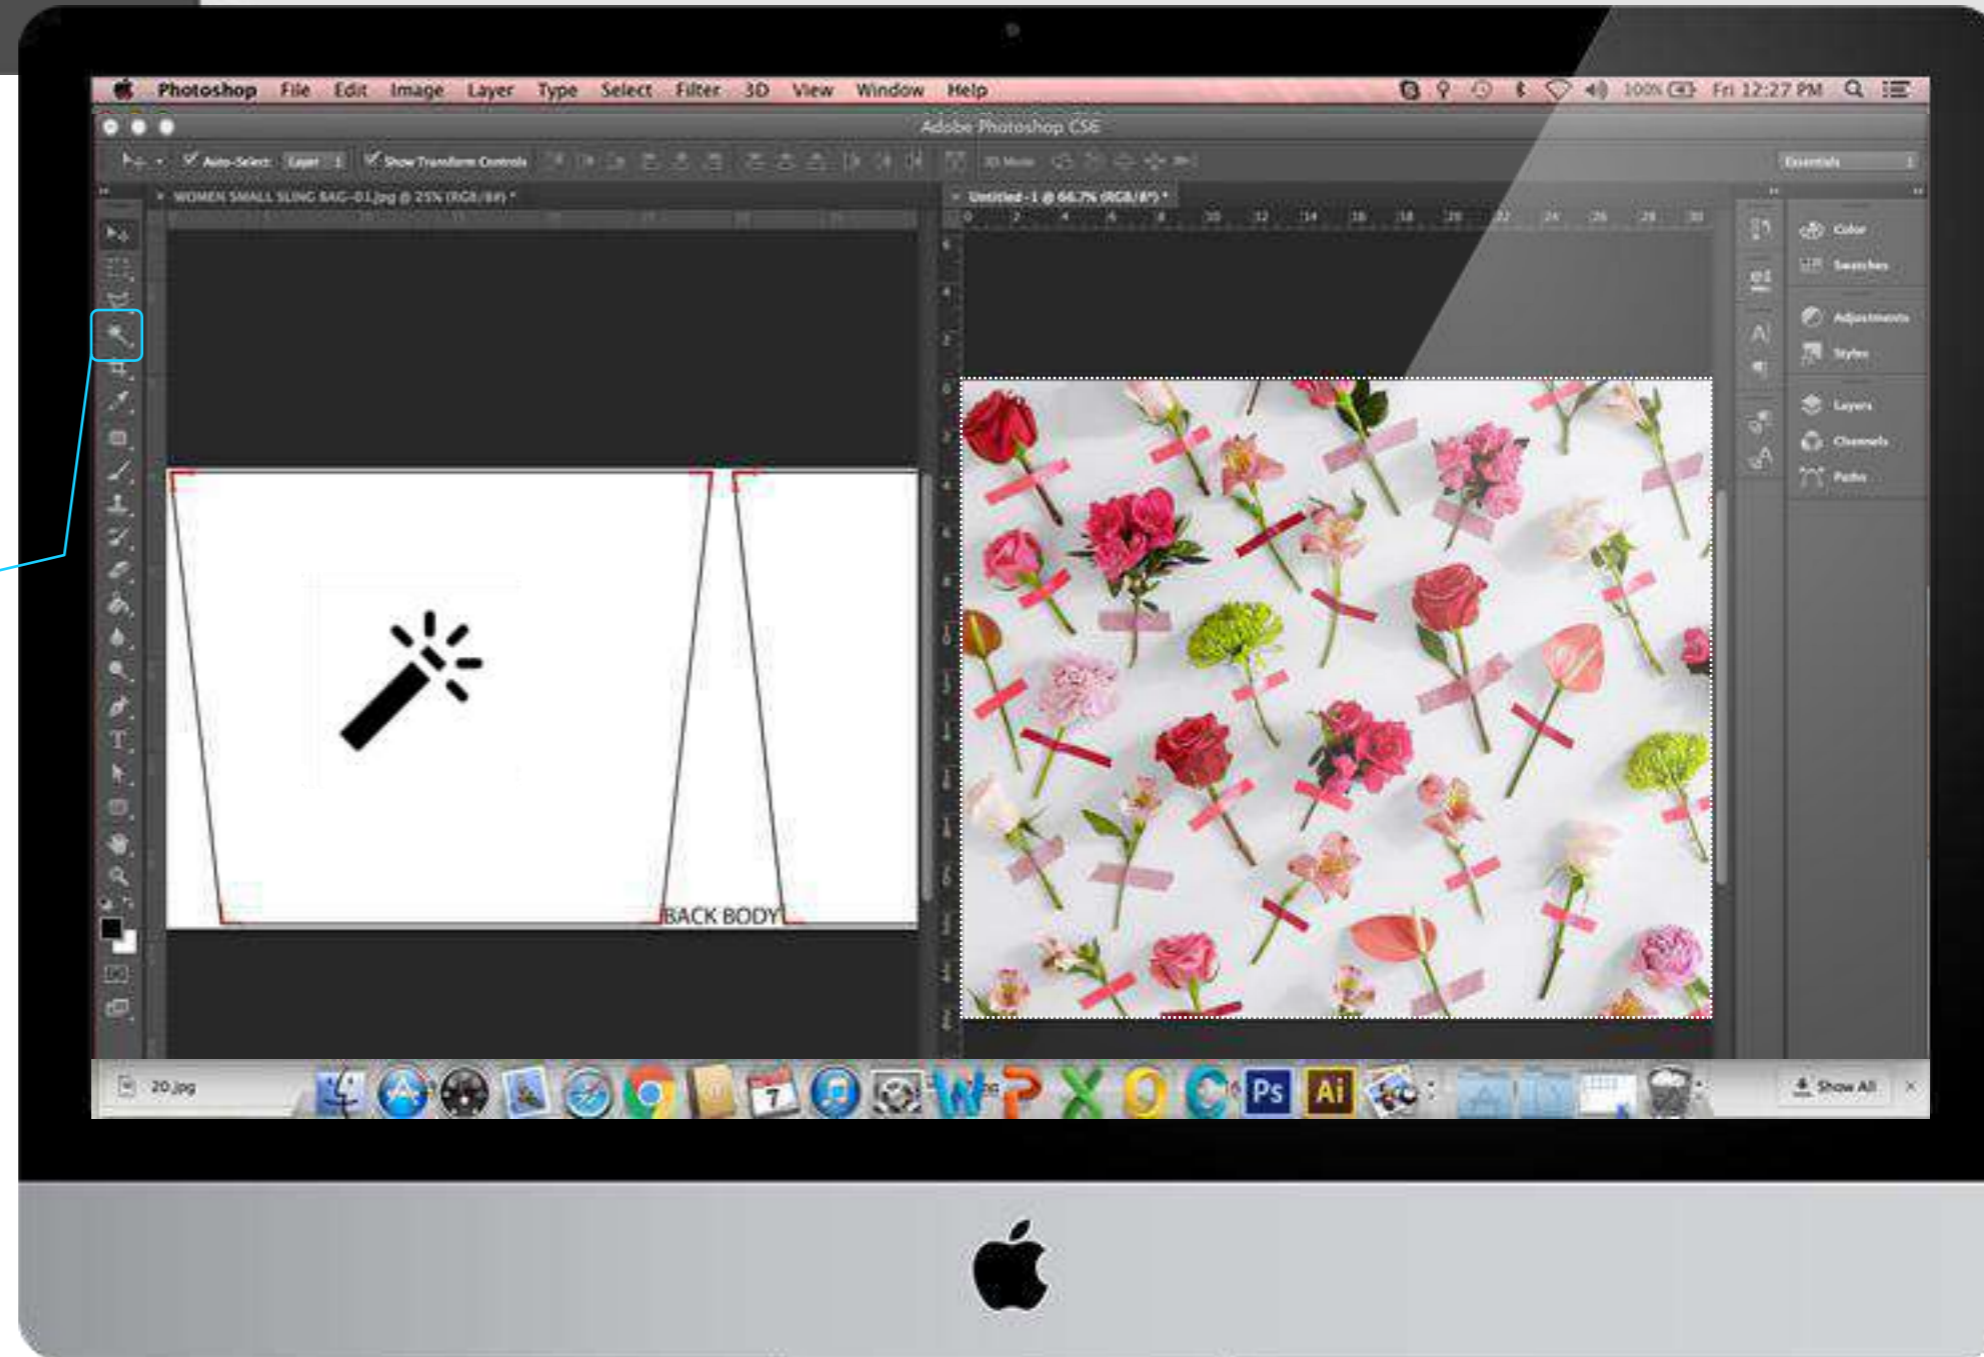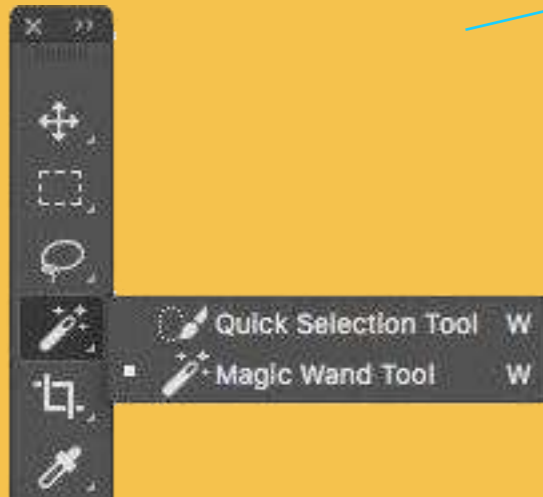

HOW TO

PUT your design into a fullprint pattern


5. Go to **Edit** from menu bar then select **Paste Special** and **Paste Into** (**Edit > Paste Special > Paste Into**). You may adjust the pasted image by dragging it.

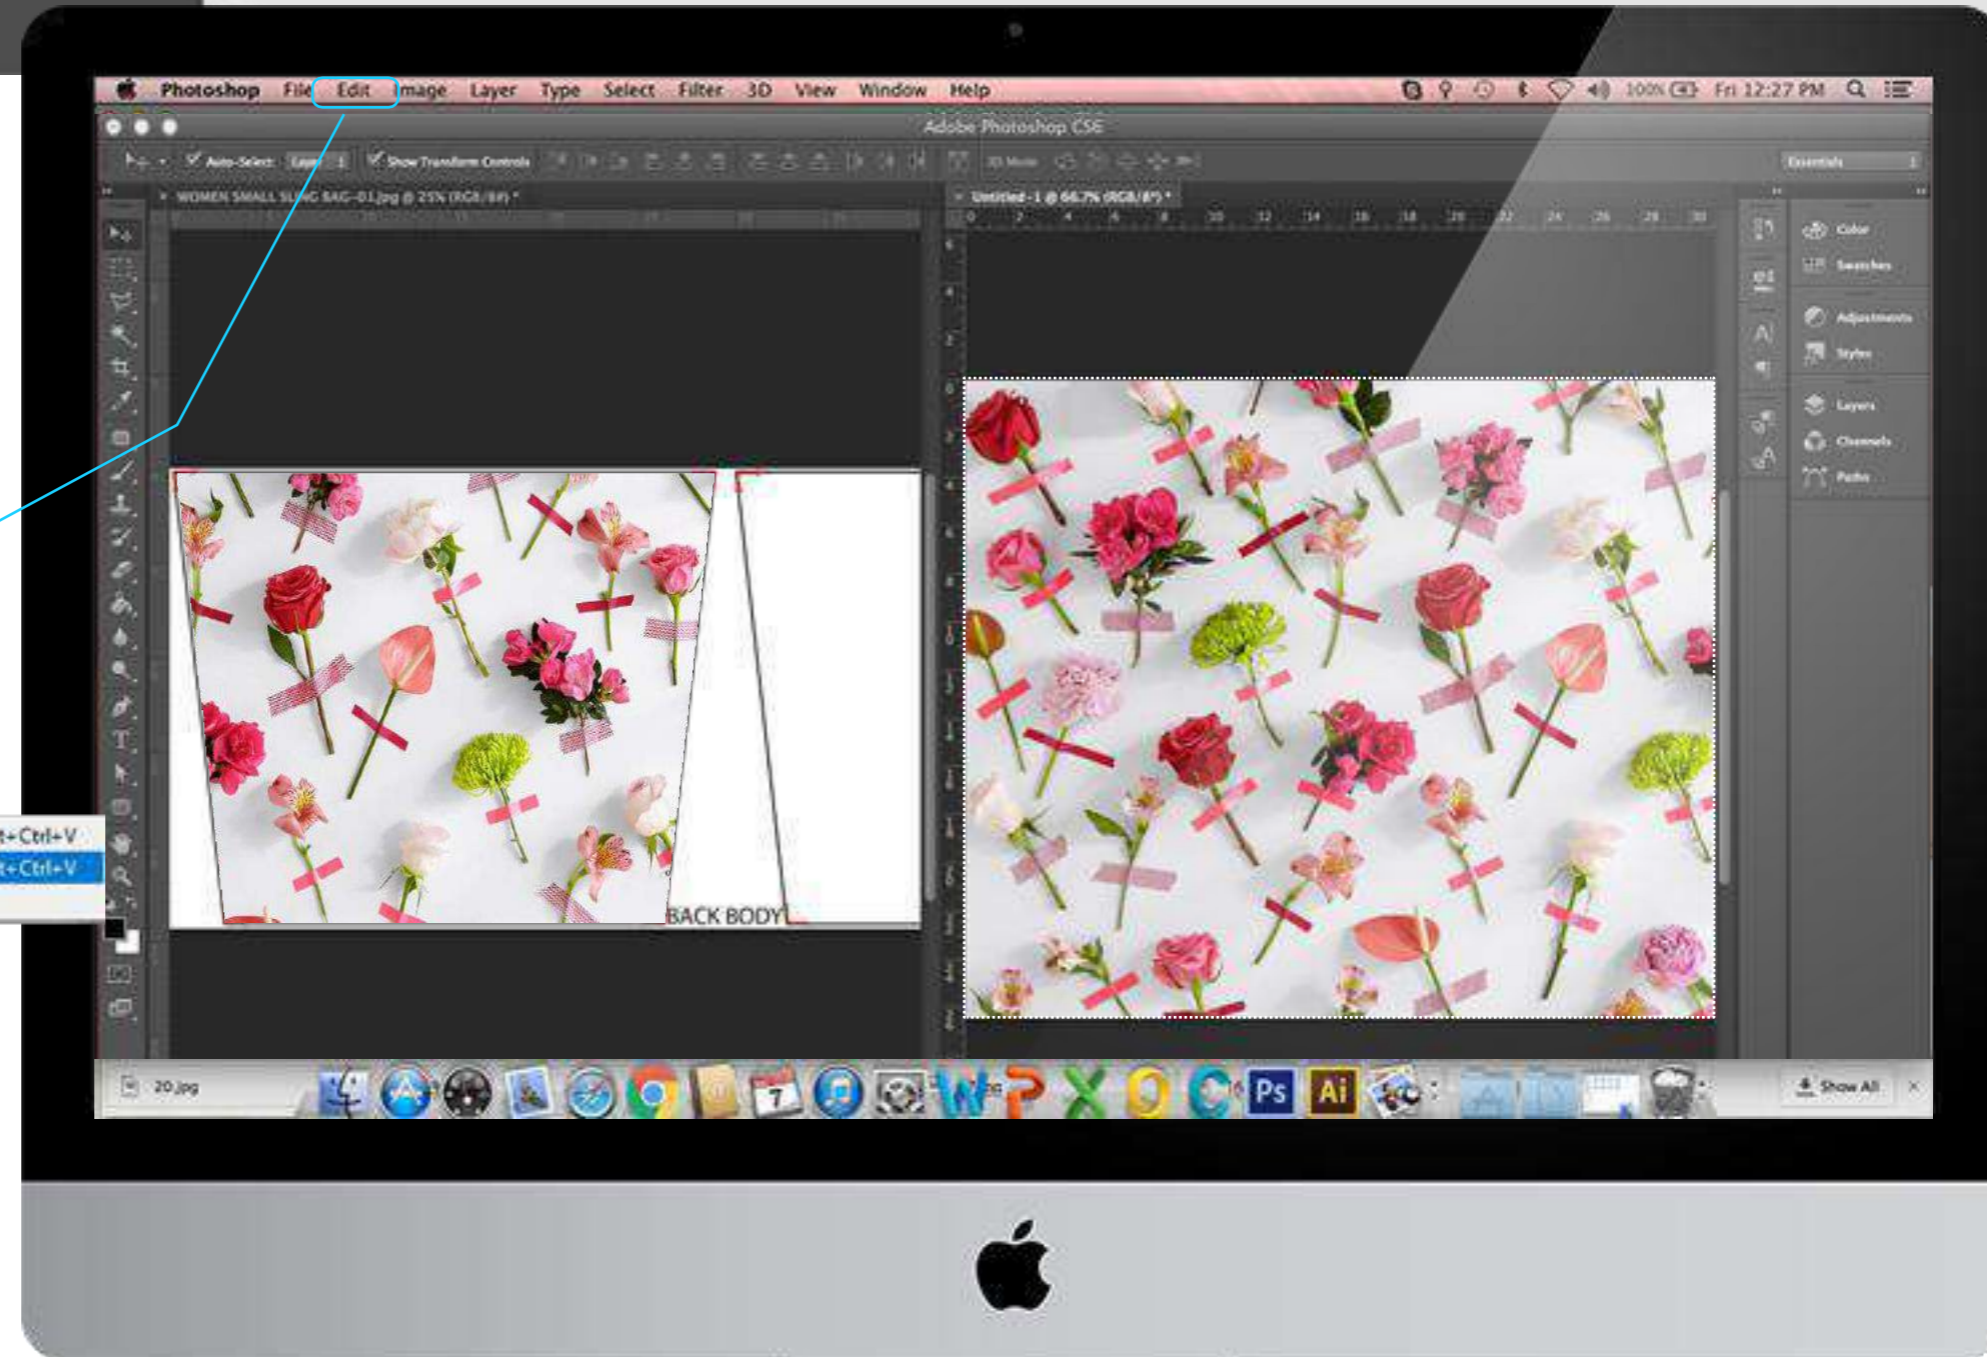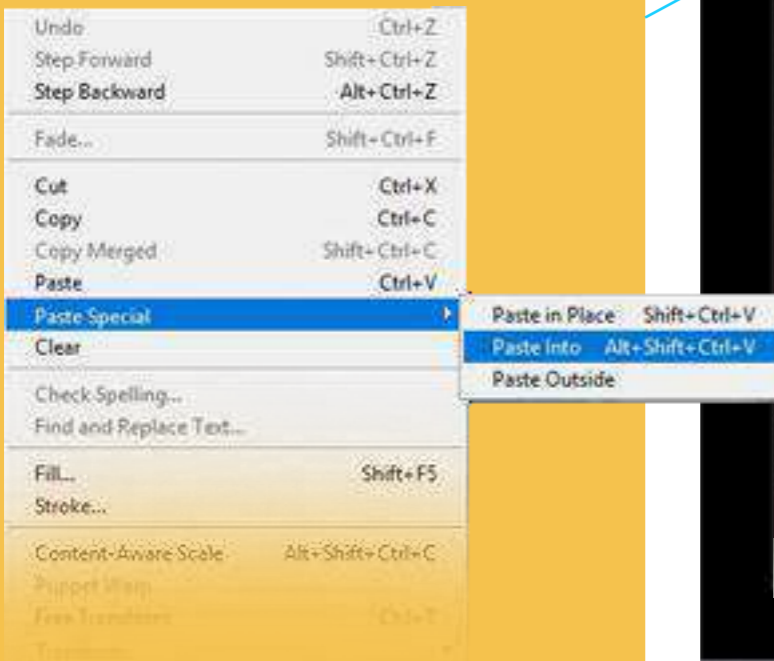

FILLING PATTERN


HOW TO
PUT YOUR DESIGN INTO A FULLPRINT PATTERN

6. Before continue another part you should click **background layer** at layer list.

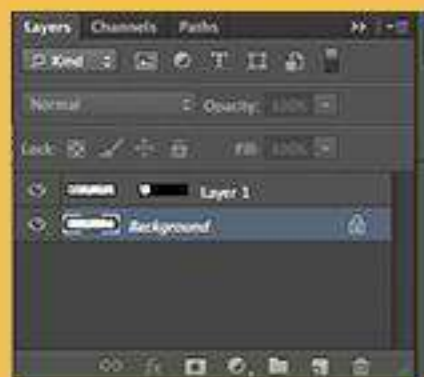

If layer list did not show you can easily press **F7** button on your keyboard or go to menu bar **Window > Layer**

7. You can repeat selecting part by using **Magic Wand** and after you can **Paste Special** the design until all part filled.

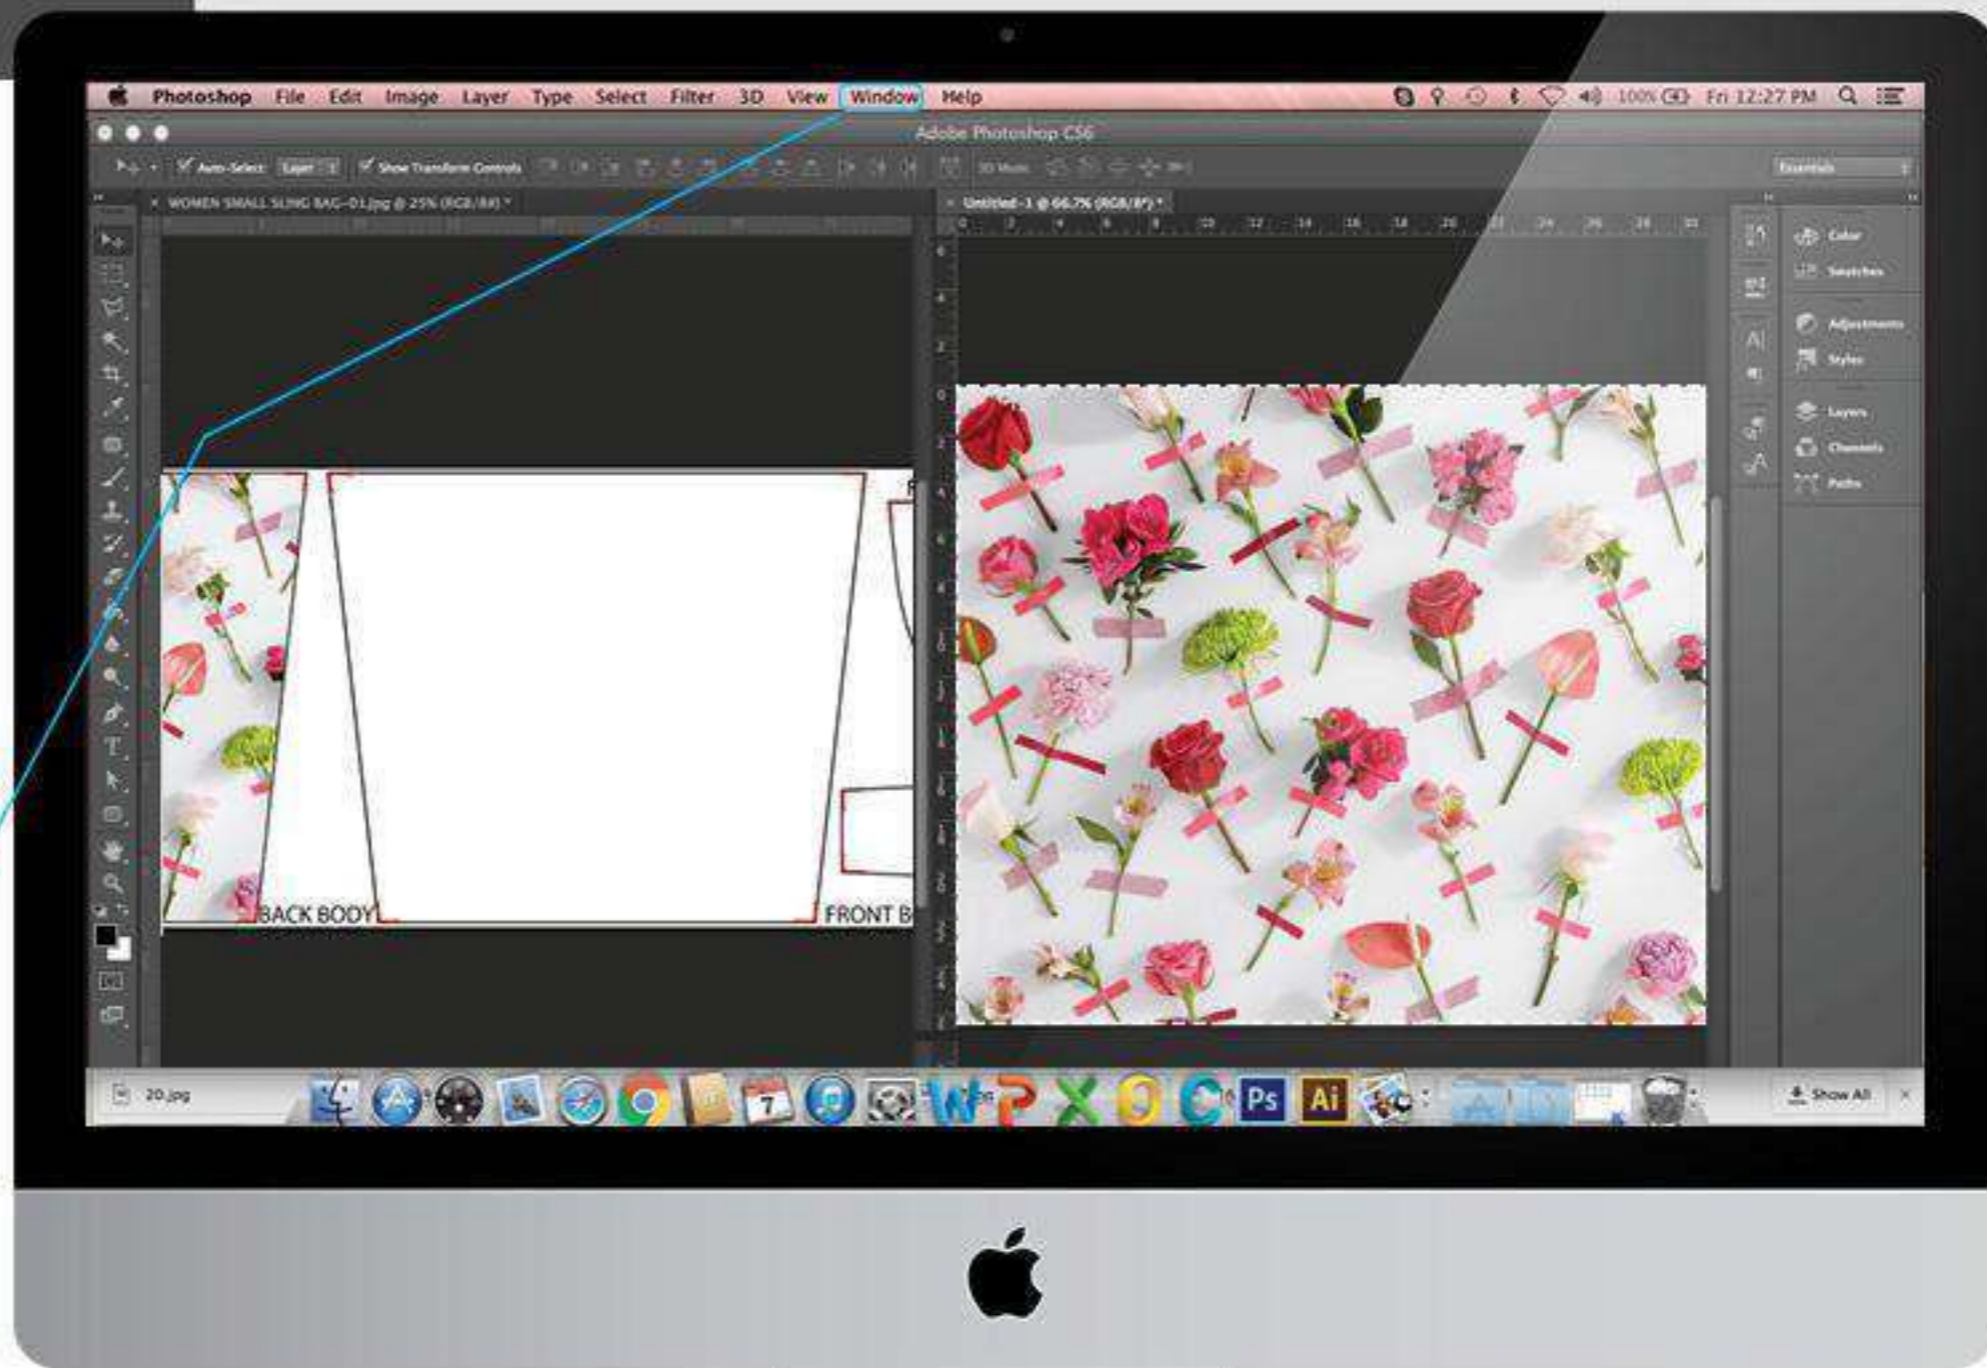

SAVING FILE

HOW TO PUT YOUR DESIGN INTO A FULLPRINT PATTERN

As the final step you can Save your design by clicking from the menu bar **File > Save As**

New...	Ctrl+N
Open...	Ctrl+O
Browse in Bridge...	Alt+Ctrl+O
Browse in Mini Bridge...	
Open As...	Alt+Shift+Ctrl+O
Open as Smart Object...	
Open Recent	
Close	Ctrl+W
Close All	Alt+Ctrl+W
Close and Go to Bridge...	Shift+Ctrl+W
Save	Ctrl+S
Save As...	Shift+Ctrl+S
Check In...	
Save for Web...	Alt+Shift+Ctrl+S
Revert	F12

For the file type change it to **JPG** format.

NOTE:
Minimum **Quality 8 (High)**
Please **NOT** to change **Image Size**.
Always aware of **Cutting/Sewing Part**.

