


WOMEN TURTLE NECK SLEEVELESS PATTERN AND GUIDANCE

HOW TO
PUT YOUR DESIGN INTO A FULLPRINT PATTERN

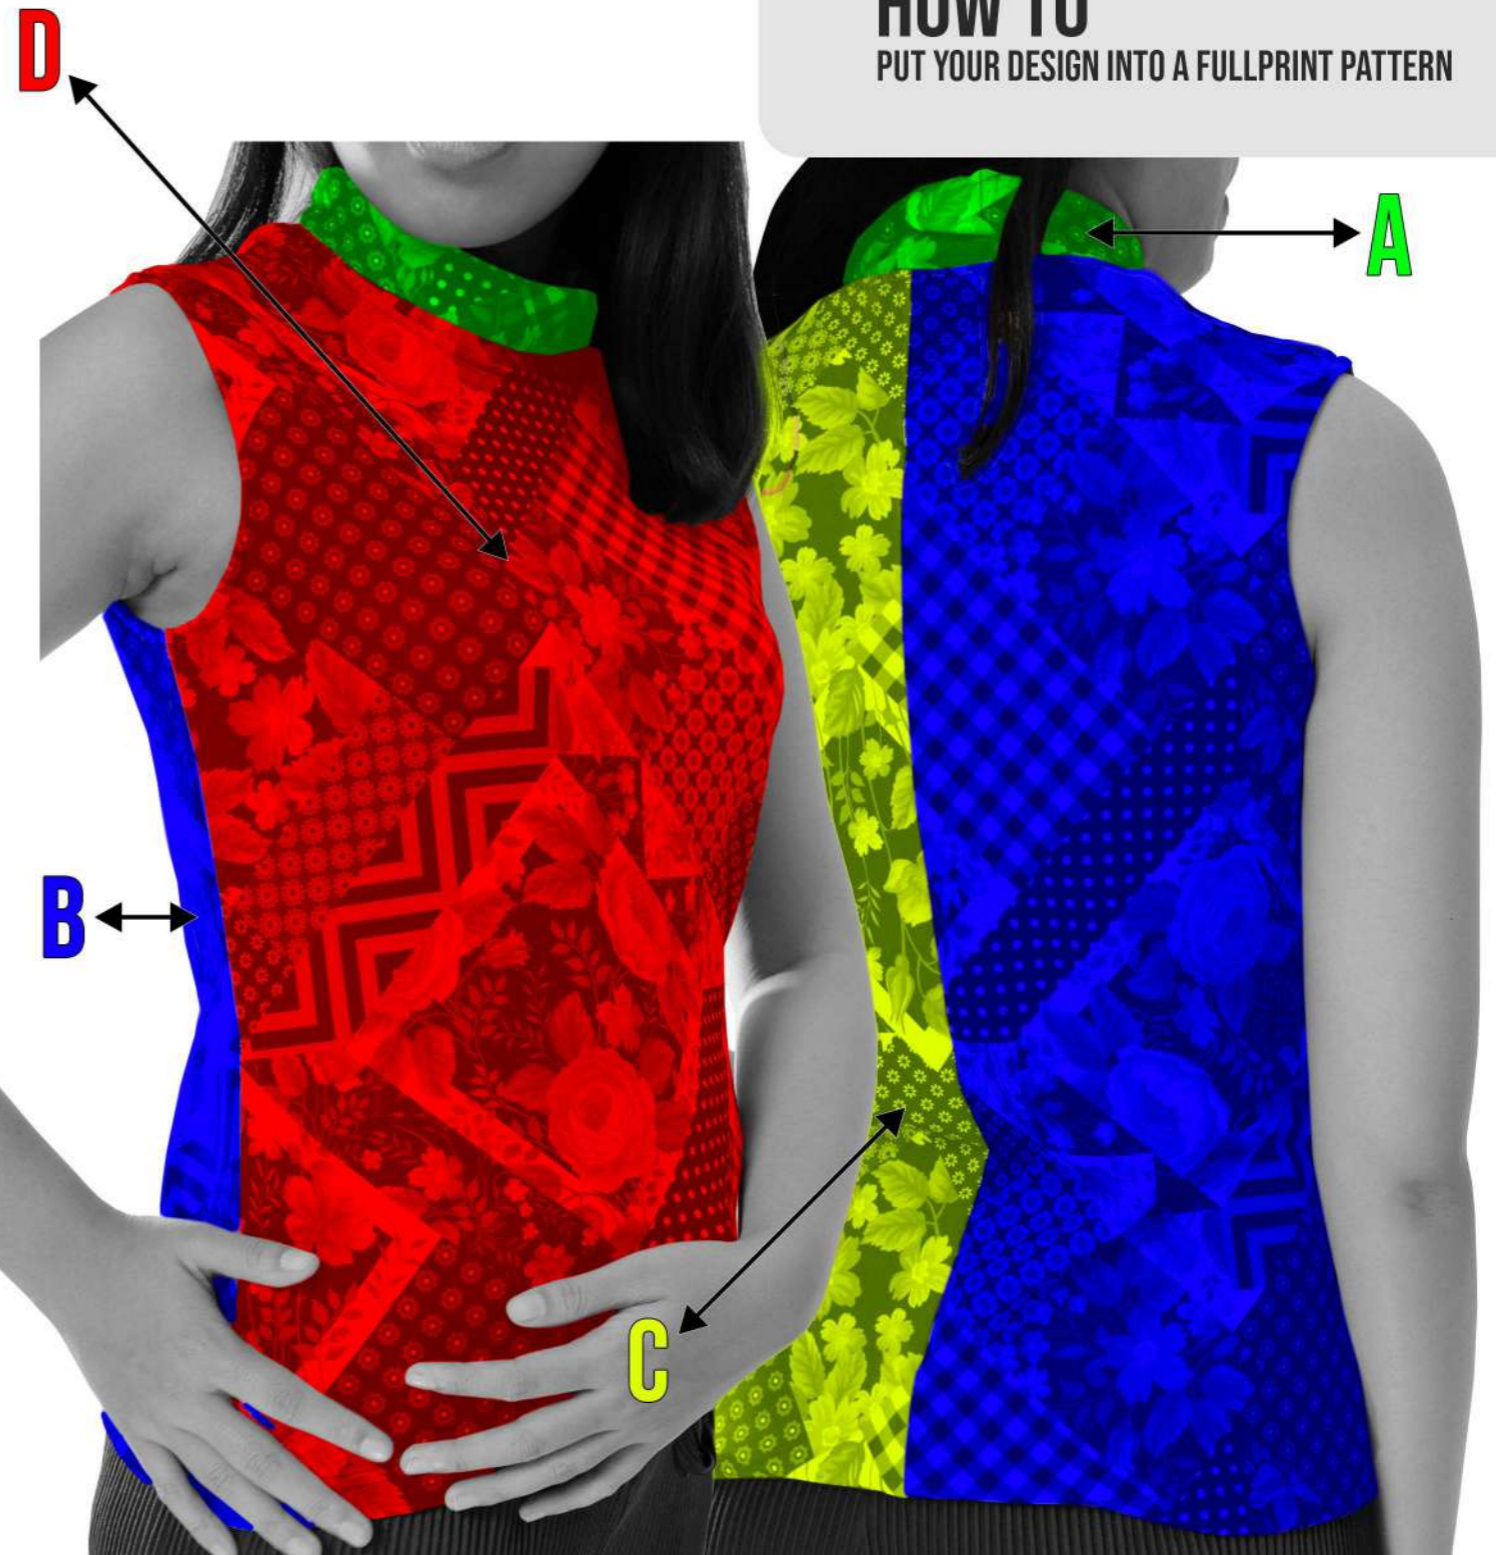

-> SEWING LINE APPEAR ▲ UPPER SIDE
 L SEWING FOLD ESTIMATED 1-2 CM H FOLD



ILLUSTRATED

HOW TO PUT YOUR DESIGN INTO A FULLPRINT PATTERN

Open the pattern file which you downloaded from the product page (please only use the pattern according to the size that you want to order) on Adobe Photoshop. Illustration is using Adobe Photoshop

HOW TO CREATE WOMAN SMALL SLING BAG WITH YOUR OWN DESIGN



Need your attention:

1. Please pay attention to pattern part position.
2. Black line is fabric/pattern cutting line.
3. Red mark on every corner is a sewing/ folding line



ESTIMATED SEWING PART IS ABOUT 1 - 2 Cm AFTER PATTERN LINE

MAKE SURE YOUR DESIGN NOT BE CUTED



Guidelines

HOW TO PUT YOUR DESIGN INTO A FULLPRINT PATTERN


 ESTIMATED SEWING PART
IS ABOUT 1 - 2 Cm AFTER
PATTERN LINE

MAKE SURE YOUR DESIGN
NOT BE CUTED

To avoid your design is being cutted/ distructed, follow these steps.

1. Enlarge the area using **Zoom tool** [] at left side so you can see the red at the corner.

2. Connect the red mark and you may see the **Red Area** as an estimated **sewing area** and **Green Area** is the estimated **your design area**.

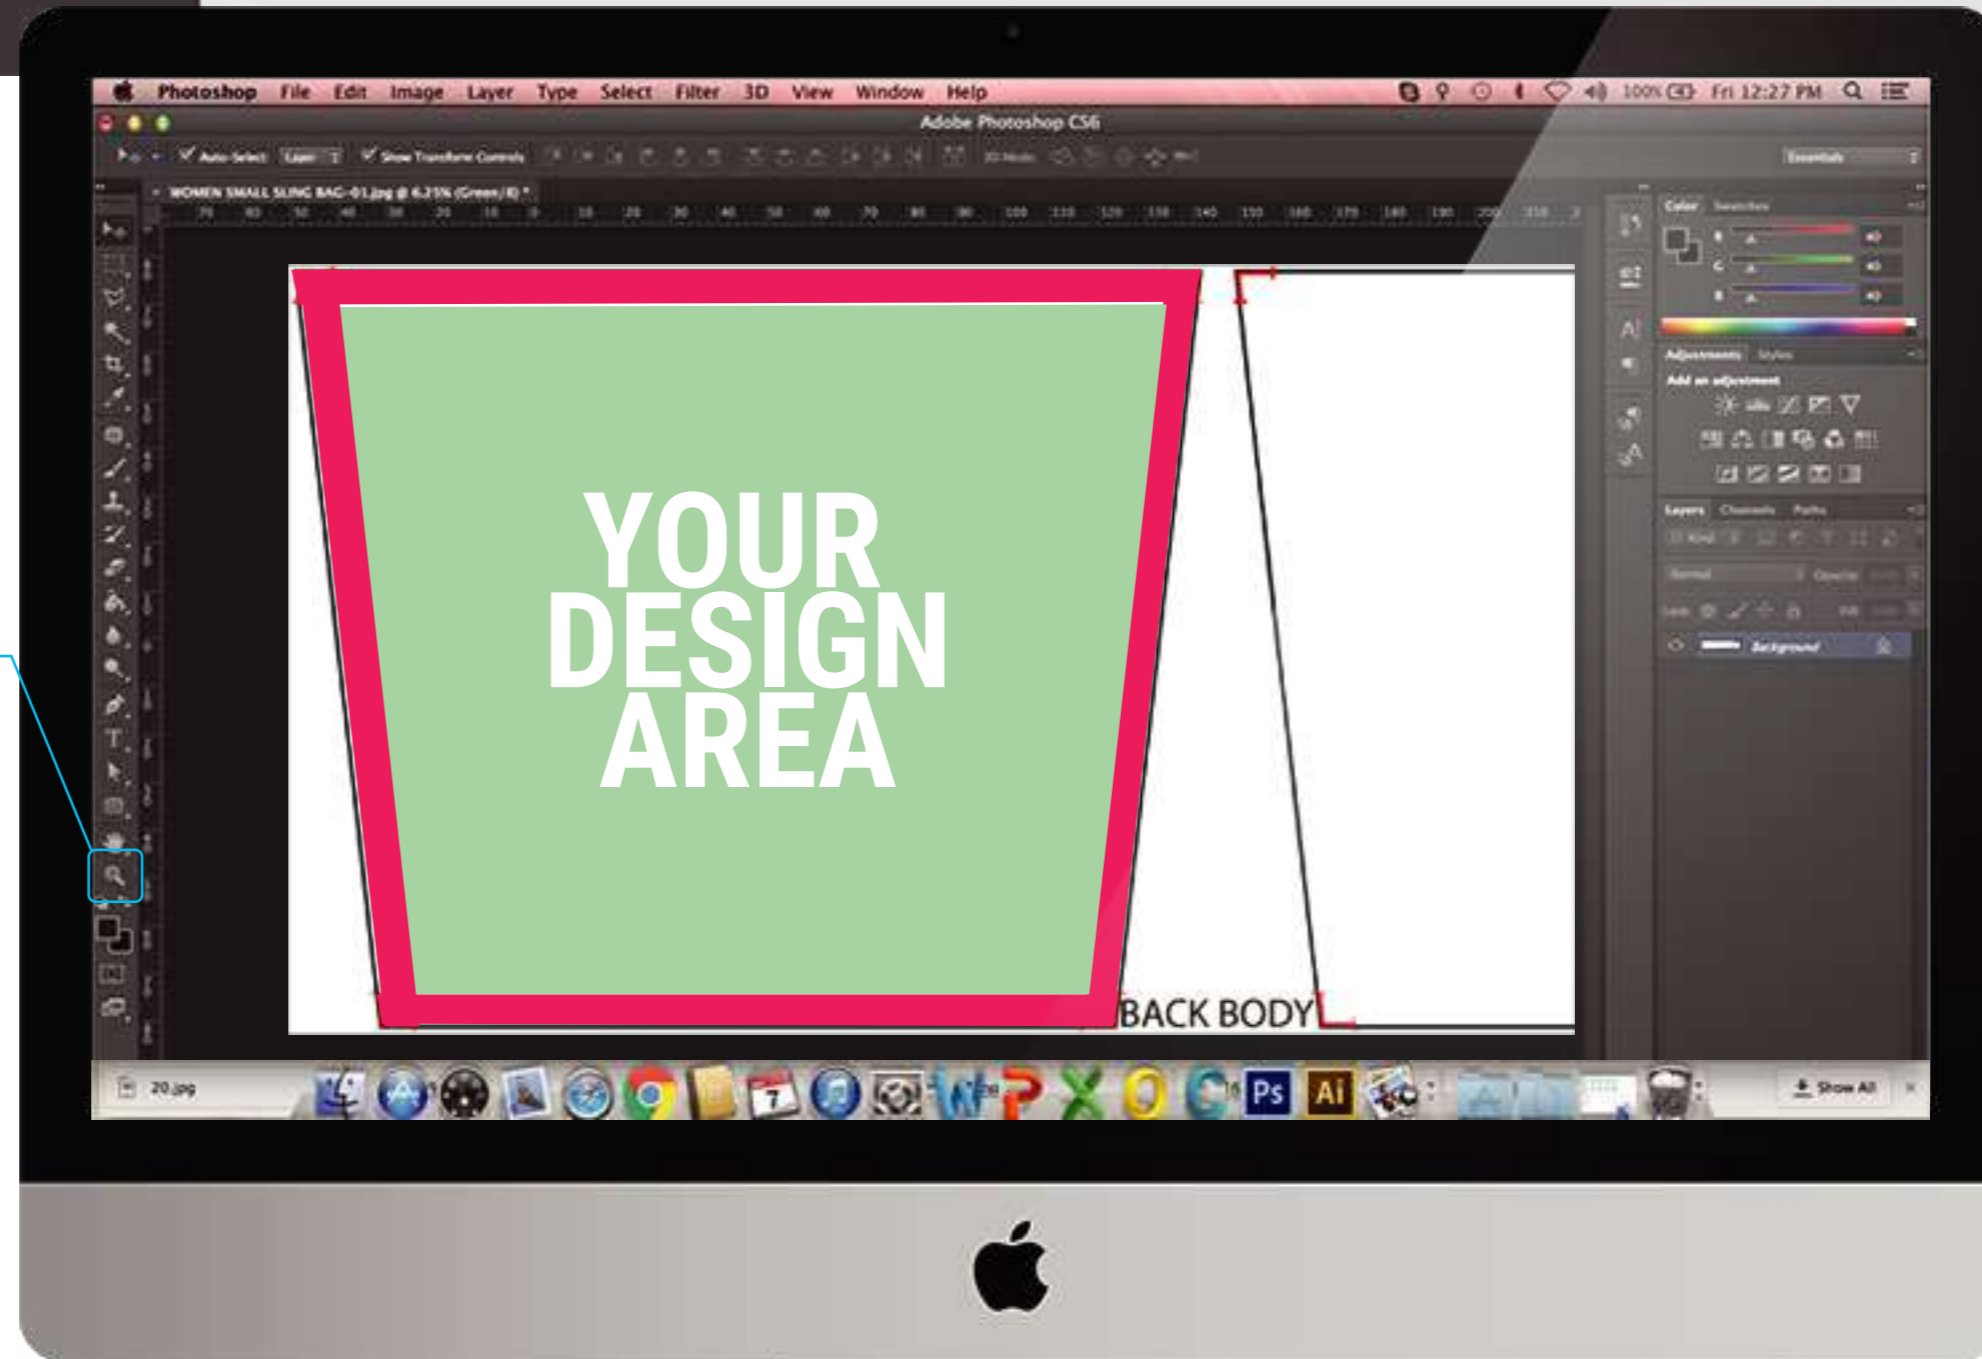


FILLING PATTERN

HOW TO PUT YOUR DESIGN INTO A FULLPRINT PATTERN

Open the pattern file and your design file on Adobe Photoshop.

1. Go to **Window** menu on the menu bar, select **Arrange** then **Title All Vertically** (**Window > Arrange > Title All Vertically**)

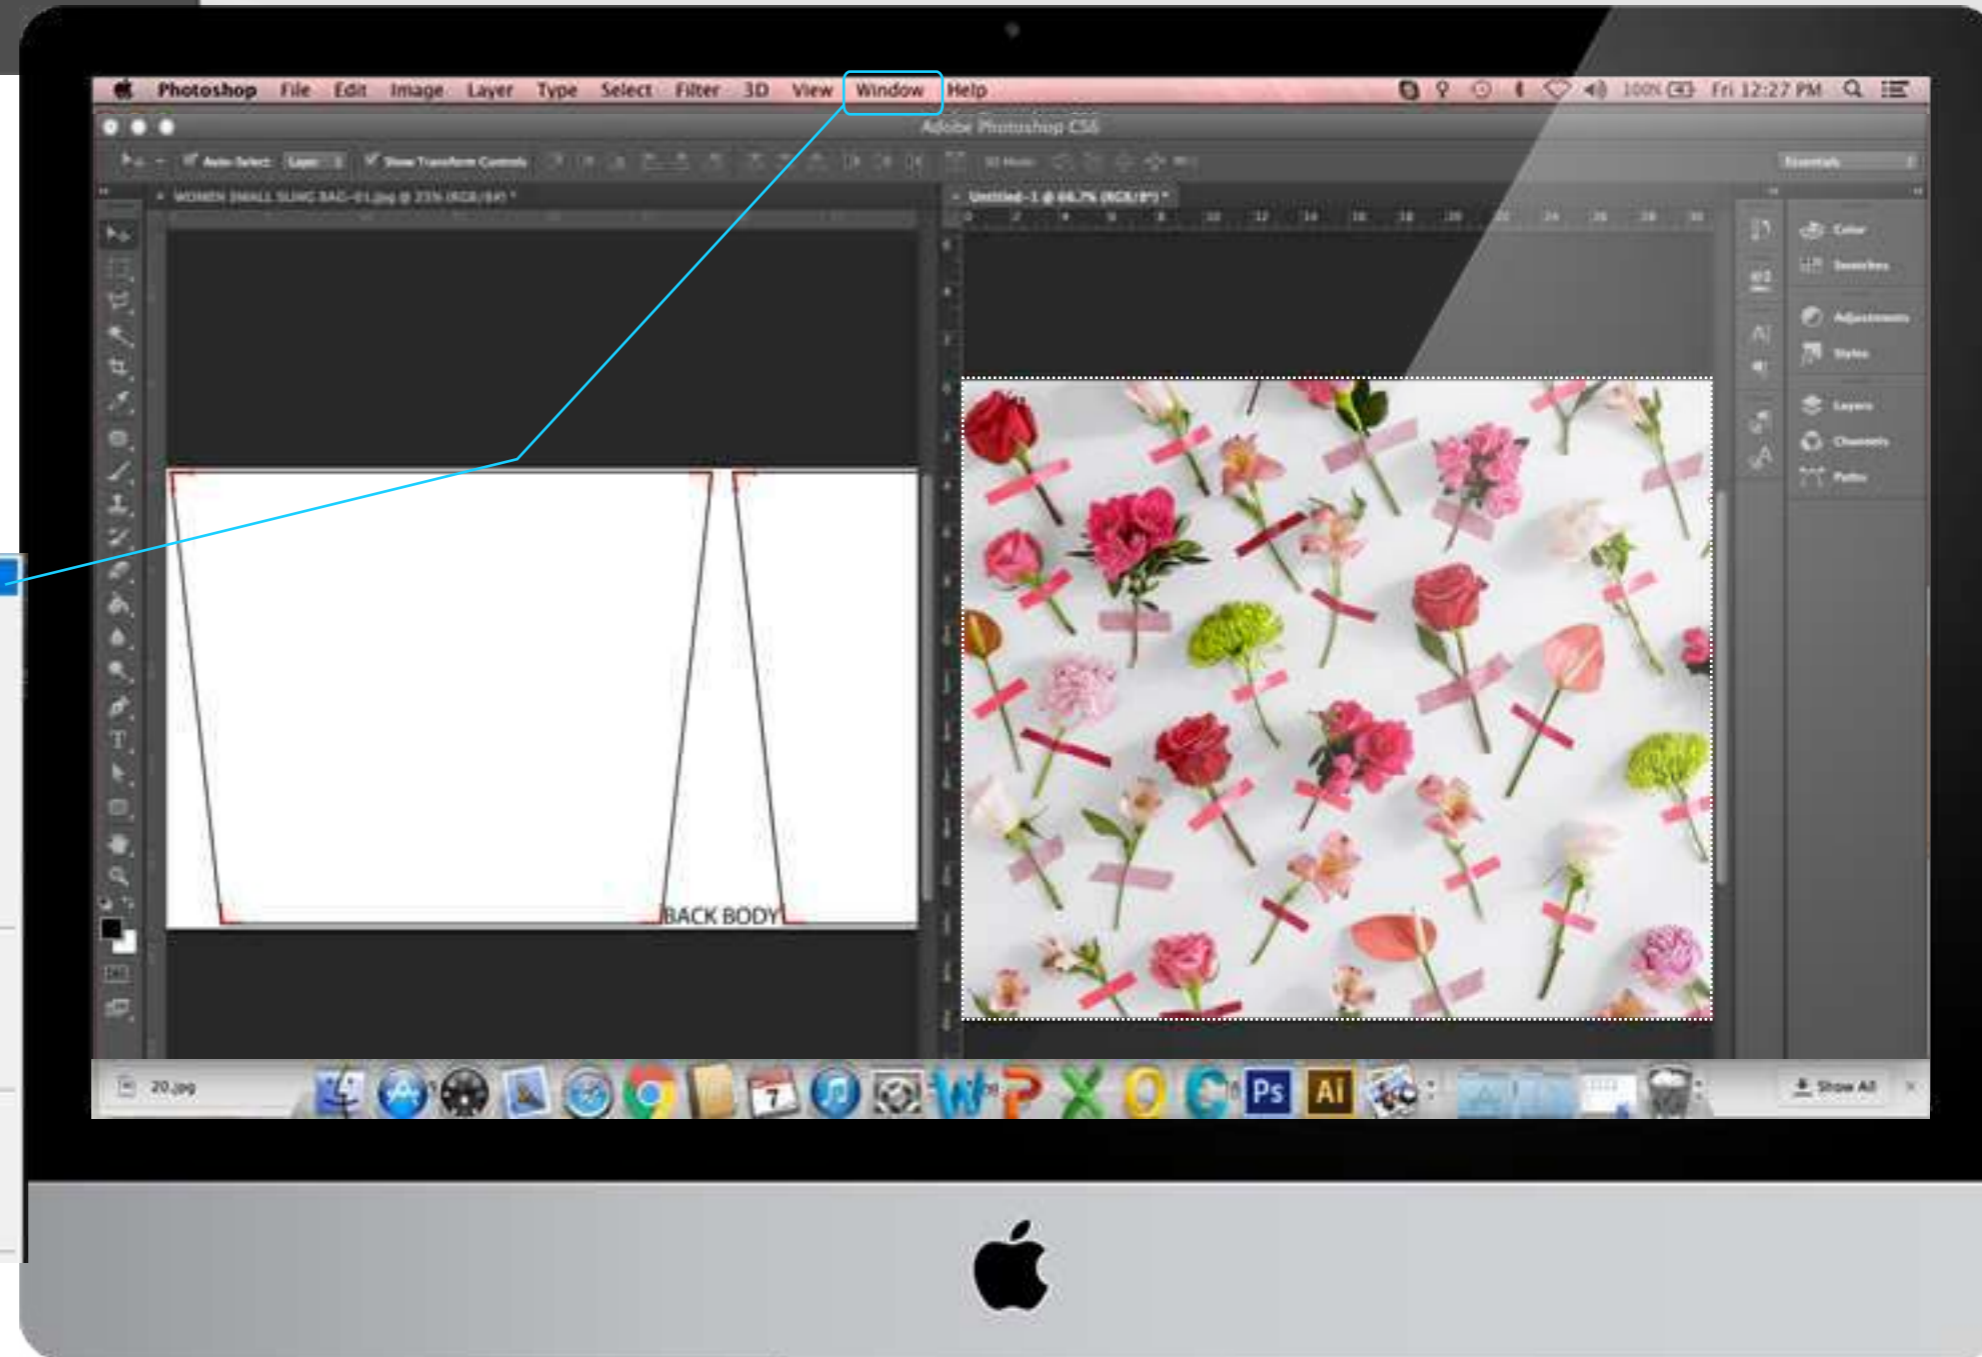

FILLING PATTERN

HOW TO
PUT YOUR DESIGN INTO A FULLPRINT PATTERN

2. From your Design file, go to **Select** menu on menu bar then choose All (**Select > All**)



FILLING PATTERN

HOW TO
PUT YOUR DESIGN INTO A FULLPRINT PATTERN

3. Goto **Edit** than **Copy** (**Edit > Copy**)

| | |
|--------------------------|------------------|
| Undo Copy Pixels | Ctrl+Z |
| Step Forward | Shift+Ctrl+Z |
| Step Backward | Alt+Ctrl+Z |
| Fade... | Shift+Ctrl+F |
| Cut | Ctrl+X |
| Copy | Ctrl+C |
| Copy Merged | Shift+Ctrl+C |
| Paste | Ctrl+V |
| Paste Special | |
| Clear | |
| Check Spelling... | |
| Find and Replace Text... | |
| Fill... | Shift+F5 |
| Stroke... | |
| Content-Aware Scale | Alt+Shift+Ctrl+C |
| Puppet Warp | |
| Free Transform... | Ctrl+T |



FILLING PATTERN

HOW TO PUT YOUR DESIGN INTO A FULLPRINT PATTERN


4. On the pattern file window, use the **Magic Wand Tool** (at tool bar on the left side) then left-click inside the part you want to work with



FILLING PATTERN

HOW TO PUT YOUR DESIGN INTO A FULLPRINT PATTERN

5. Go to **Edit** from menu bar then select **Paste Special** and **Paste Into** (**Edit > Paste Special > Paste Into**). You may adjust the pasted image by dragging it.

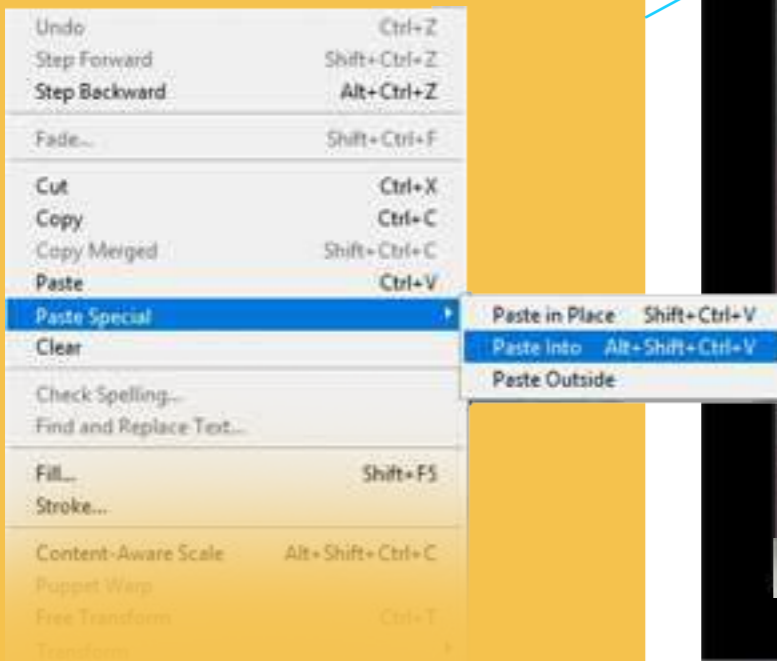

FILLING PATTERN


HOW TO
PUT YOUR DESIGN INTO A FULLPRINT PATTERN

6. Before continue another part you should click **background layer** at layer list.



If layer list did not show you can easily press **F7** button on your keyboard or go to menu bar **Window > Layer**

7. You can repeat selecting part by using **Magic Wand** and after you can **Paste Special** the design until all part filled.

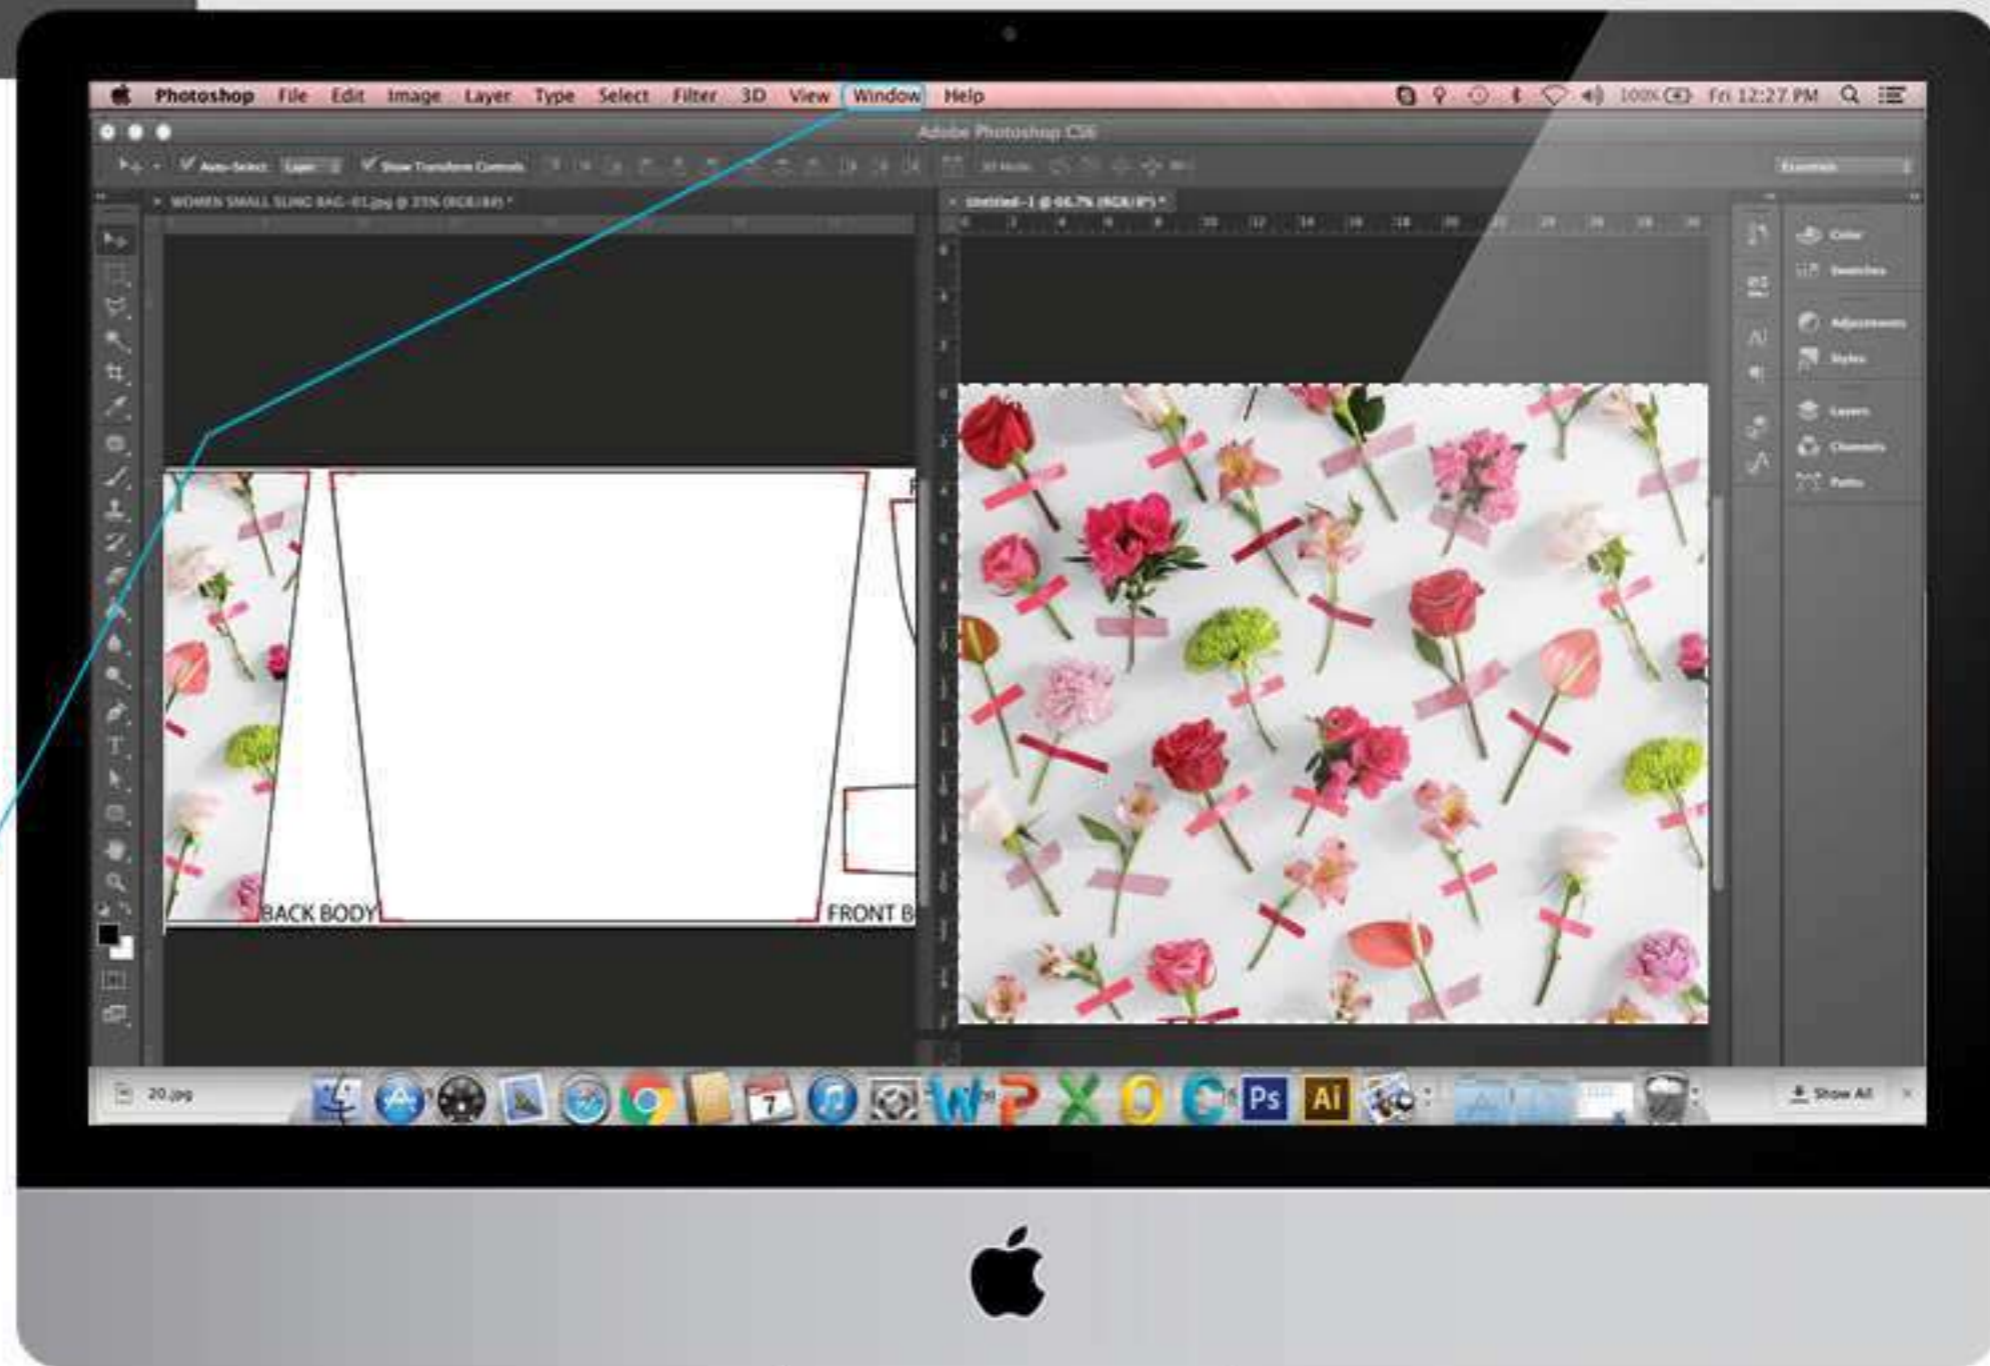

SAVING FILE

HOW TO PUT YOUR DESIGN INTO A FULLPRINT PATTERN

As the final step you can Save your design by clicking from the menu bar **File > Save As**

| | |
|---------------------------|---------------------|
| New... | Ctrl+N |
| Open... | Ctrl+O |
| Browse in Bridge... | Alt+Ctrl+O |
| Browse in Mini Bridge... | |
| Open As... | Alt+Shift+Ctrl+O |
| Open as Smart Object... | |
| Open Recent | |
| | |
| Close | Ctrl+W |
| Close All | Alt+Ctrl+W |
| Close and Go to Bridge... | Shift+Ctrl+W |
| Save | Ctrl+S |
| Save As... | Shift+Ctrl+S |
| Check In... | |
| Save for Web... | Alt+Shift+Ctrl+S |
| Revert | F12 |

For the file type change it to **JPG** format.

NOTE:
Minimum **Quality 8 (High)**
Please **NOT** to change **Image Size**.
Always aware of **Cutting/Sewing Part**.

